List of implemented Guides

Guide No.	Name	Page From	To
02	Customize LCT_2023-10-10.ppt	2	71
03	Lock_LCT_2023-10-10.ppt	72	81
04	Remove_User_Edit_Lock_2023-1010.ppt	82	100

Customising the Tile Screen

Customizing the Tile Screen

The tile screen is the standard work screen on the **LKT - Lions Comfort Tablet.** Initially, the tablet was set up for normal use as a "work tablet". In this process, the tiles are also installed. In a further set-up stage, these tiles are now adapted to create the LKT a tablet of your choice. This is done in six steps:

1. Deleting the tiles that call up unwanted programmes, e.g. NDR.
2. Setting up already installed programmes (apps) as tiles.
3. Install new programmes from the Play Store and set them up as tiles.
4. Formatting the tiles and the tile field.
5. Move tiles to sort them.
6. Customizing the tile field display: Picture, font.
7. Enter personal data in the corresponding programmes (apps), see **instructions for personalizing**. (This entry should only be made by a trusted person, together with the owner / user of the tablet).

Let us connect you

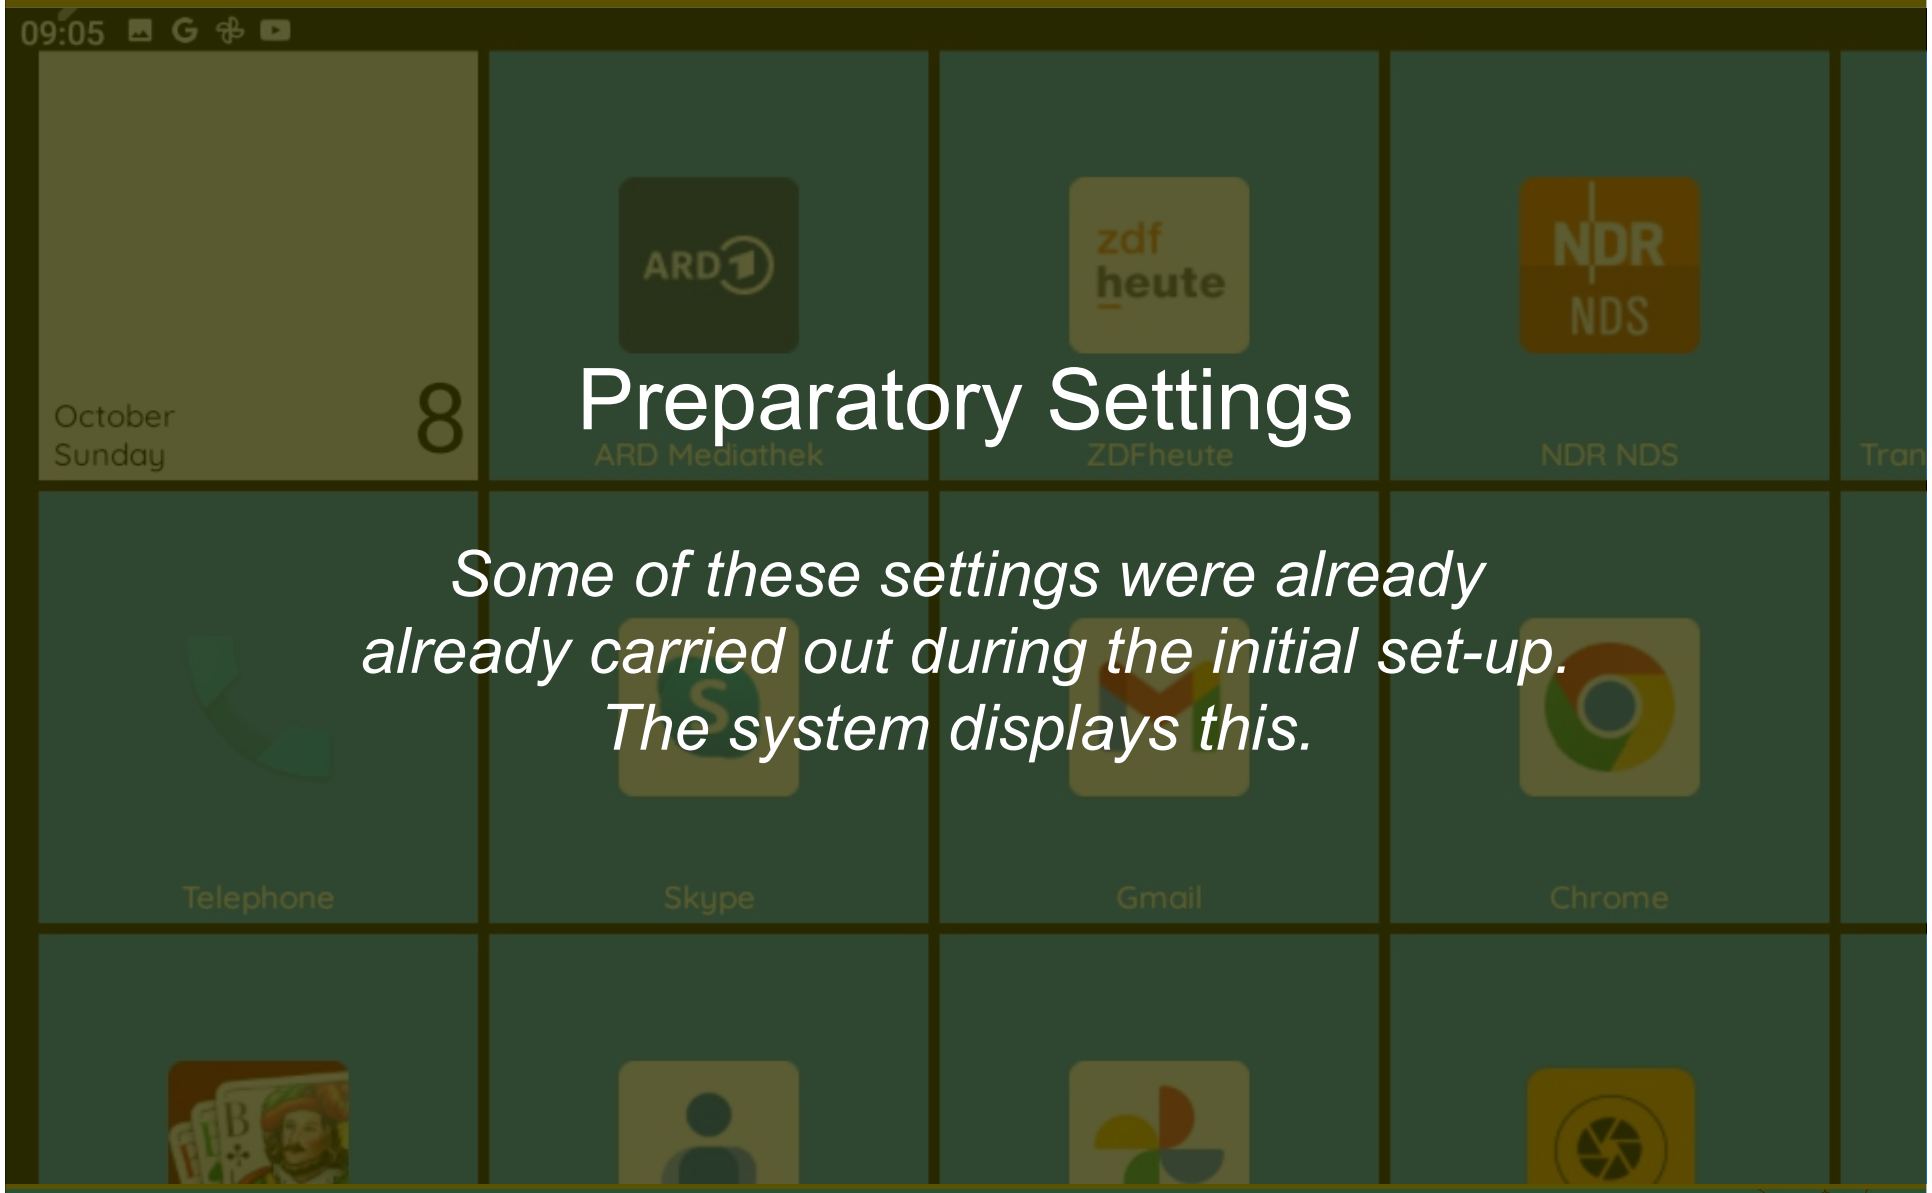

Preparatory Settings

Some of these settings were already
already carried out during the initial set-up.
The system displays this.

Let us connect you

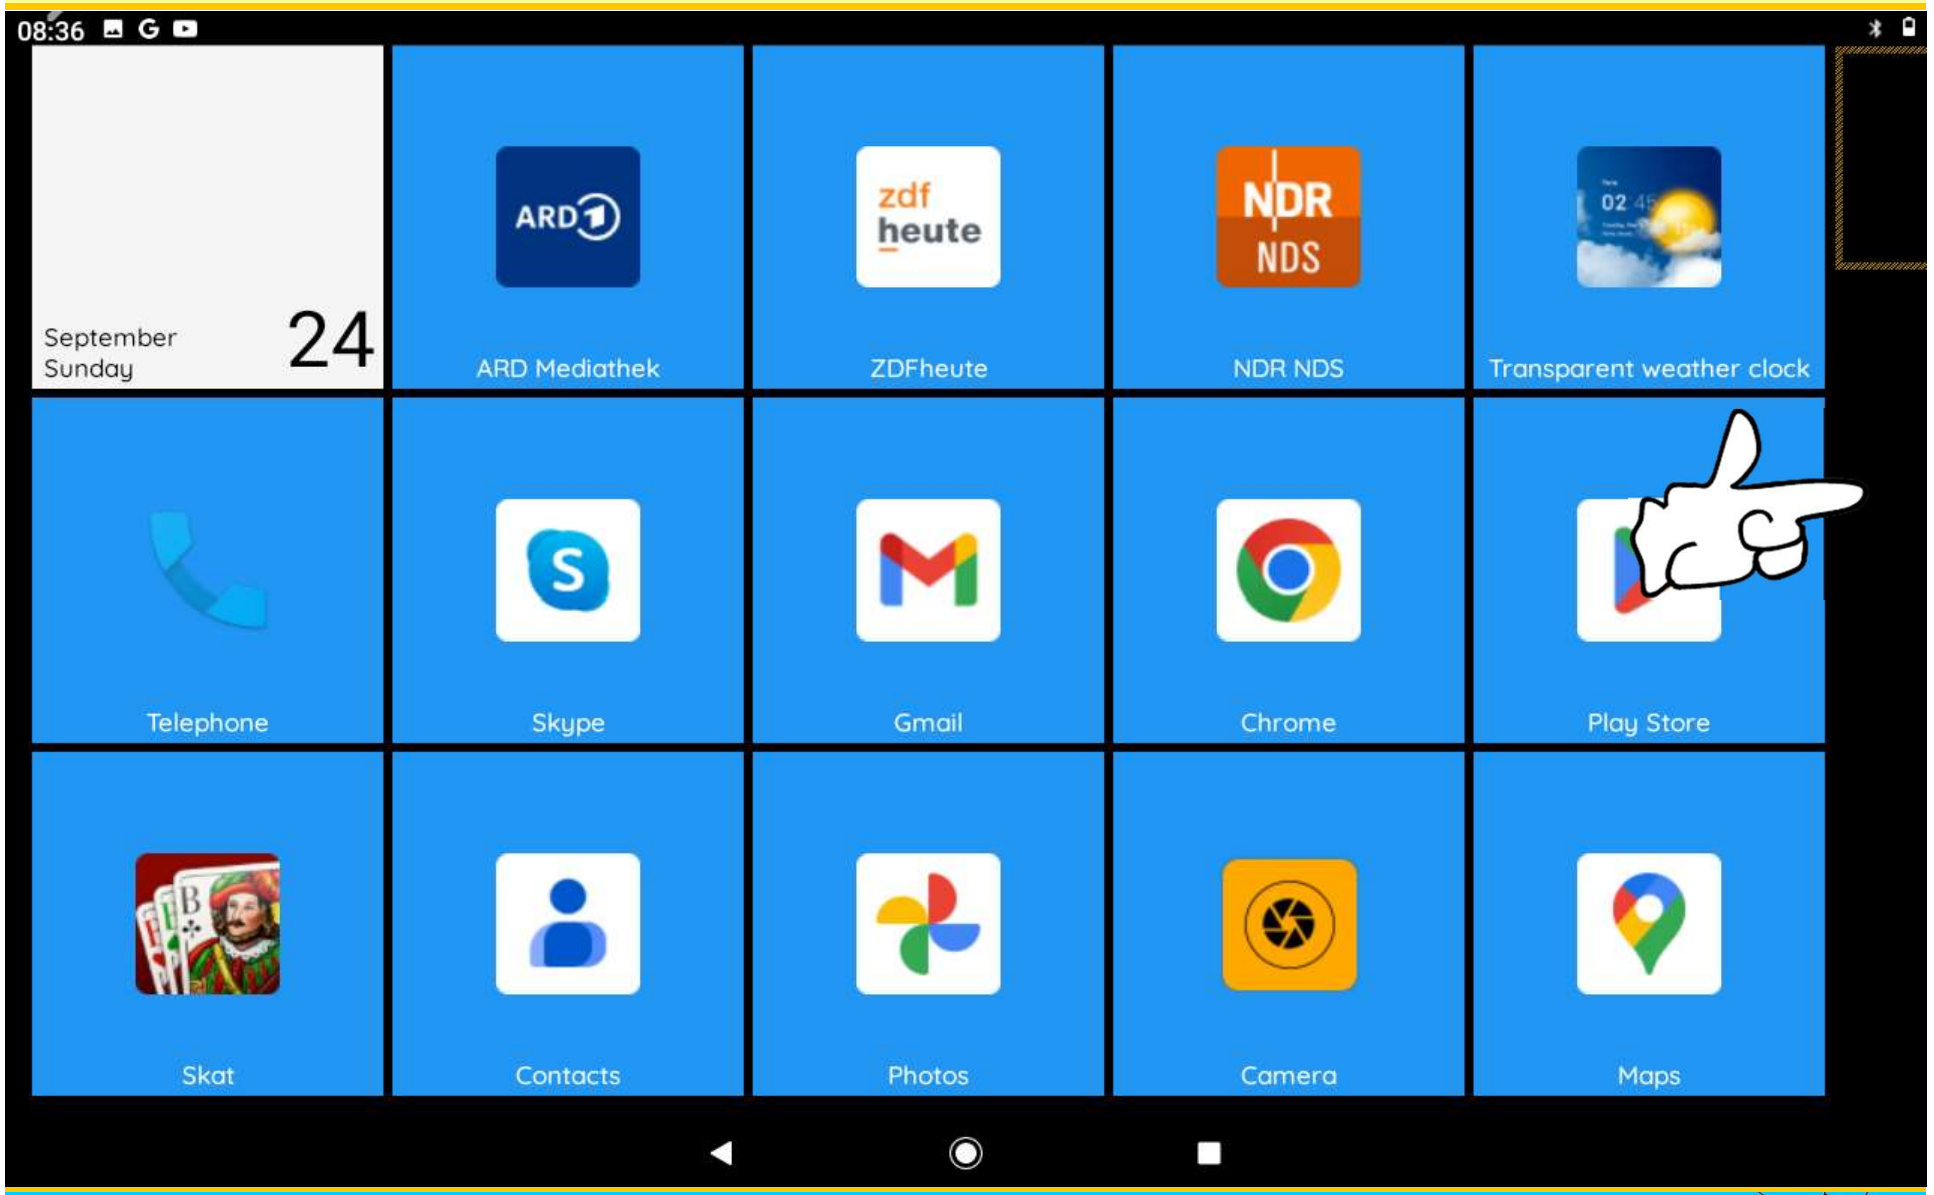

Let us connect you

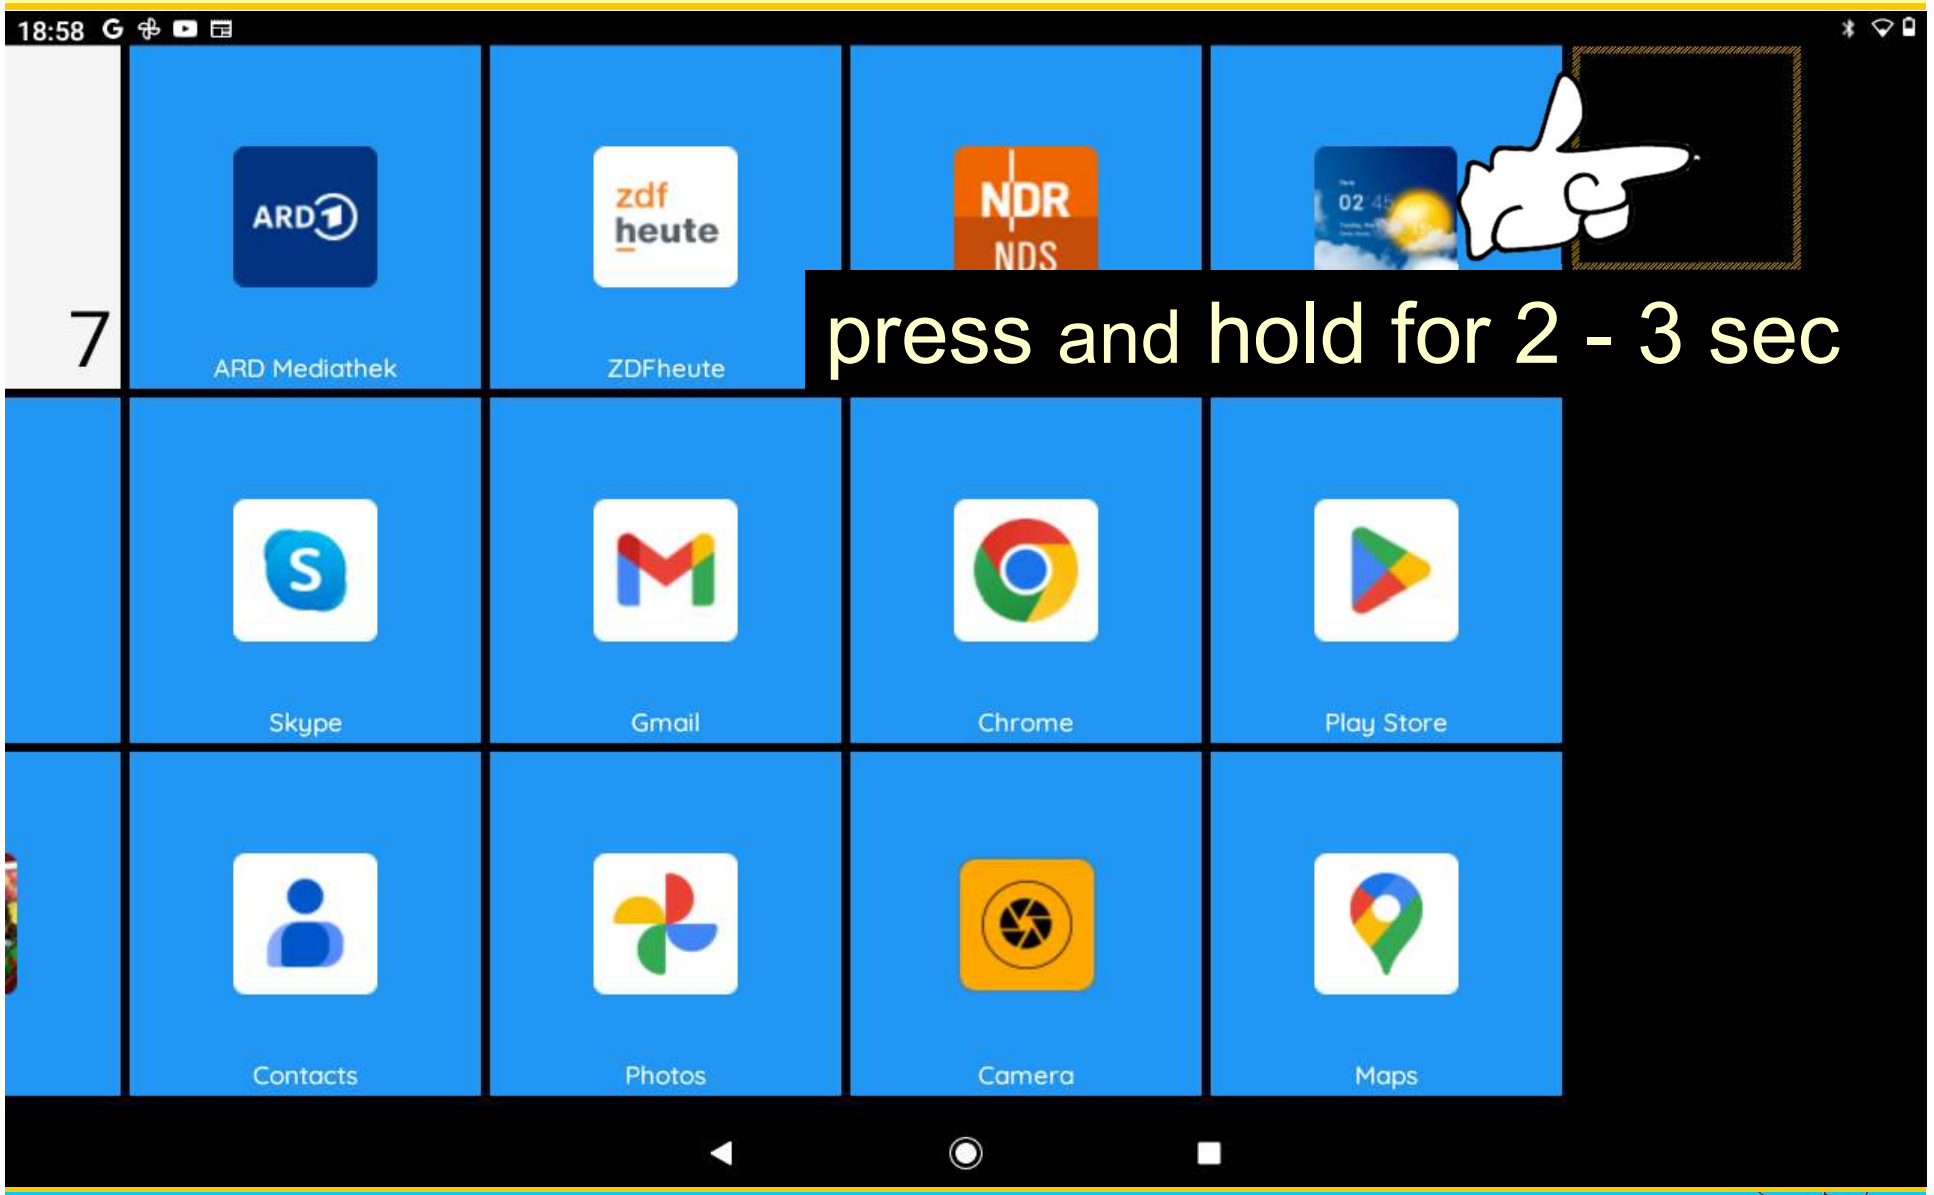

Let us connect you

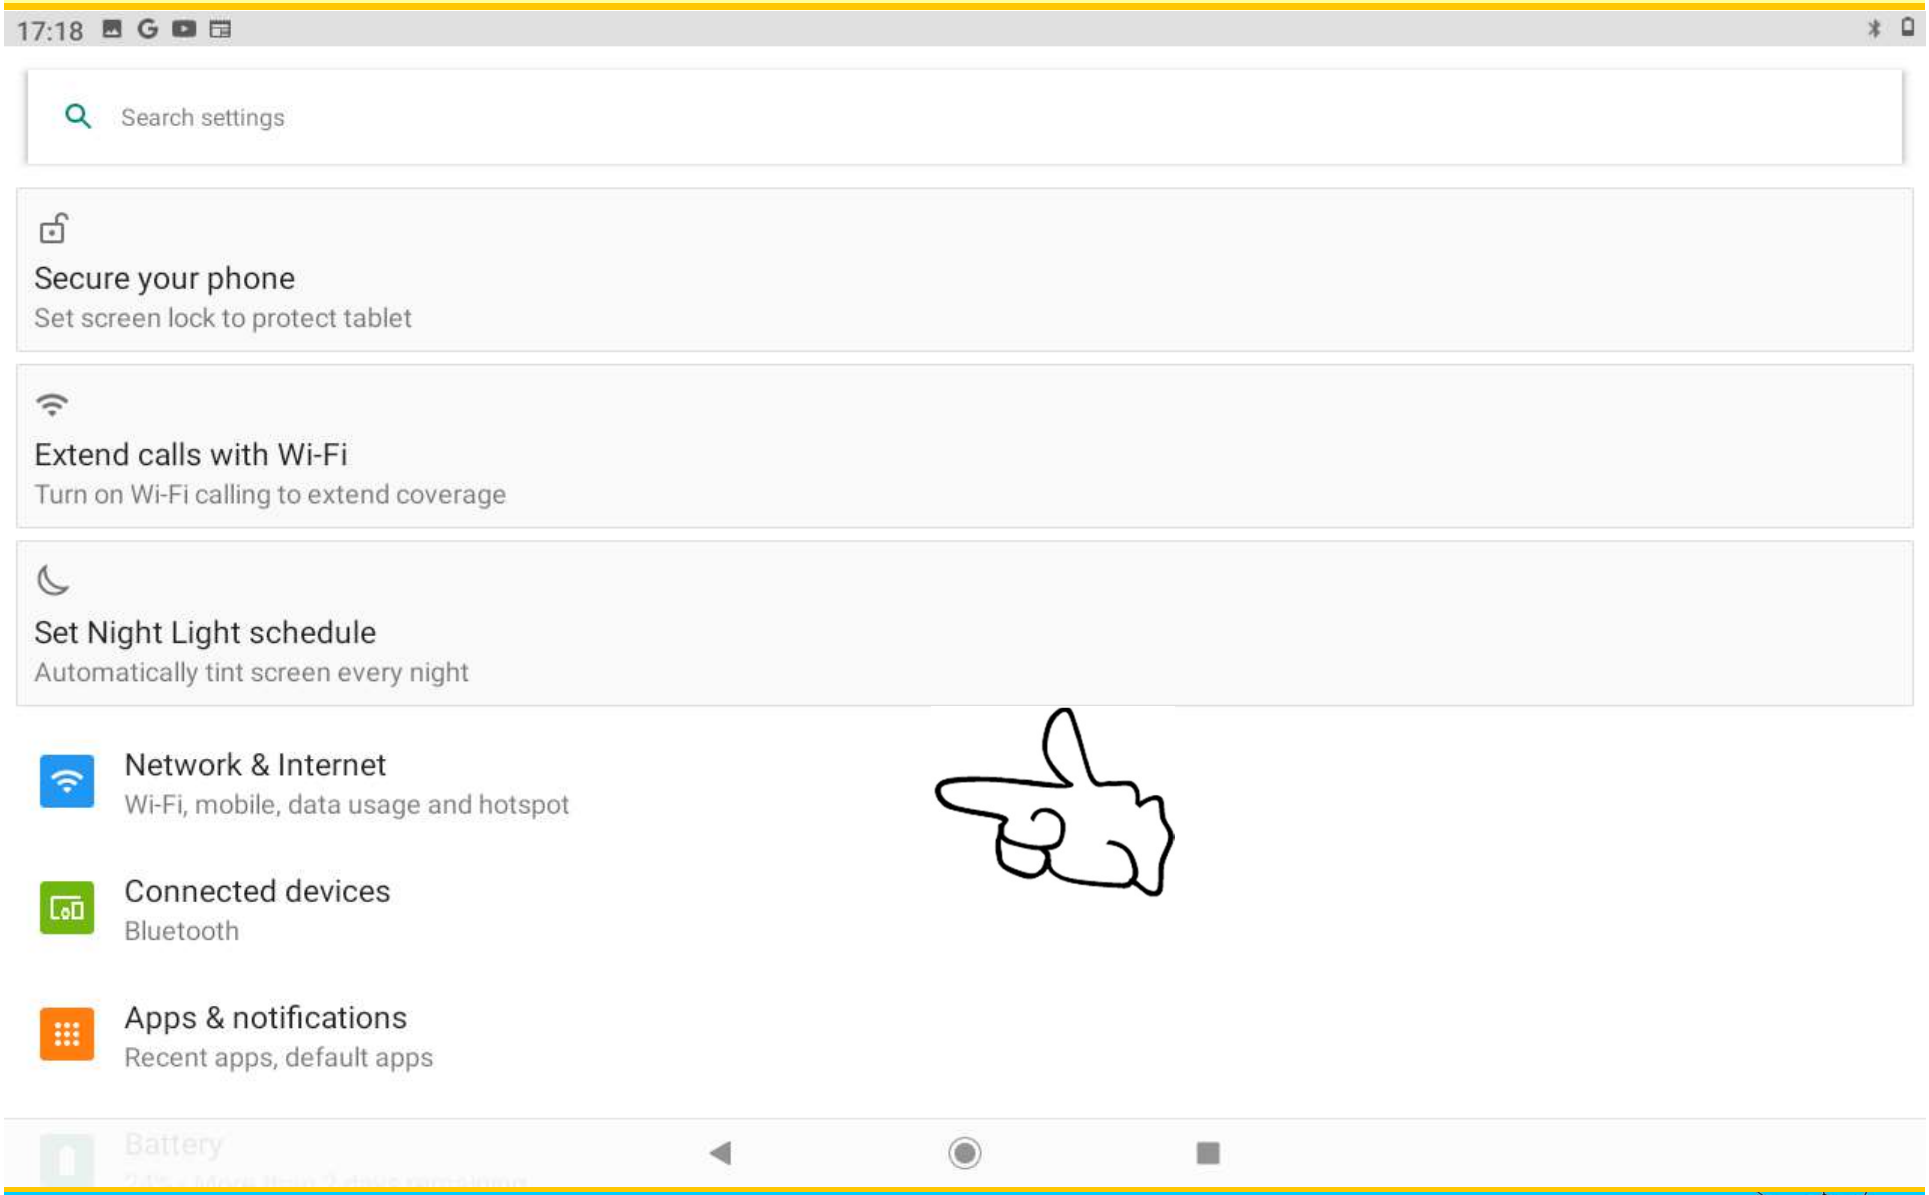

Let us connect you

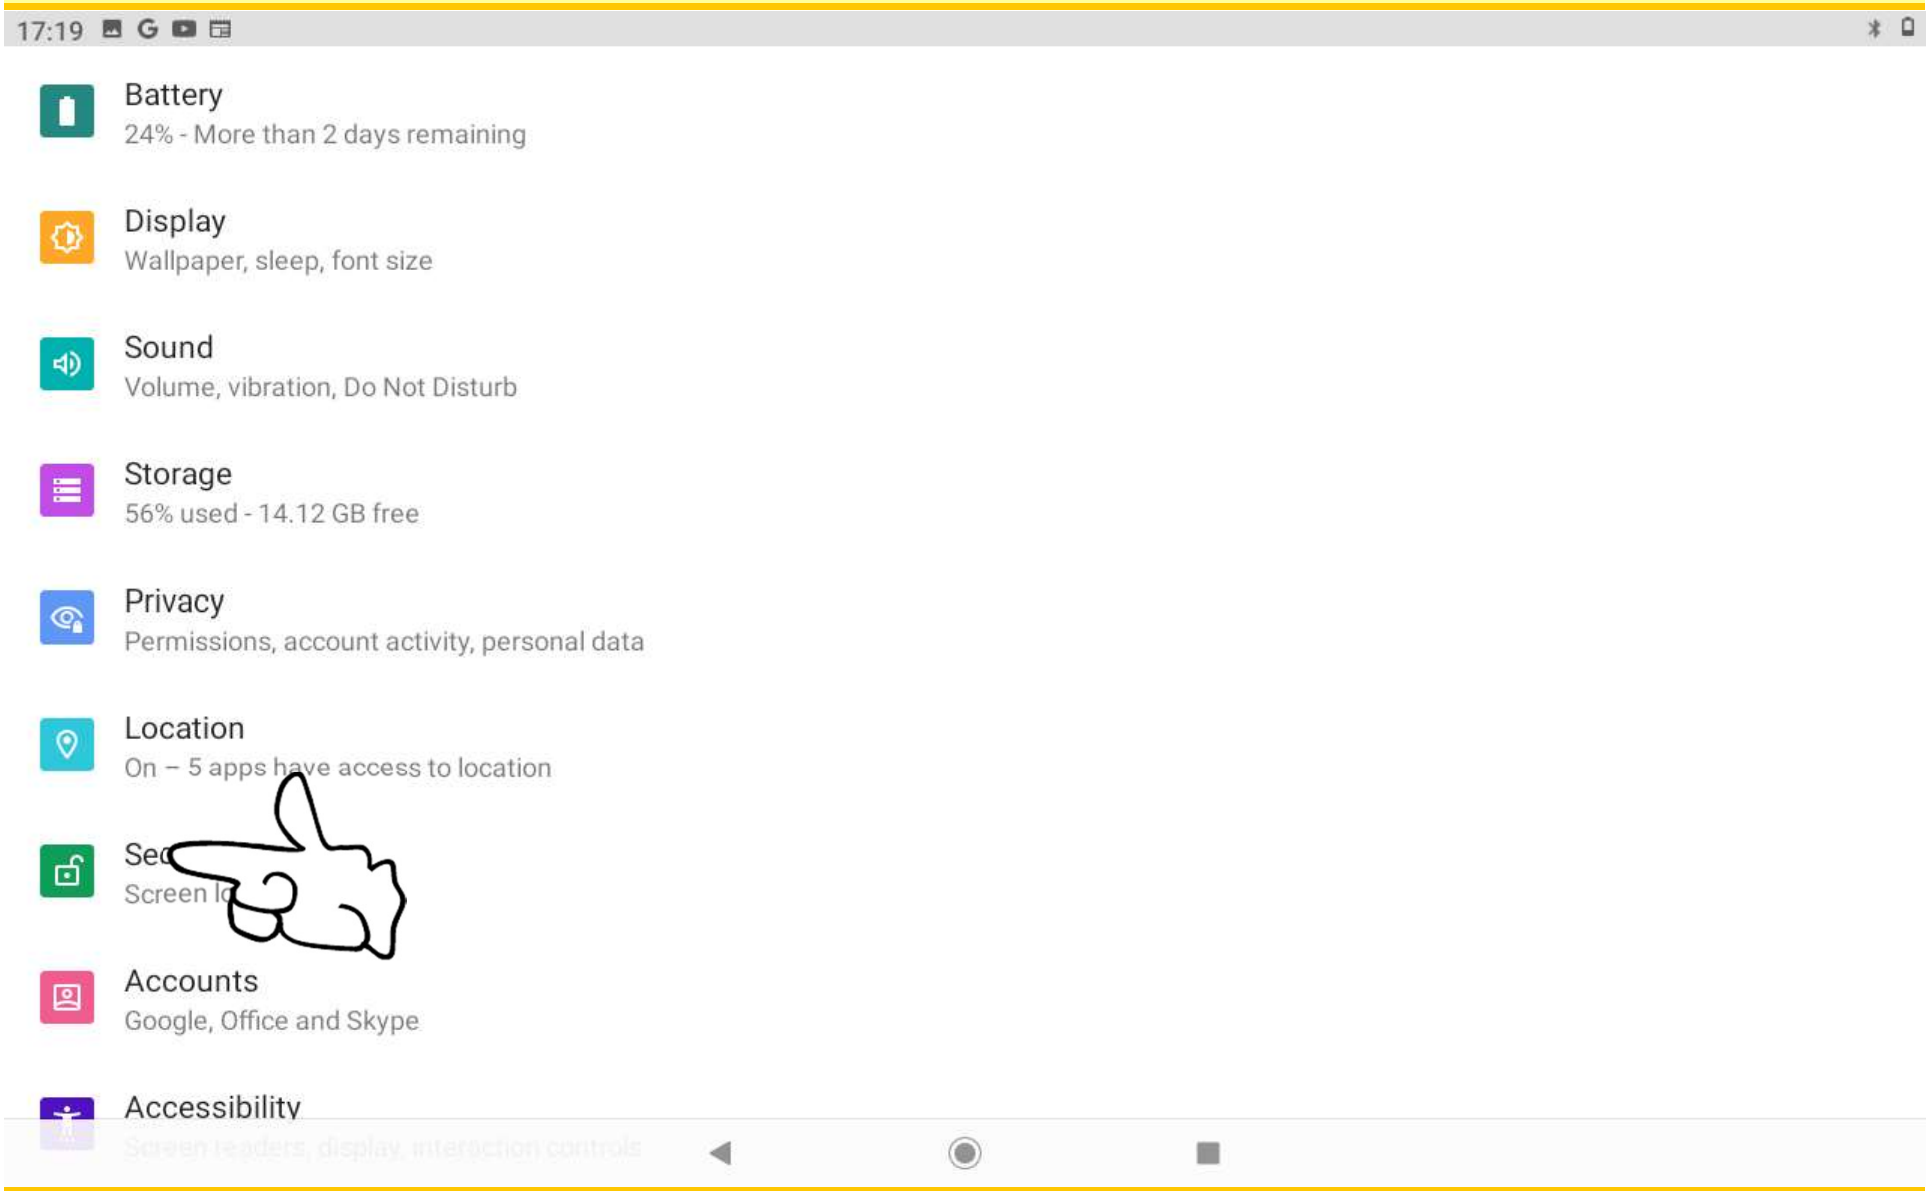

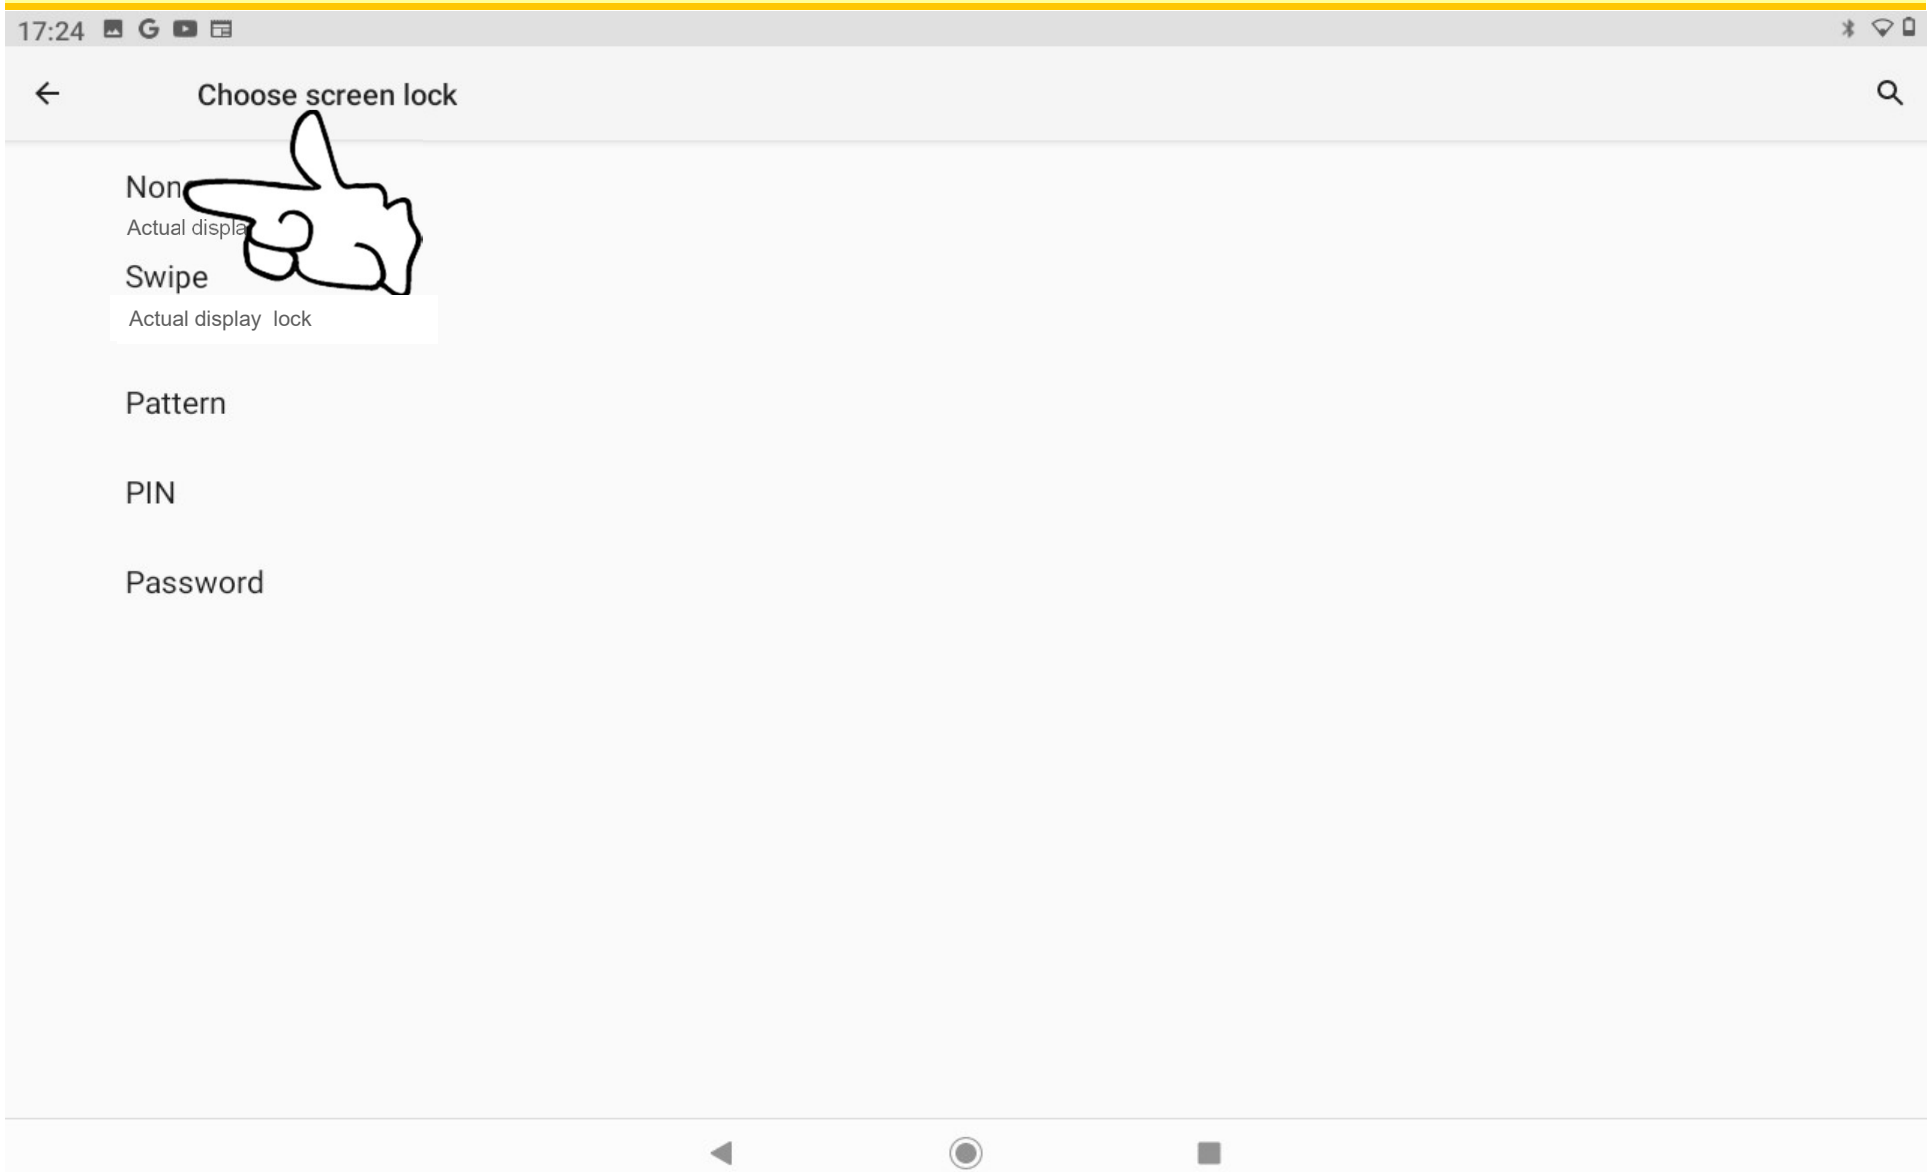
17:24
Choose screen lock
Non
Actual displa
Swipe
Actual display lock
Pattern
PIN
Password

Let us connect you

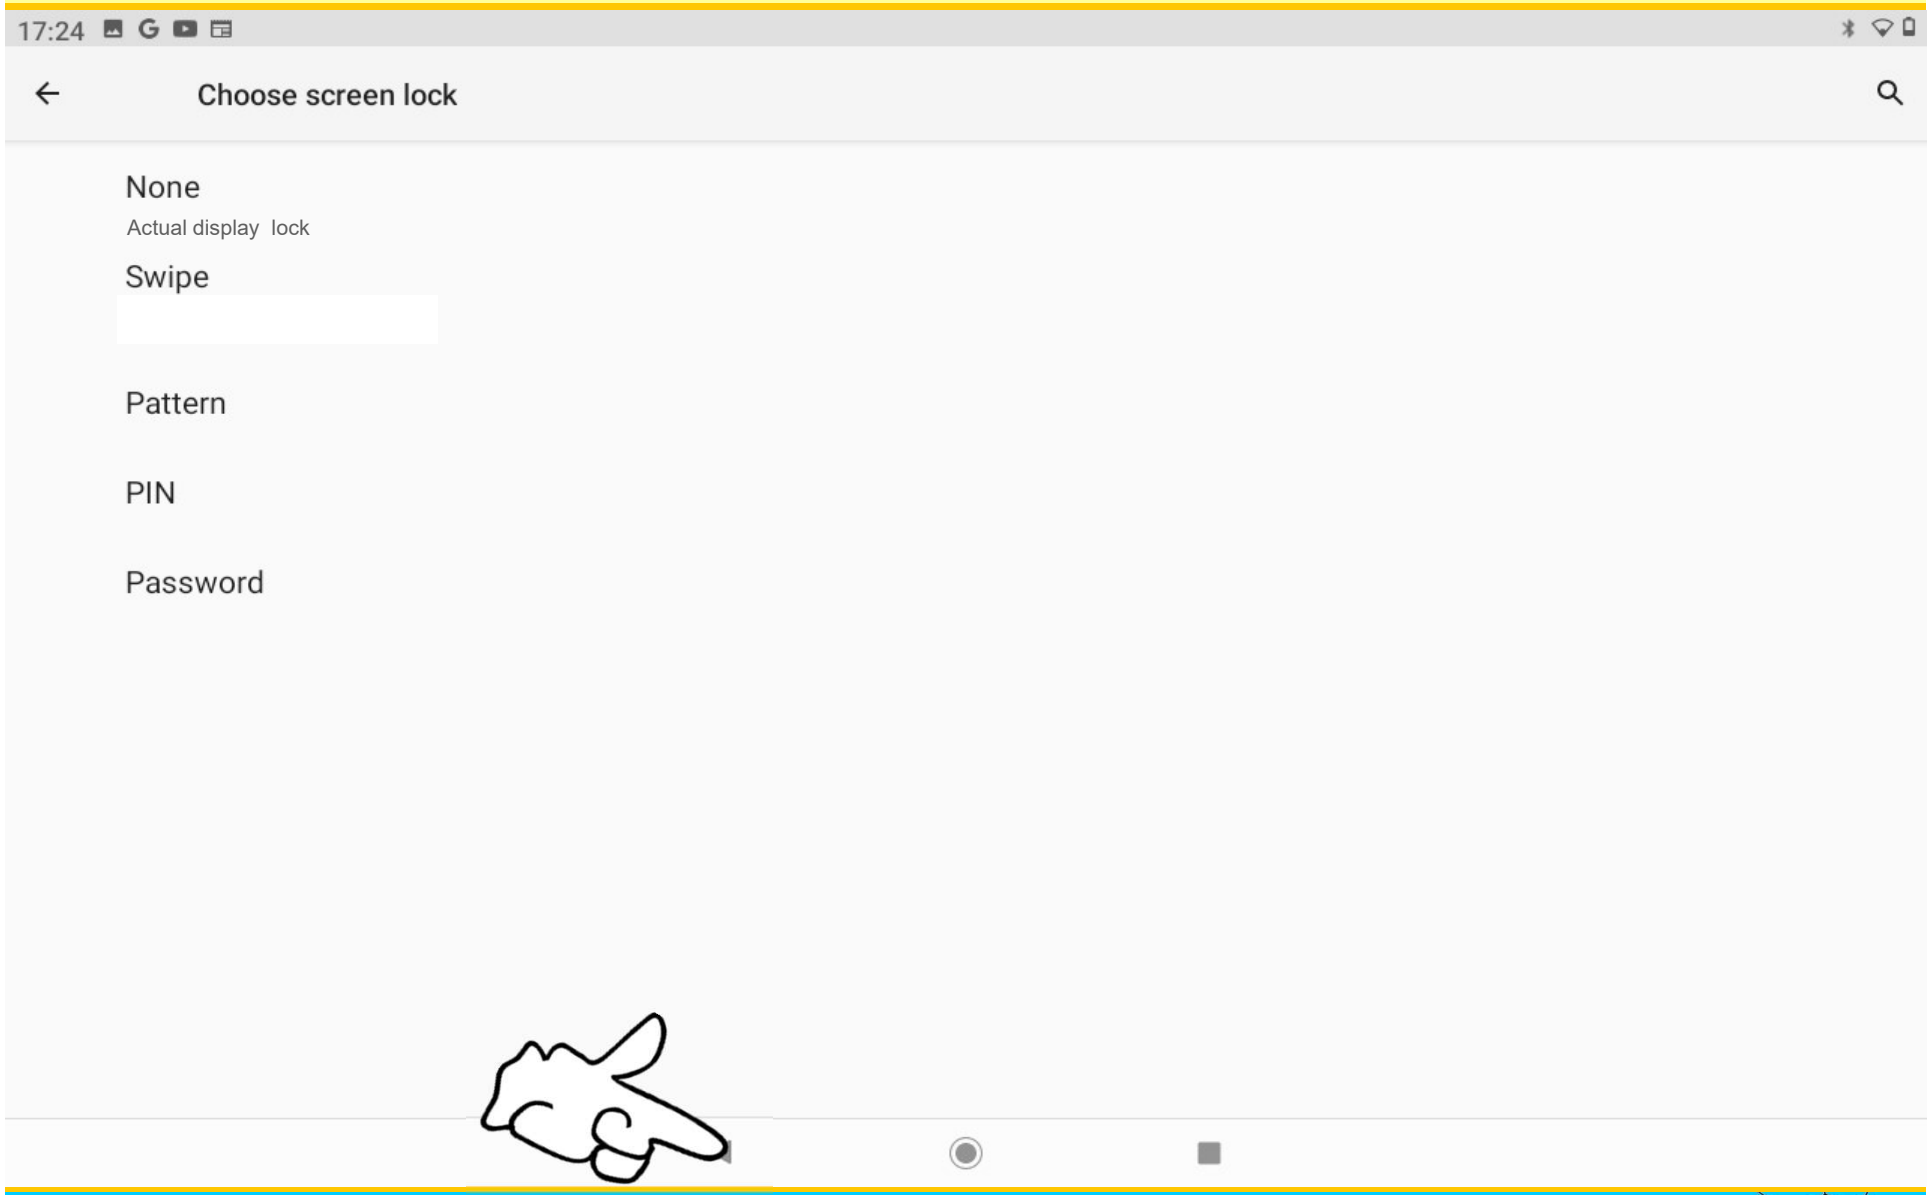

Let us connect you

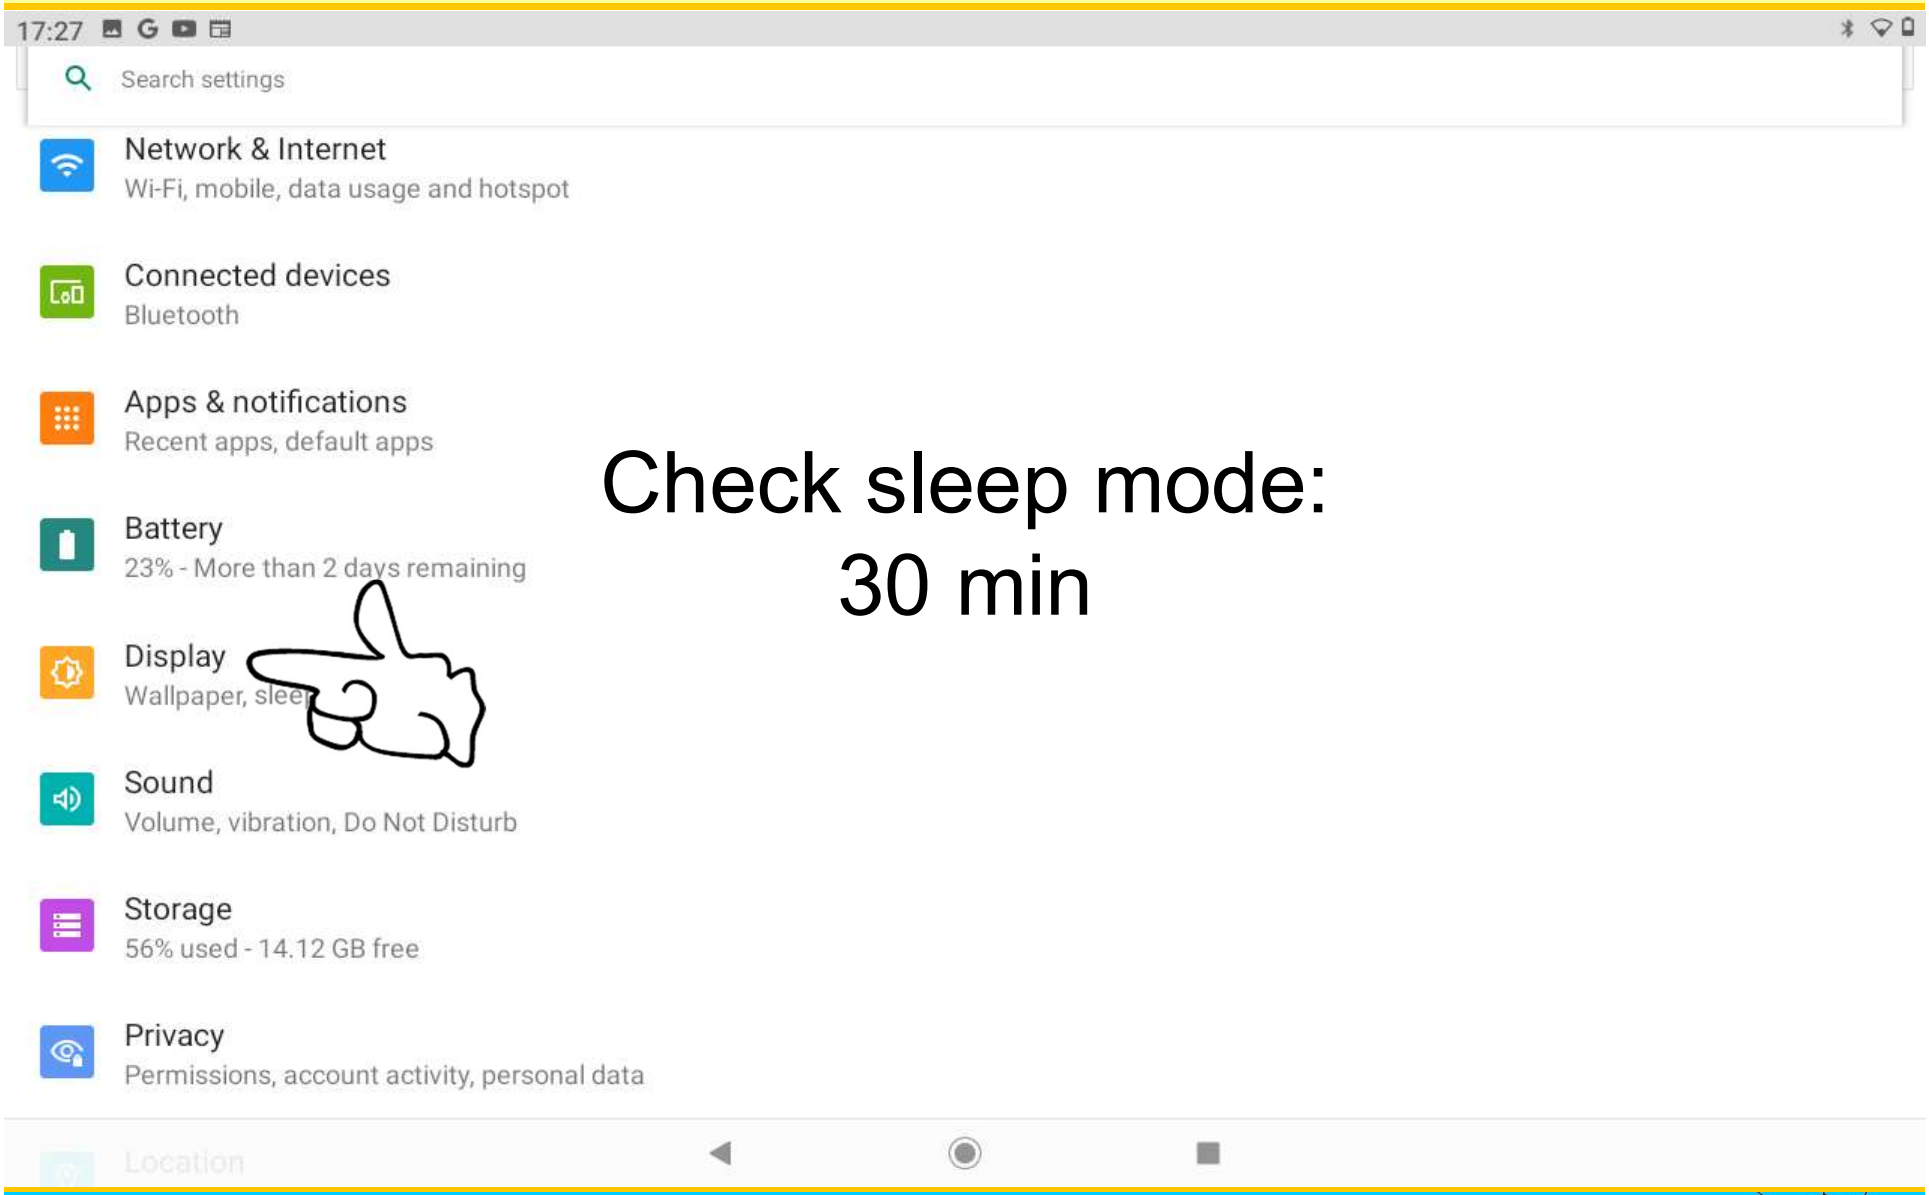

Check sleep mode:
30 min

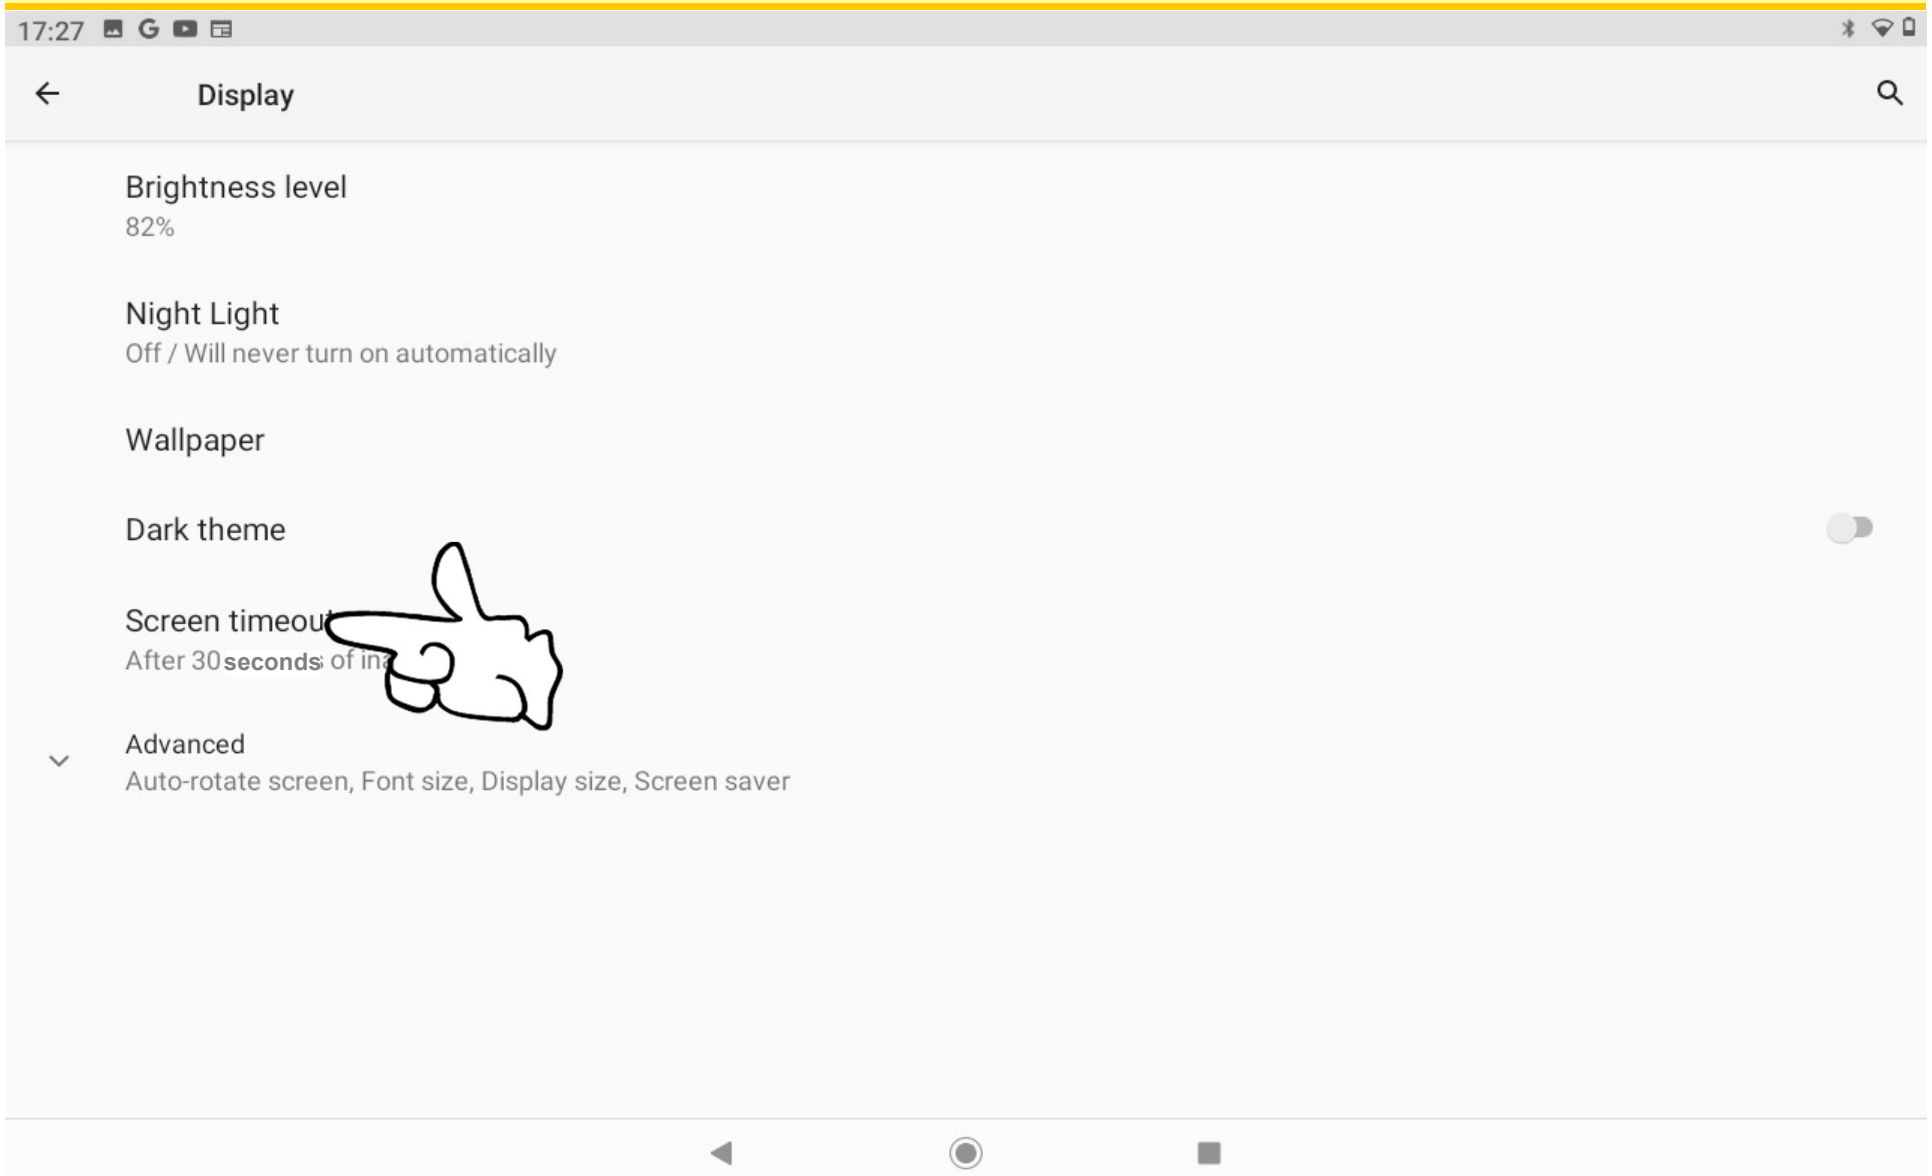
17:27
Display
Brightness level
82%
Night Light
Off / Will never turn on automatically
Wallpaper
Dark theme
Screen timeout
After 30 seconds of in
Advanced
Auto-rotate screen, Font size, Display size, Screen saver

Let us connect you

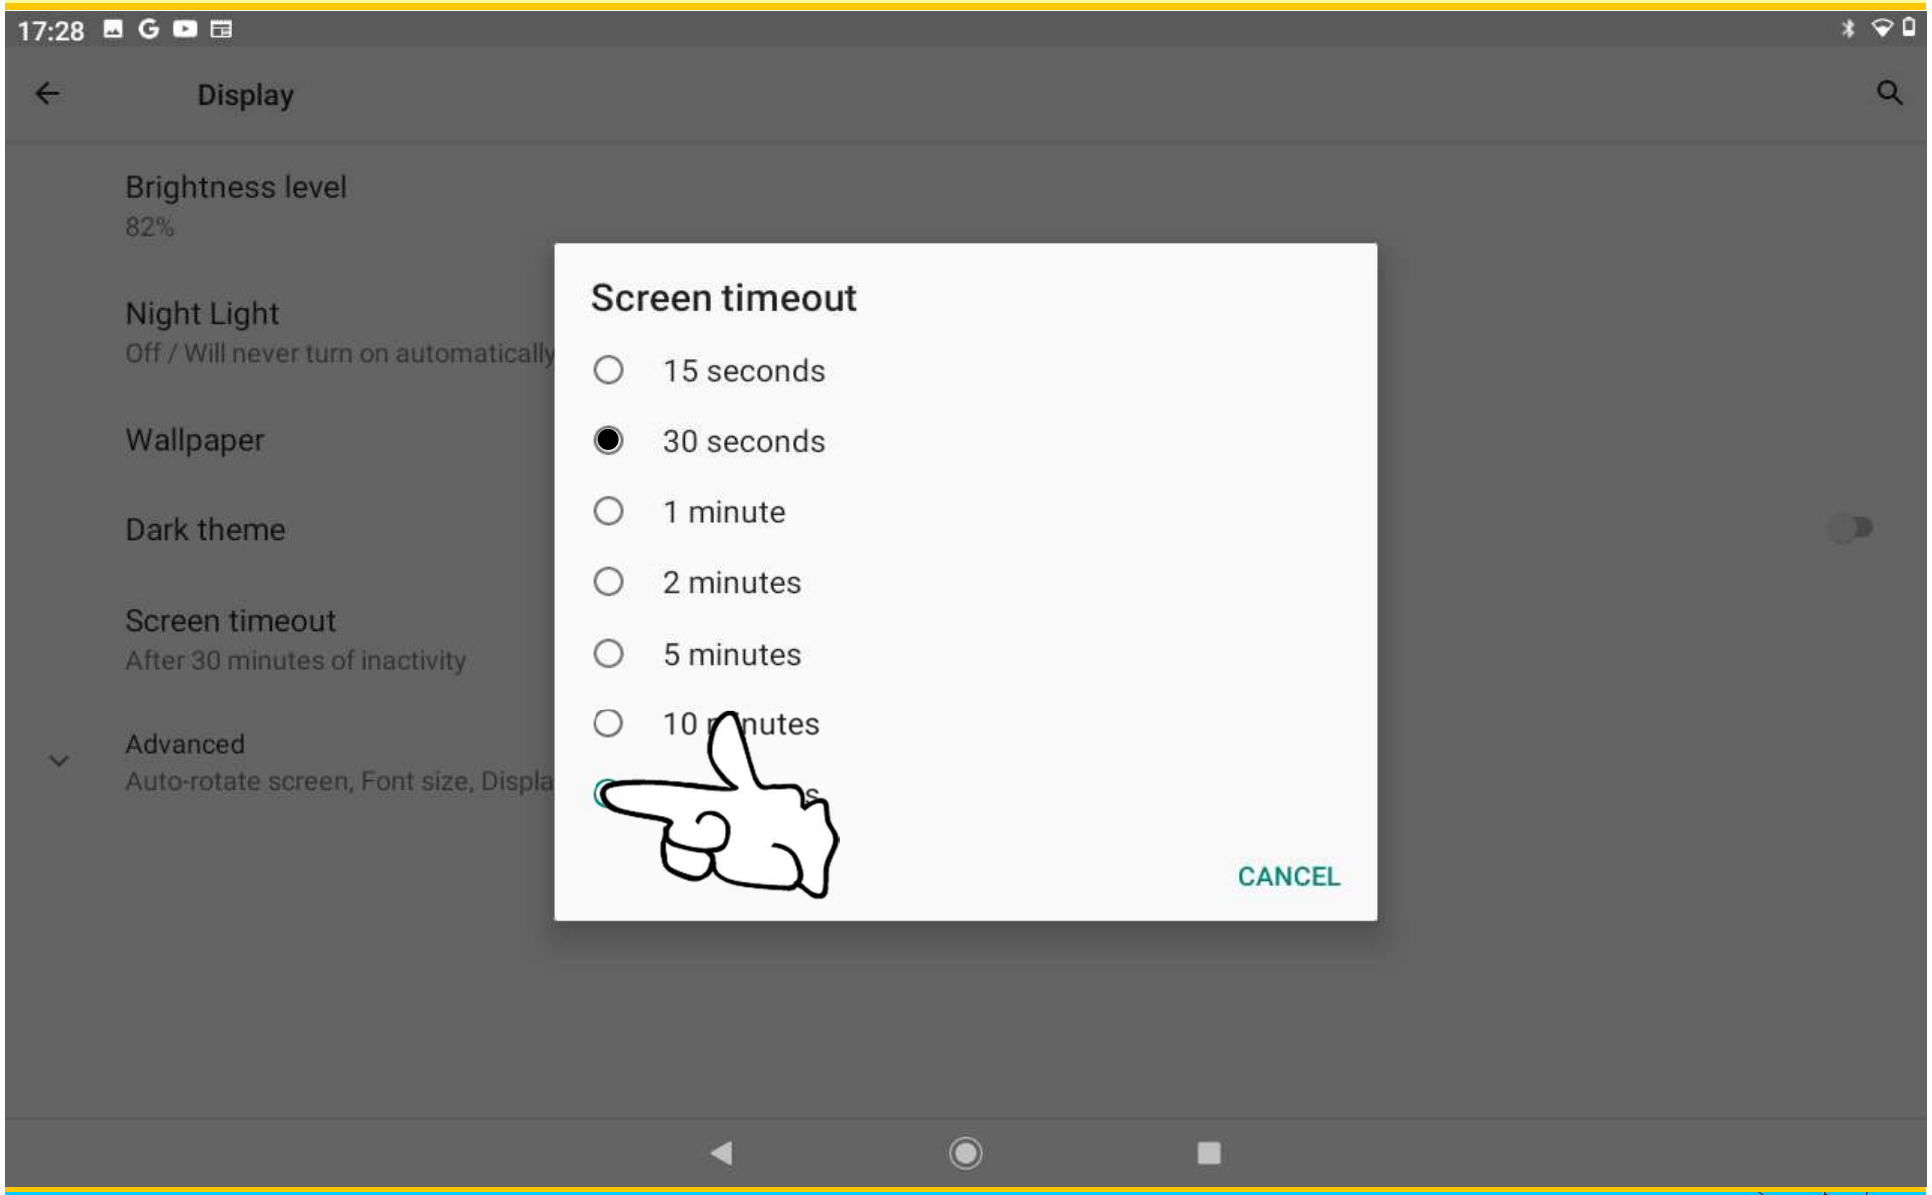

Let us connect you

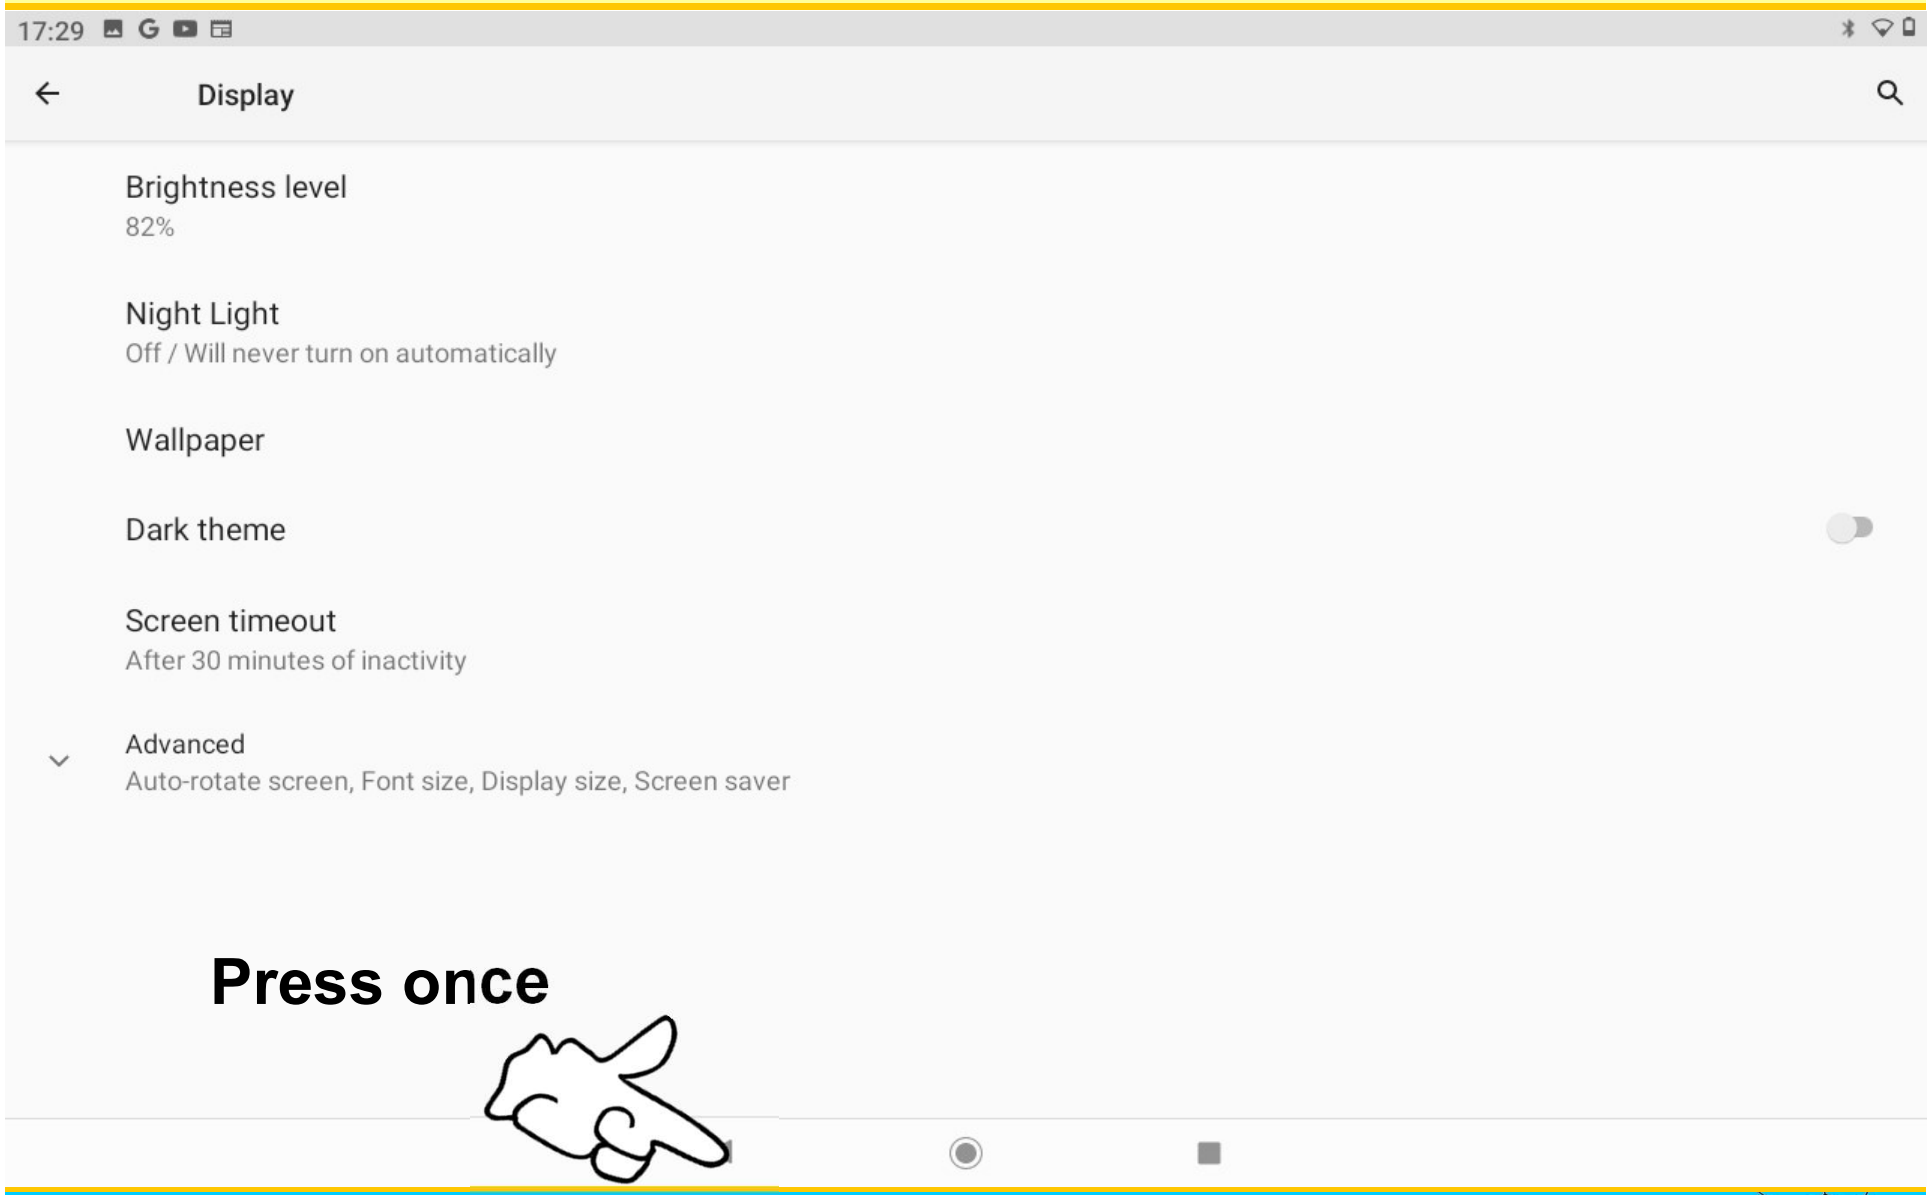

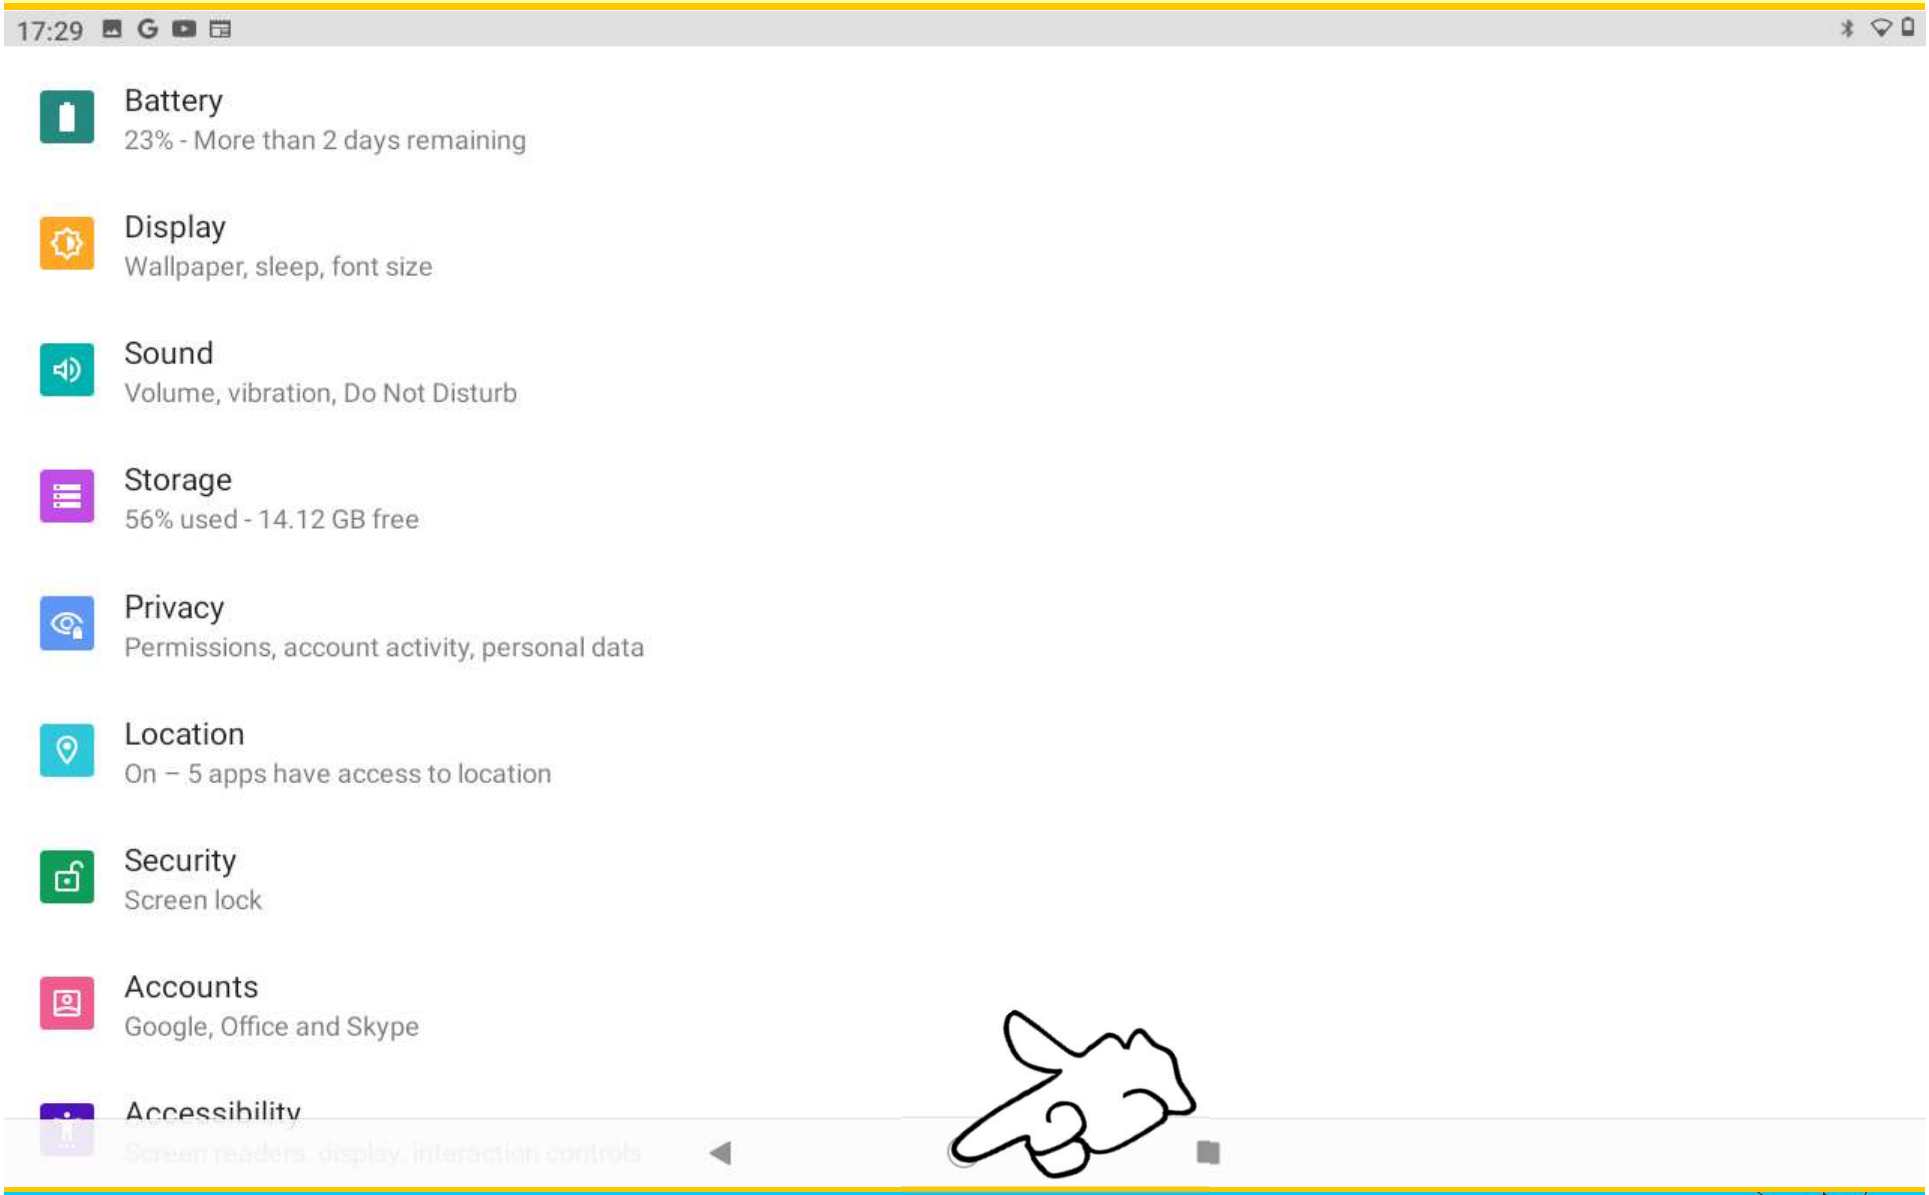
17:29
Battery
23% - More than 2 days remaining
Display
Wallpaper, sleep, font size
Sound
Volume, vibration, Do Not Disturb
Storage
56% used - 14.12 GB free
Privacy
Permissions, account activity, personal data
Location
On – 5 apps have access to location
Security
Screen lock
Accounts
Google, Office and Skype
Accessibility

Let us connect you

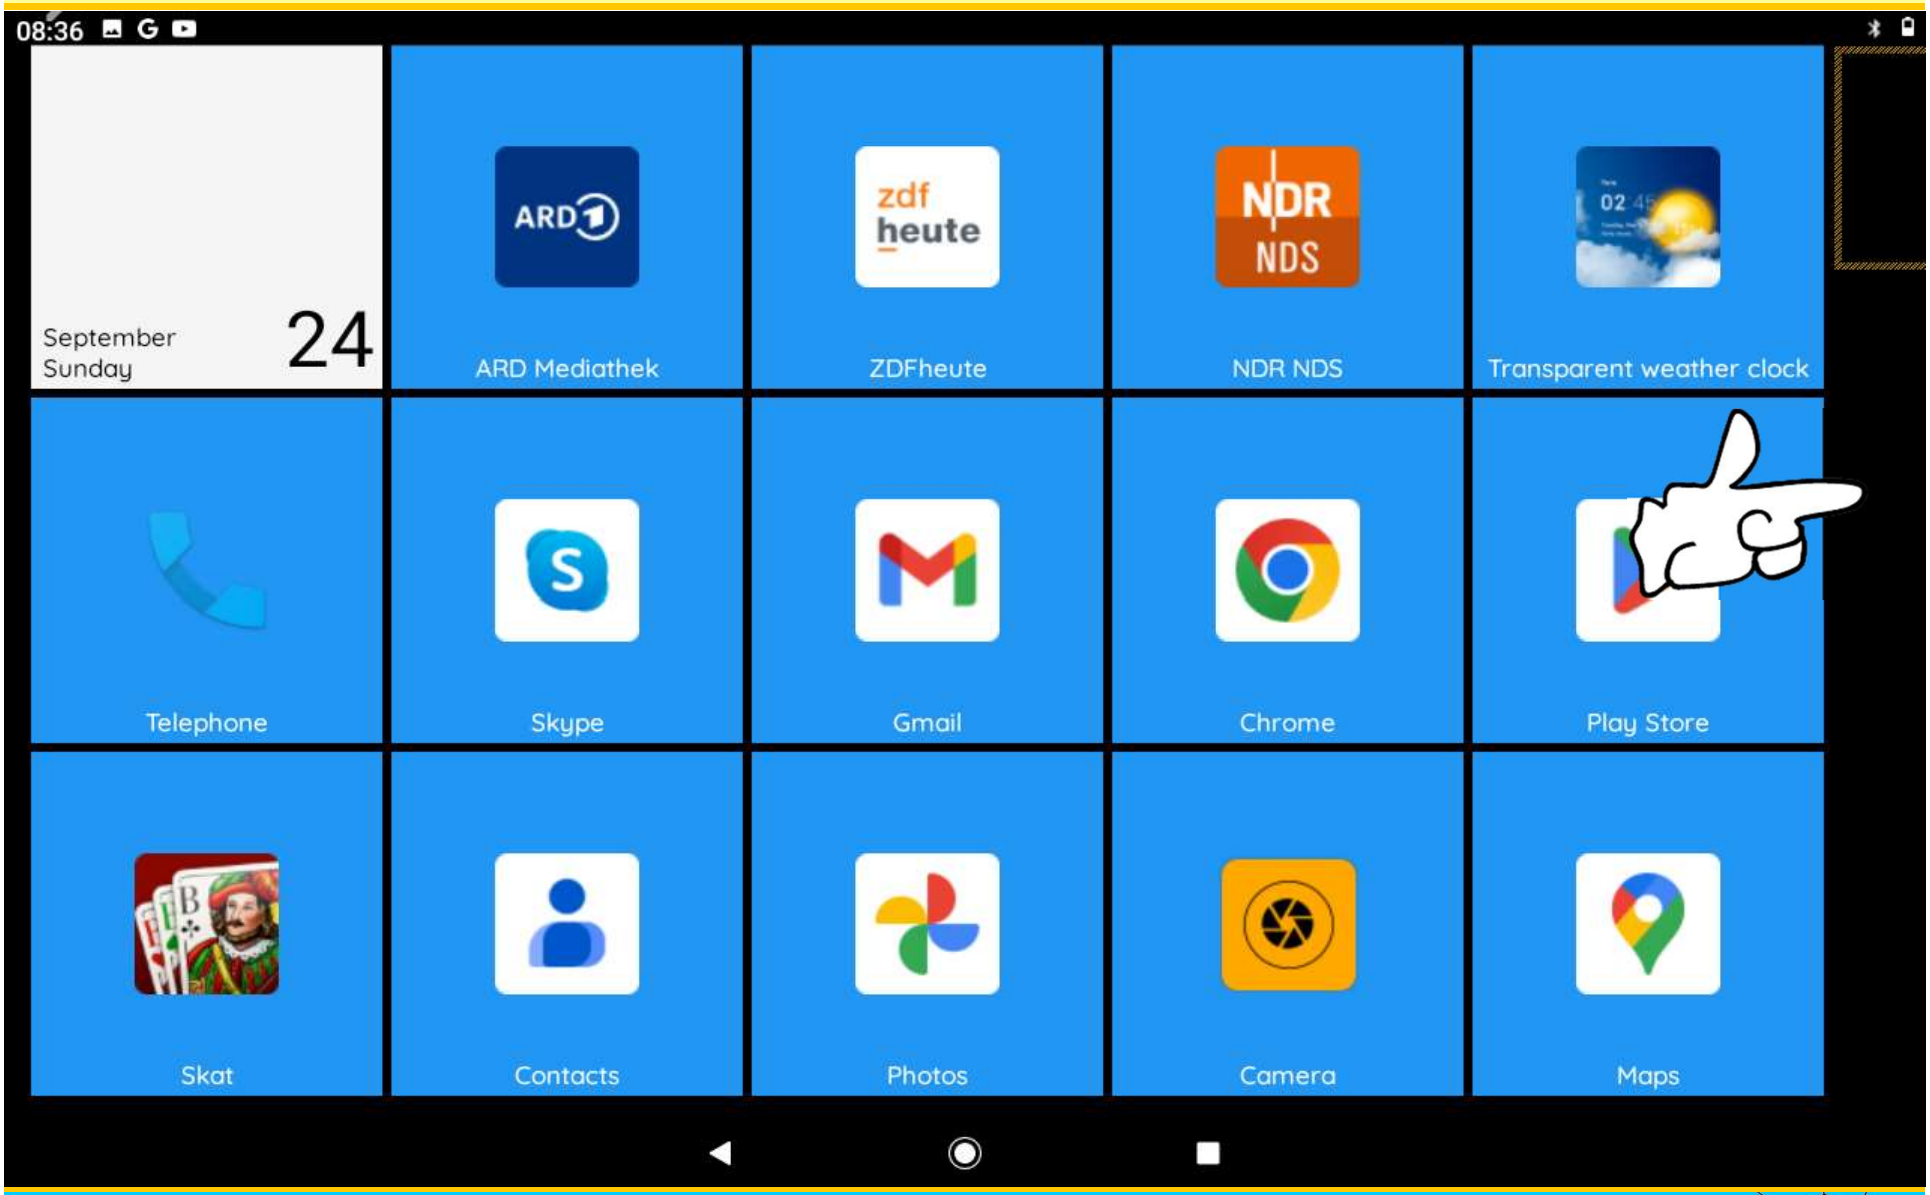

Let us connect you

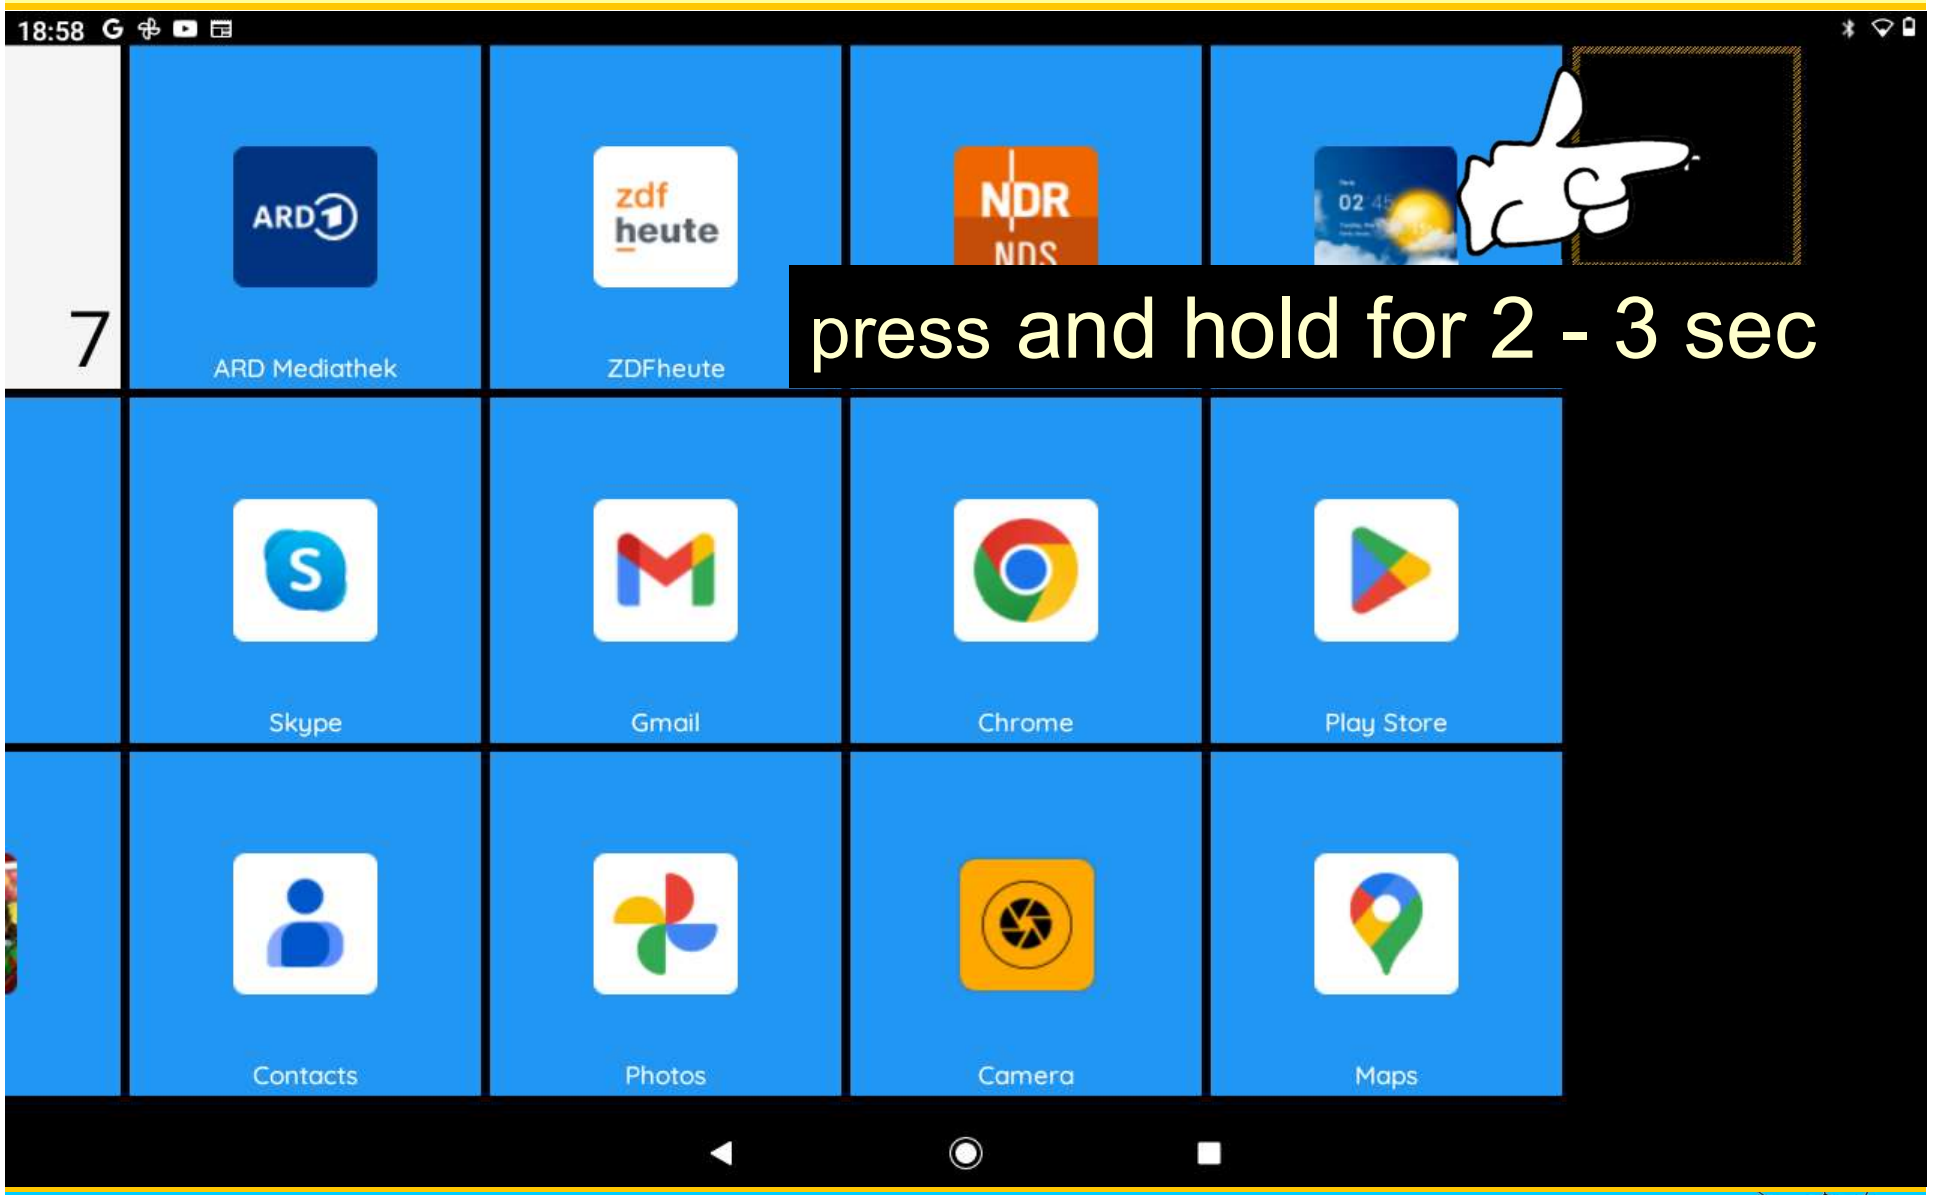

Let us connect you

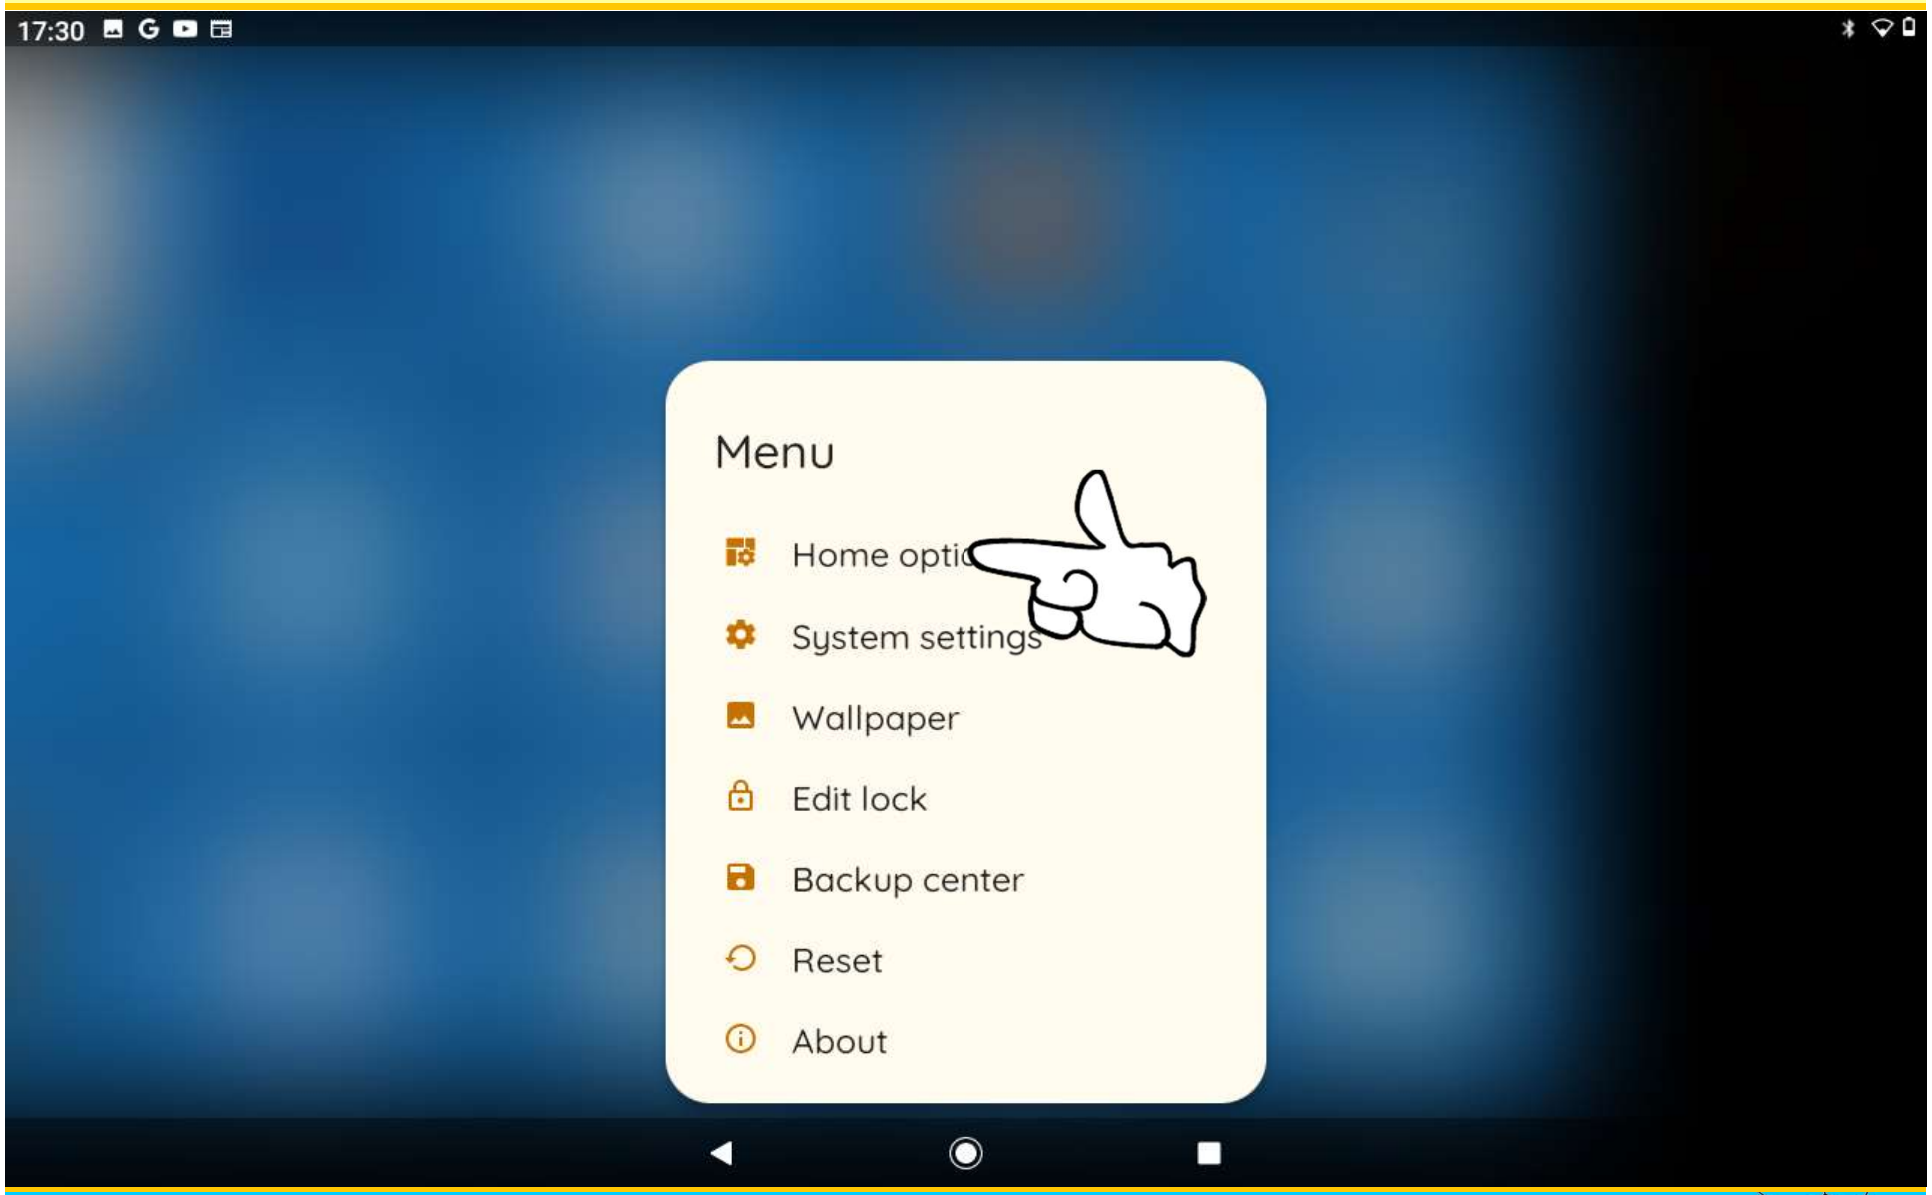

Let us connect you

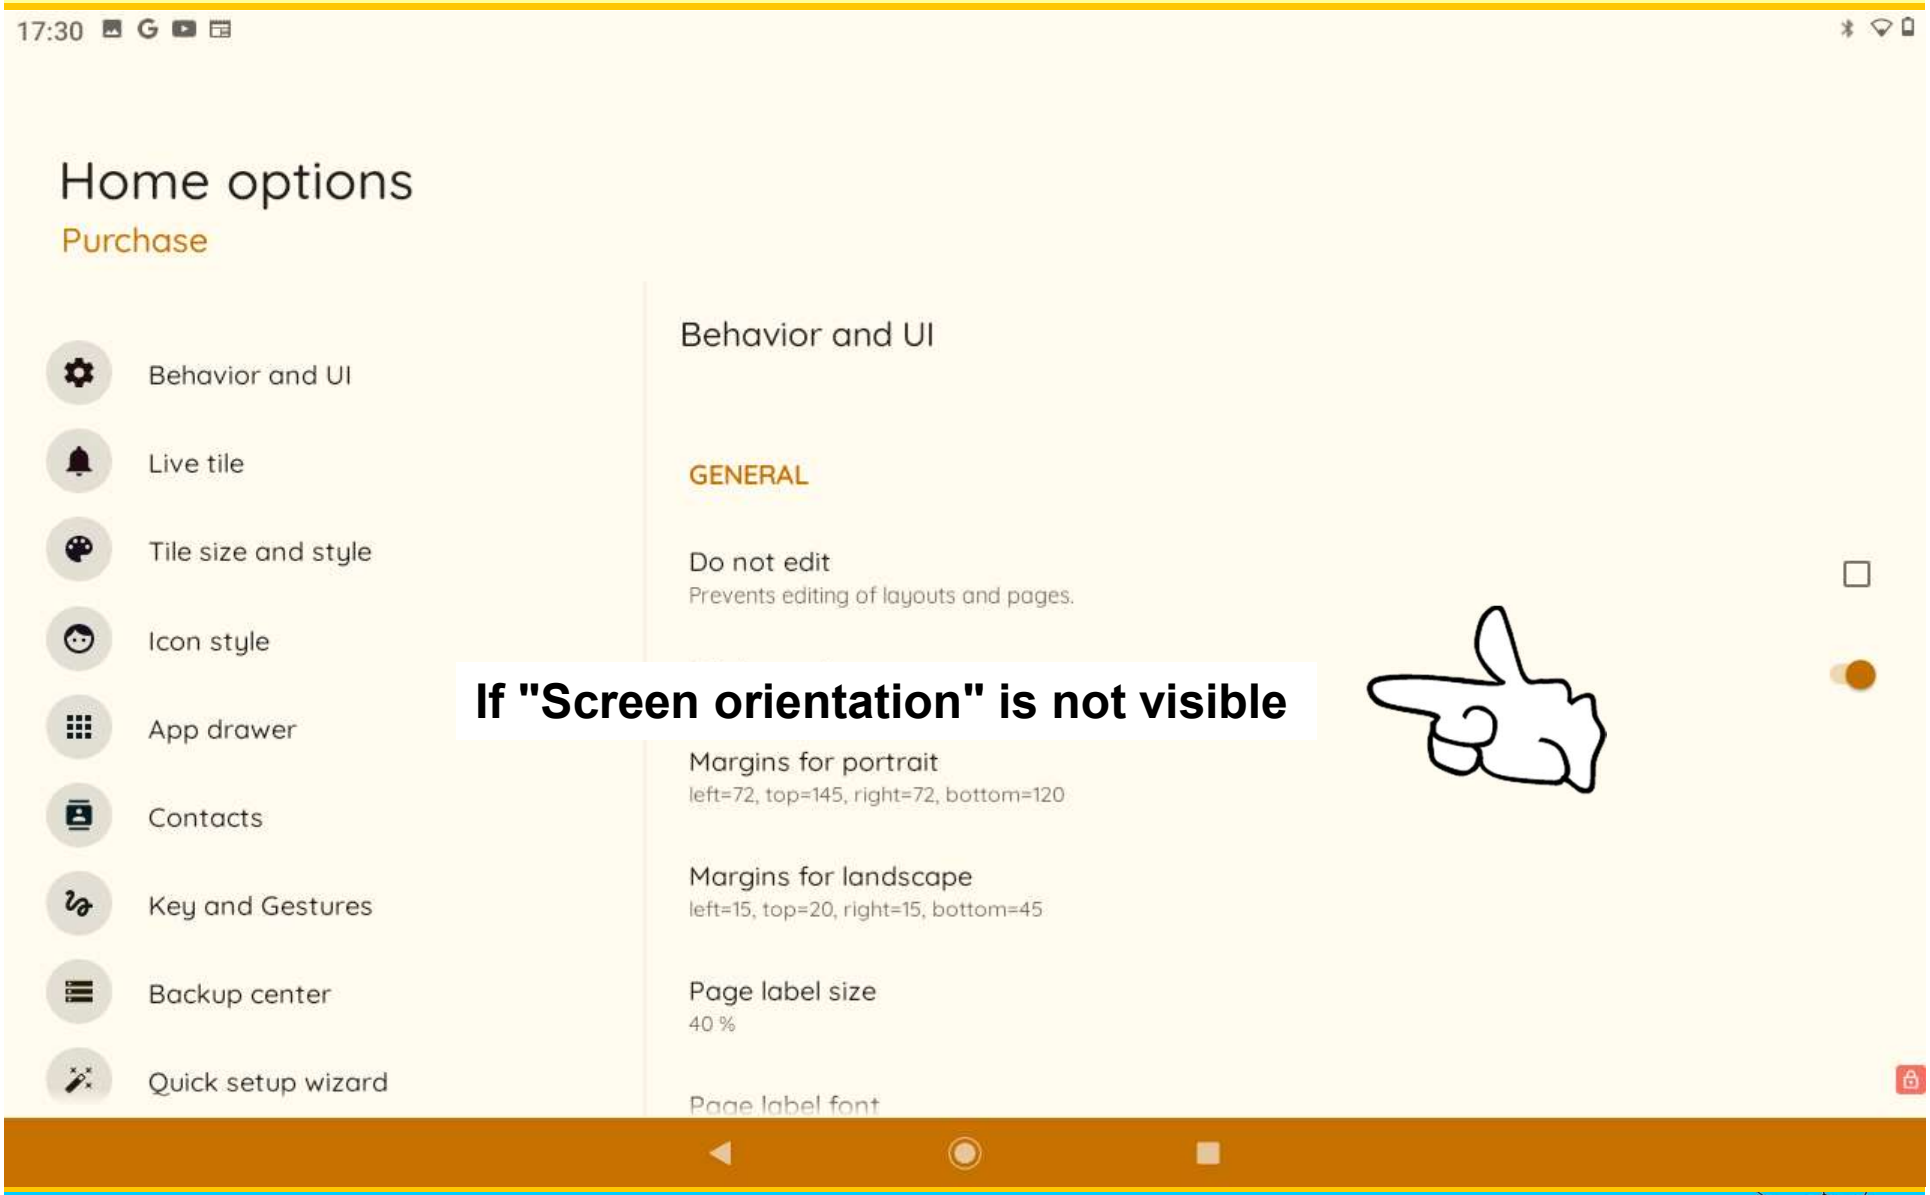

If "Screen orientation" is not visible

17:31
Home options
Purchase
Behavior and UI
Live tile
Tile size and style
Icon style
App drawer
Contacts
Key and Gestures
Backup center
Quick setup wizard
Behavior and UI
Margins for portrait
left=72, top=145, right=72, bottom=120
Margins for landscape
left=15, top=20, right=15, bottom=45
Page label size
40 %
Page label font
Default
Page label color
Screen orientati
Landscape

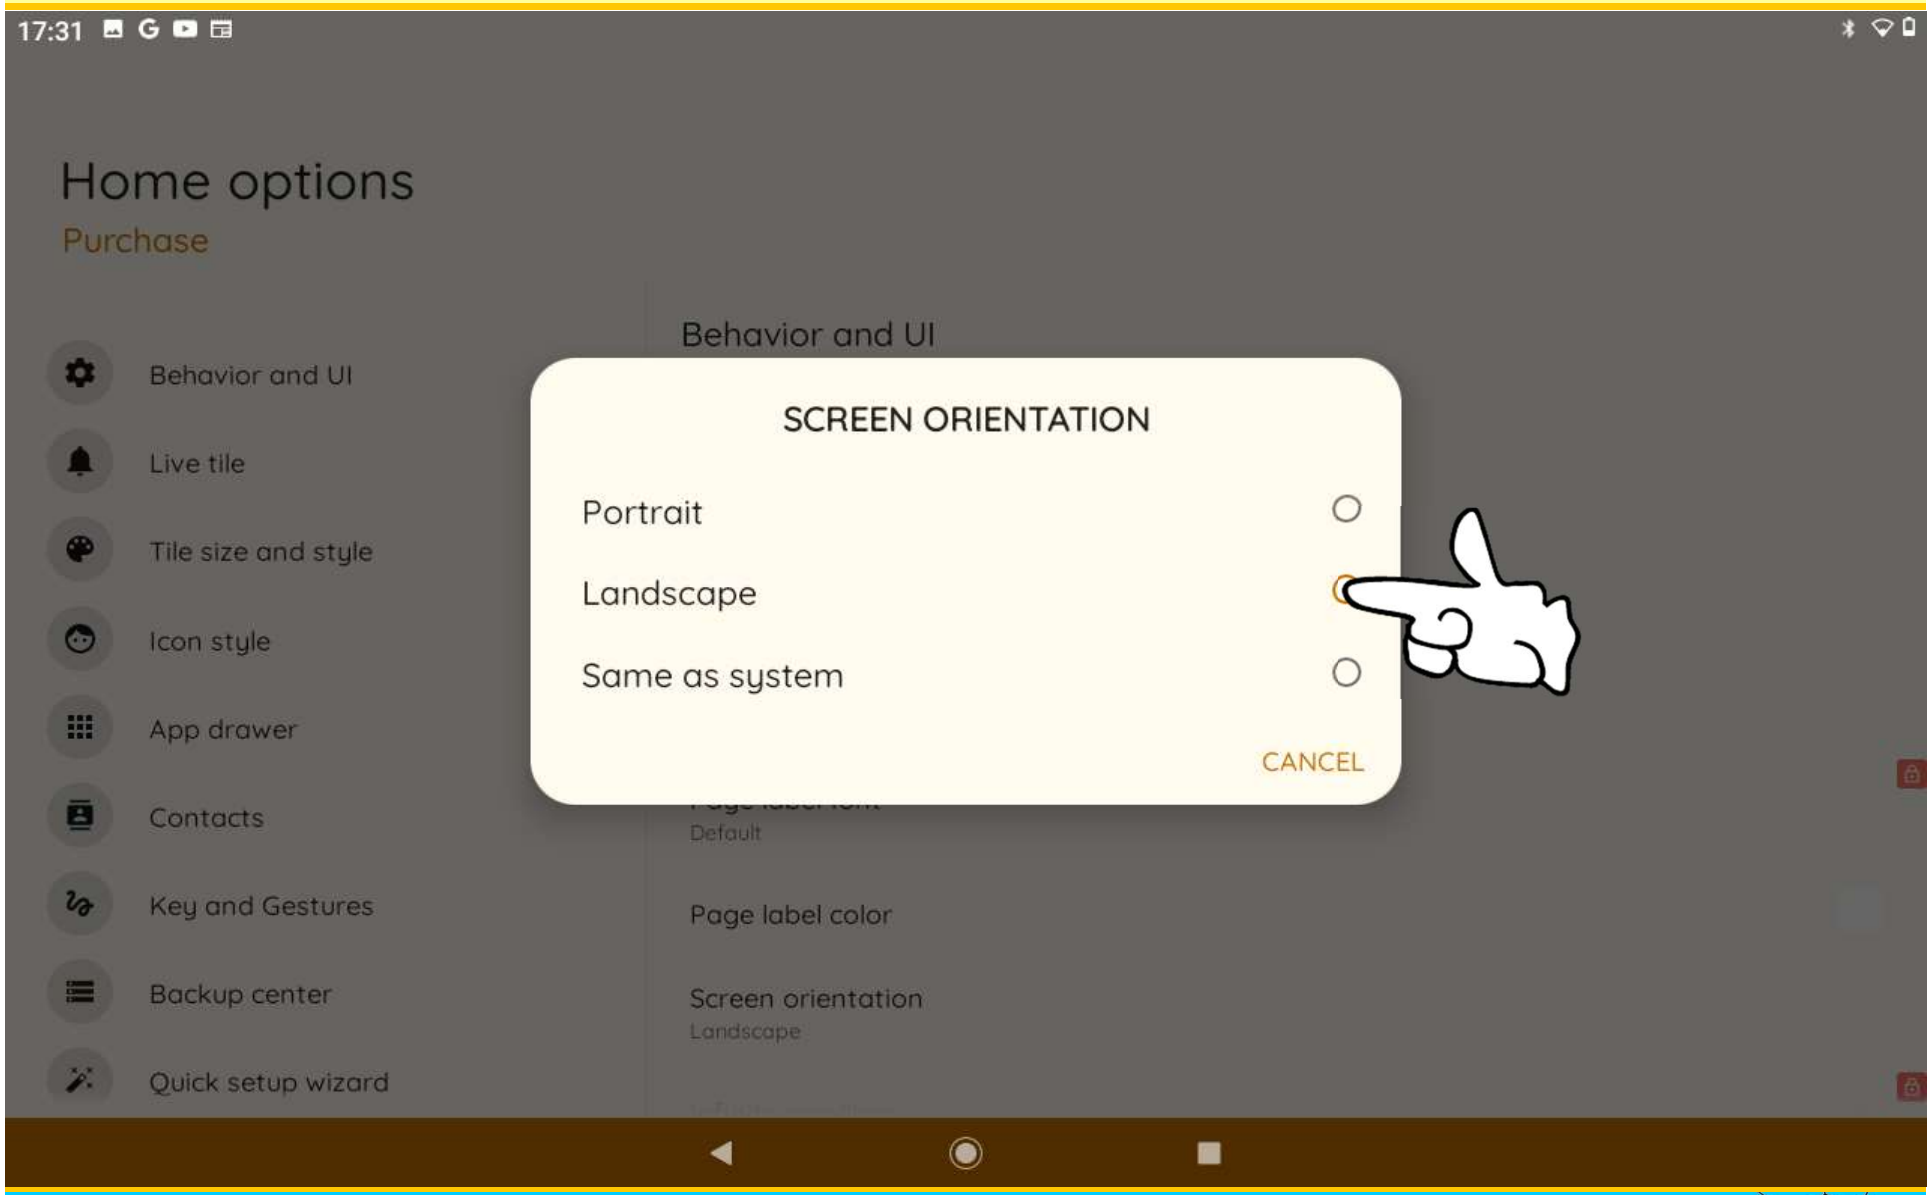
17:31
Home options
Purchase
Behavior and UI
Live tile
Tile size and style
Icon style
App drawer
Contacts
Key and Gestures
Backup center
Quick setup wizard
Behavior and UI
SCREEN ORIENTATION
Portrait
Landscape
Same as system
CANCEL
Default
Page label color
Screen orientation
Landscape

Let us connect you

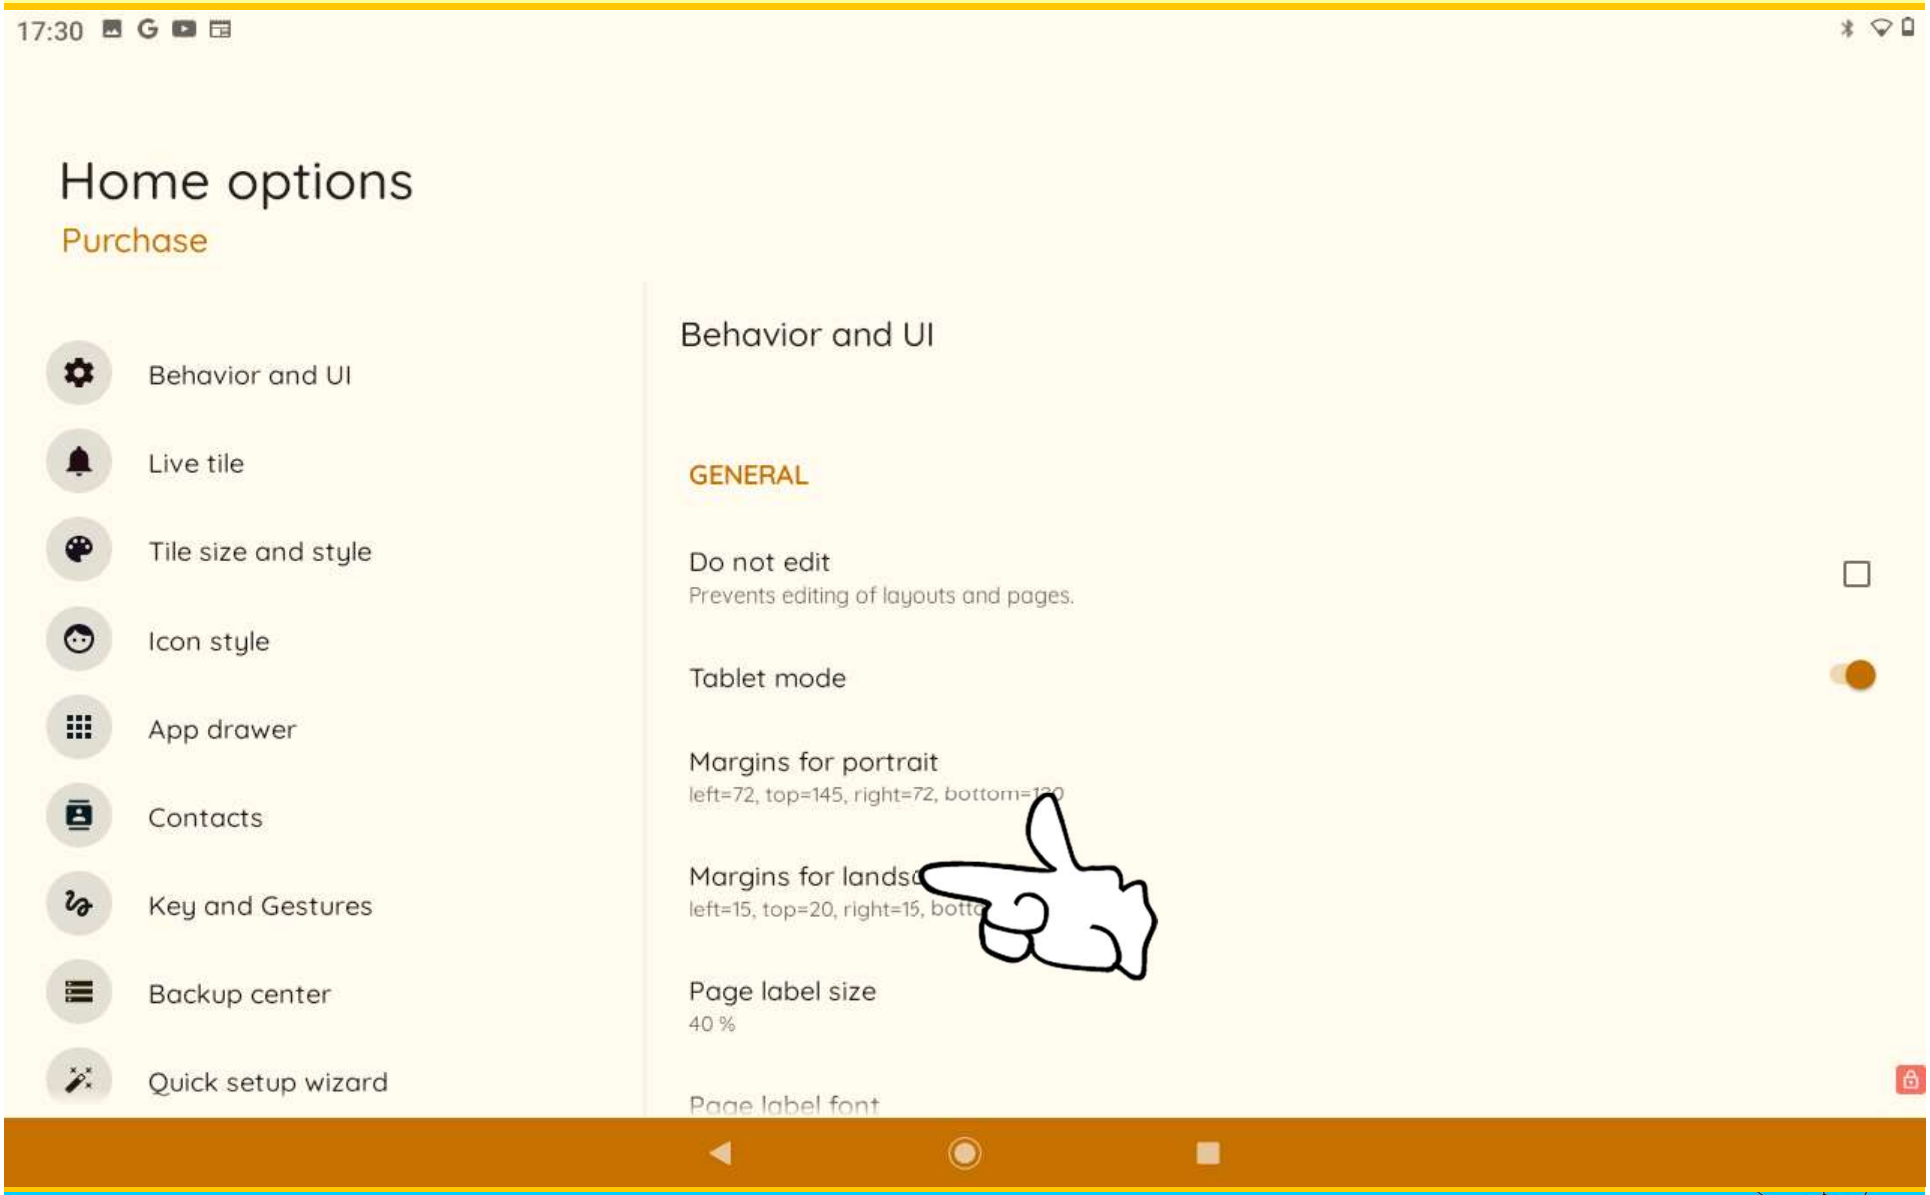

Let us connect you

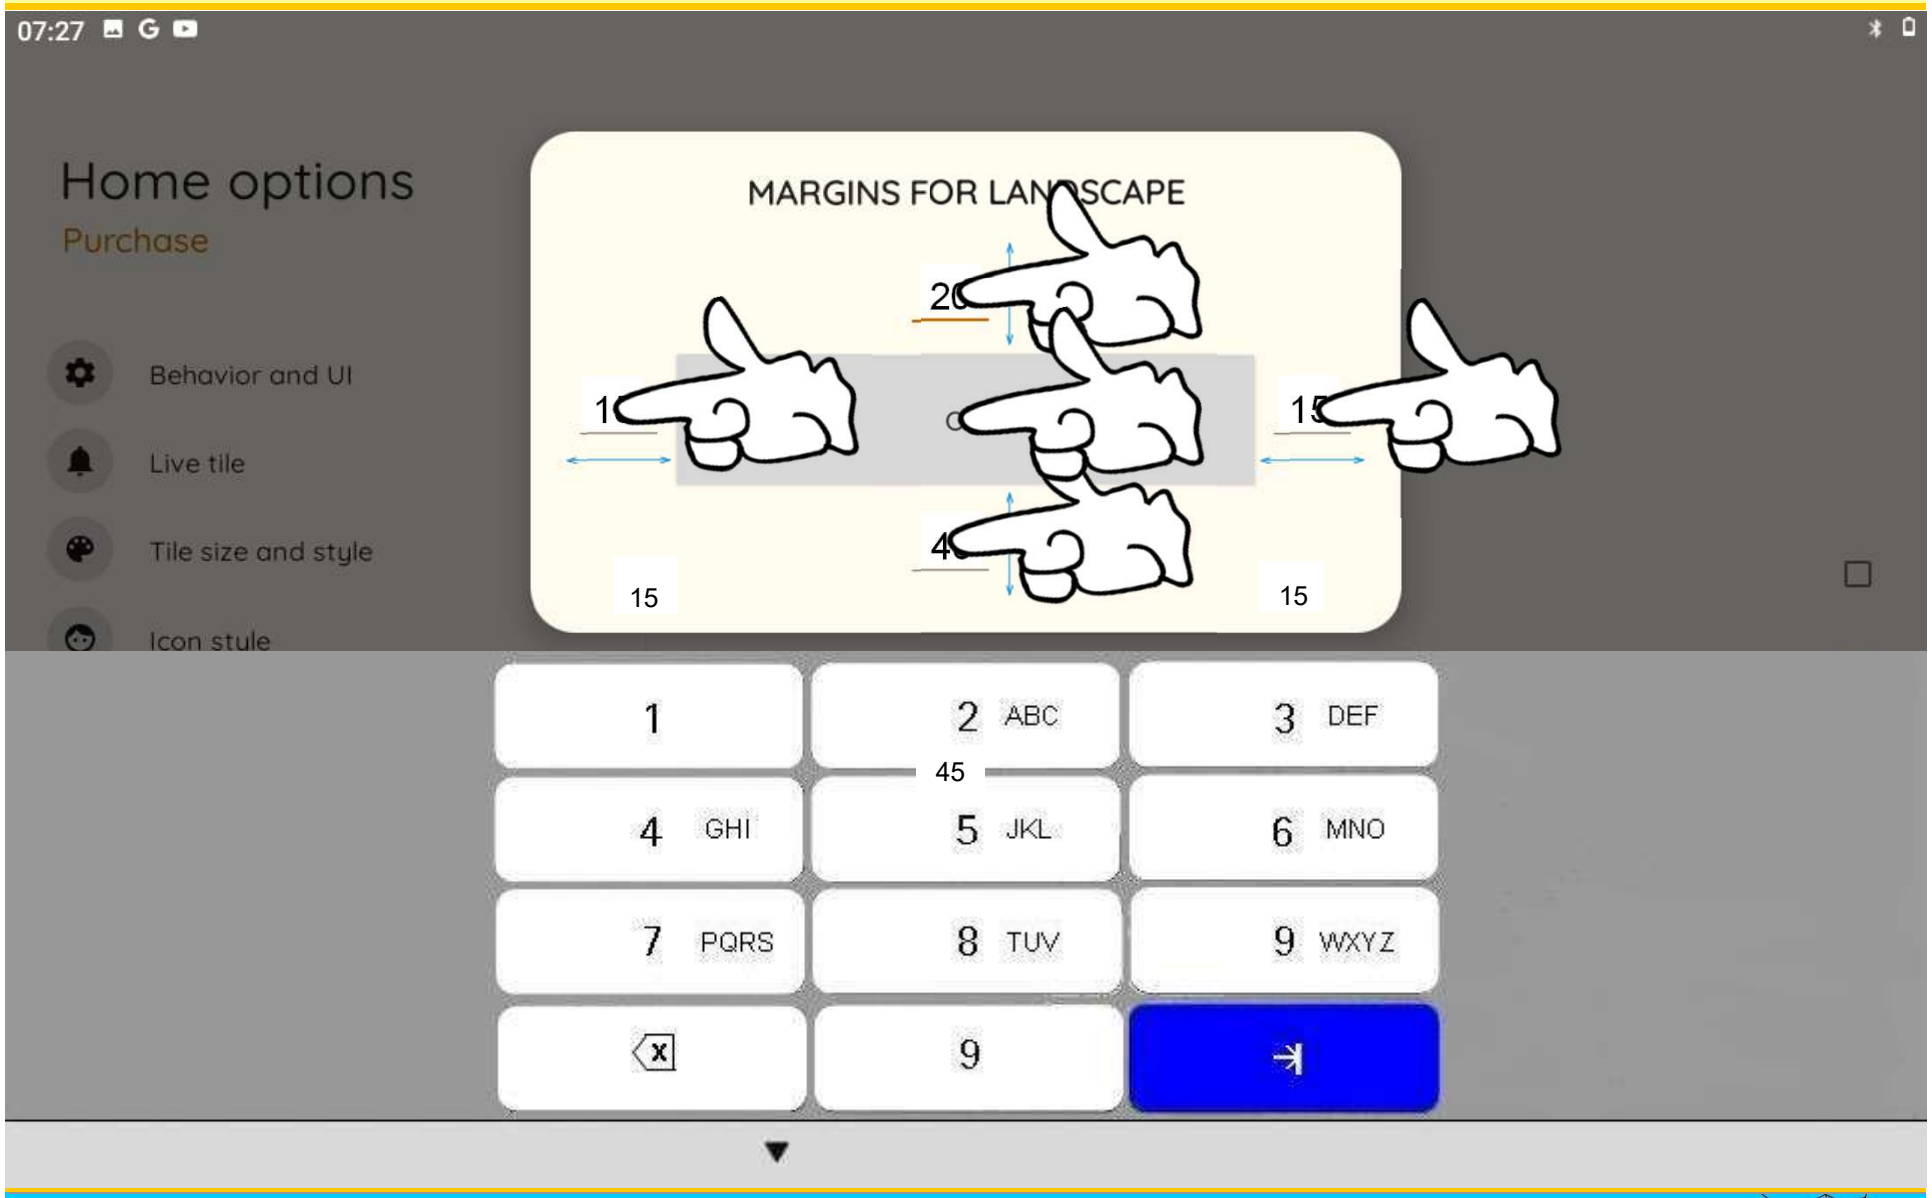

Let us connect you

17:30

Home options

Purchase

- Behavior and UI
- Live tile
- Tile size and style
- Icon style
- App drawer
- Contacts
- Key and Gestures

Behavior and UI

GENERAL

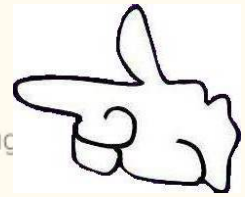

Do not edit
Prevents editing of layouts and pag

Tablet mode

Margins for portrait
left=72, top=145, right=72, bottom=120

Margins for landscape
left=15, top=20, right=15, bottom=45

Scroll for the background of the display

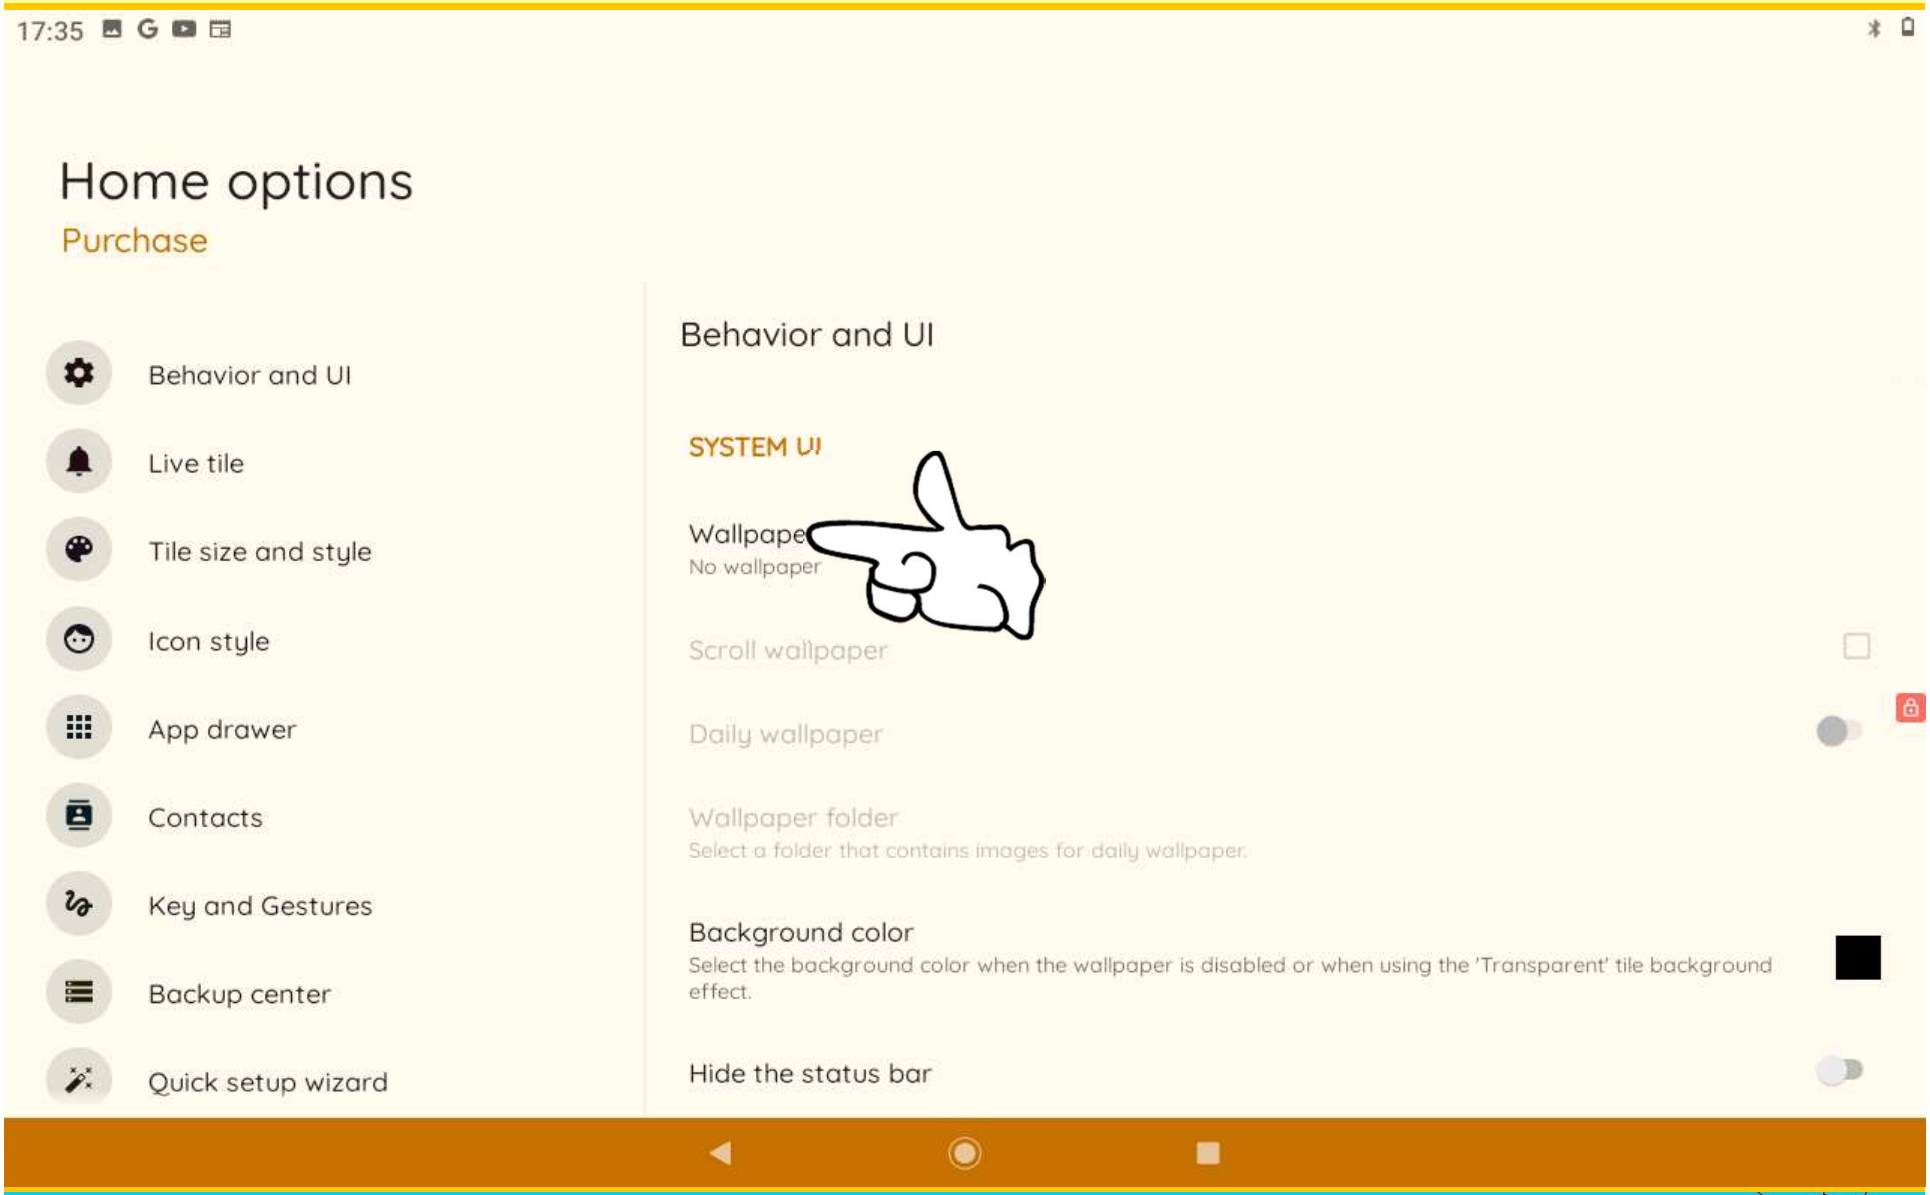
17:35
Home options
Purchase
Behavior and UI
Live tile
Tile size and style
Icon style
App drawer
Contacts
Key and Gestures
Backup center
Quick setup wizard
Behavior and UI
SYSTEM UI
Wallpaper
No wallpaper
Scroll wallpaper
Daily wallpaper
Wallpaper folder
Select a folder that contains images for daily wallpaper.
Background color
Select the background color when the wallpaper is disabled or when using the 'Transparent' tile background effect.
Hide the status bar

Let us connect you

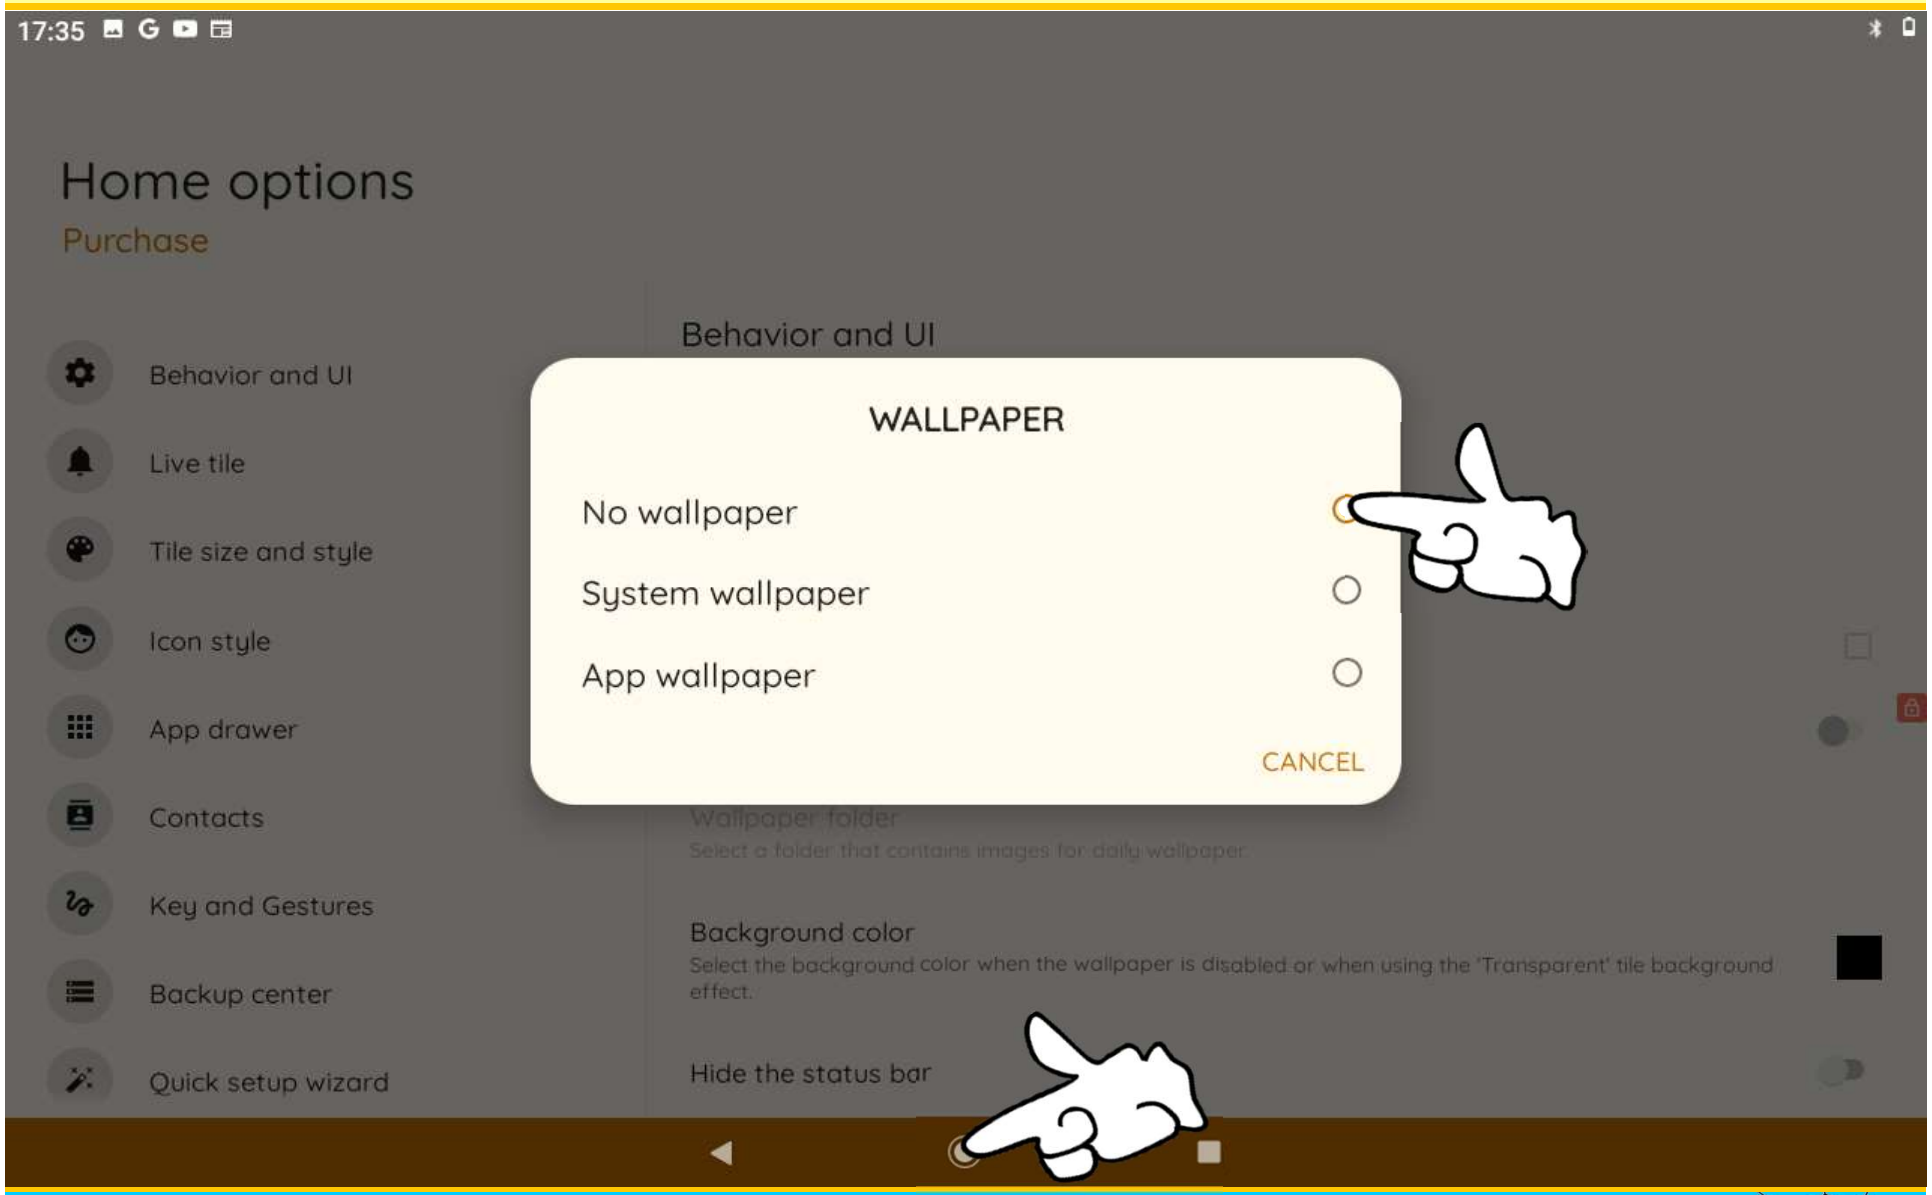

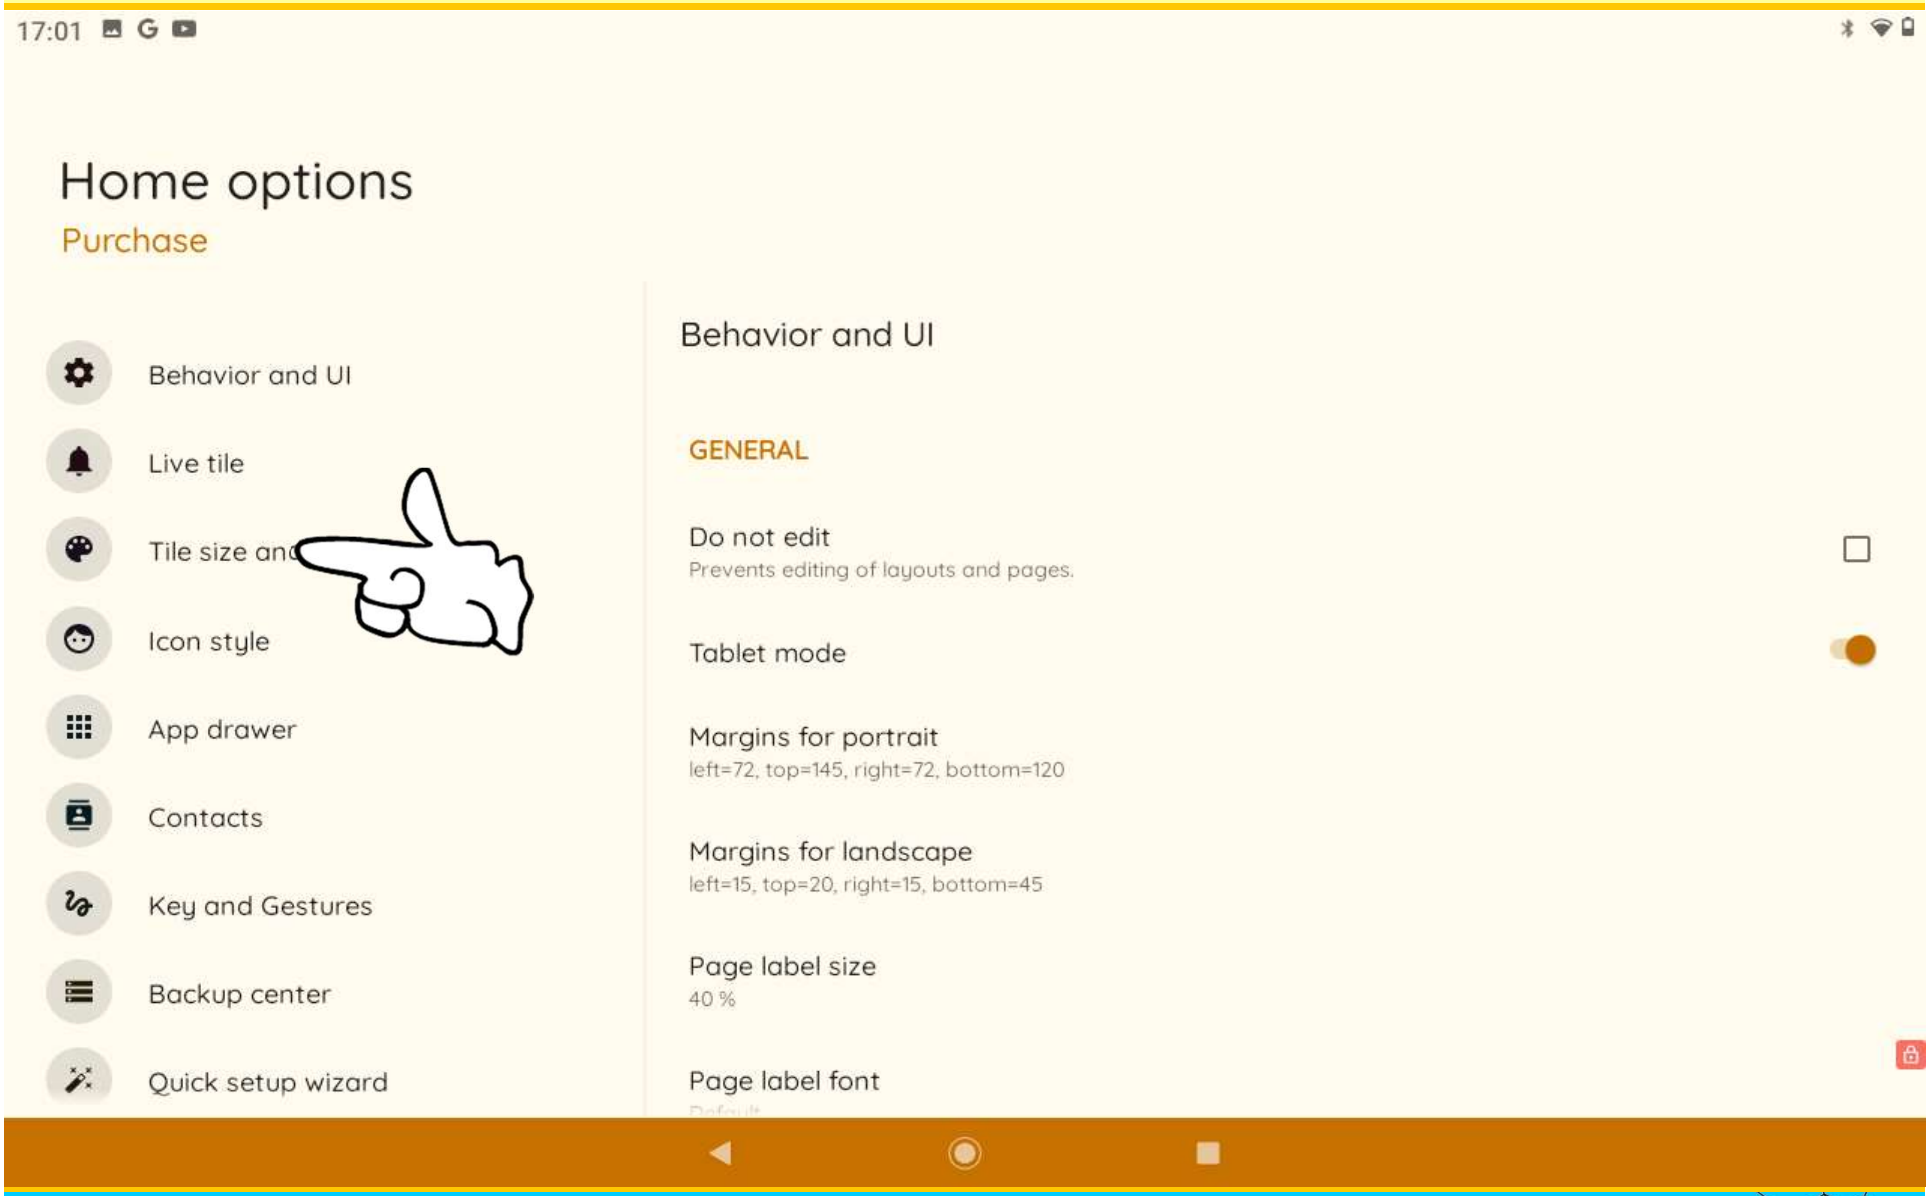
17:01
Home options
Purchase
Behavior and UI
Live tile
Tile size and
Icon style
App drawer
Contacts
Key and Gestures
Backup center
Quick setup wizard
Behavior and UI
GENERAL
Do not edit
Prevents editing of layouts and pages.
Tablet mode
Margins for portrait
left=72, top=145, right=72, bottom=120
Margins for landscape
left=15, top=20, right=15, bottom=45
Page label size
40 %
Page label font

Let us connect you

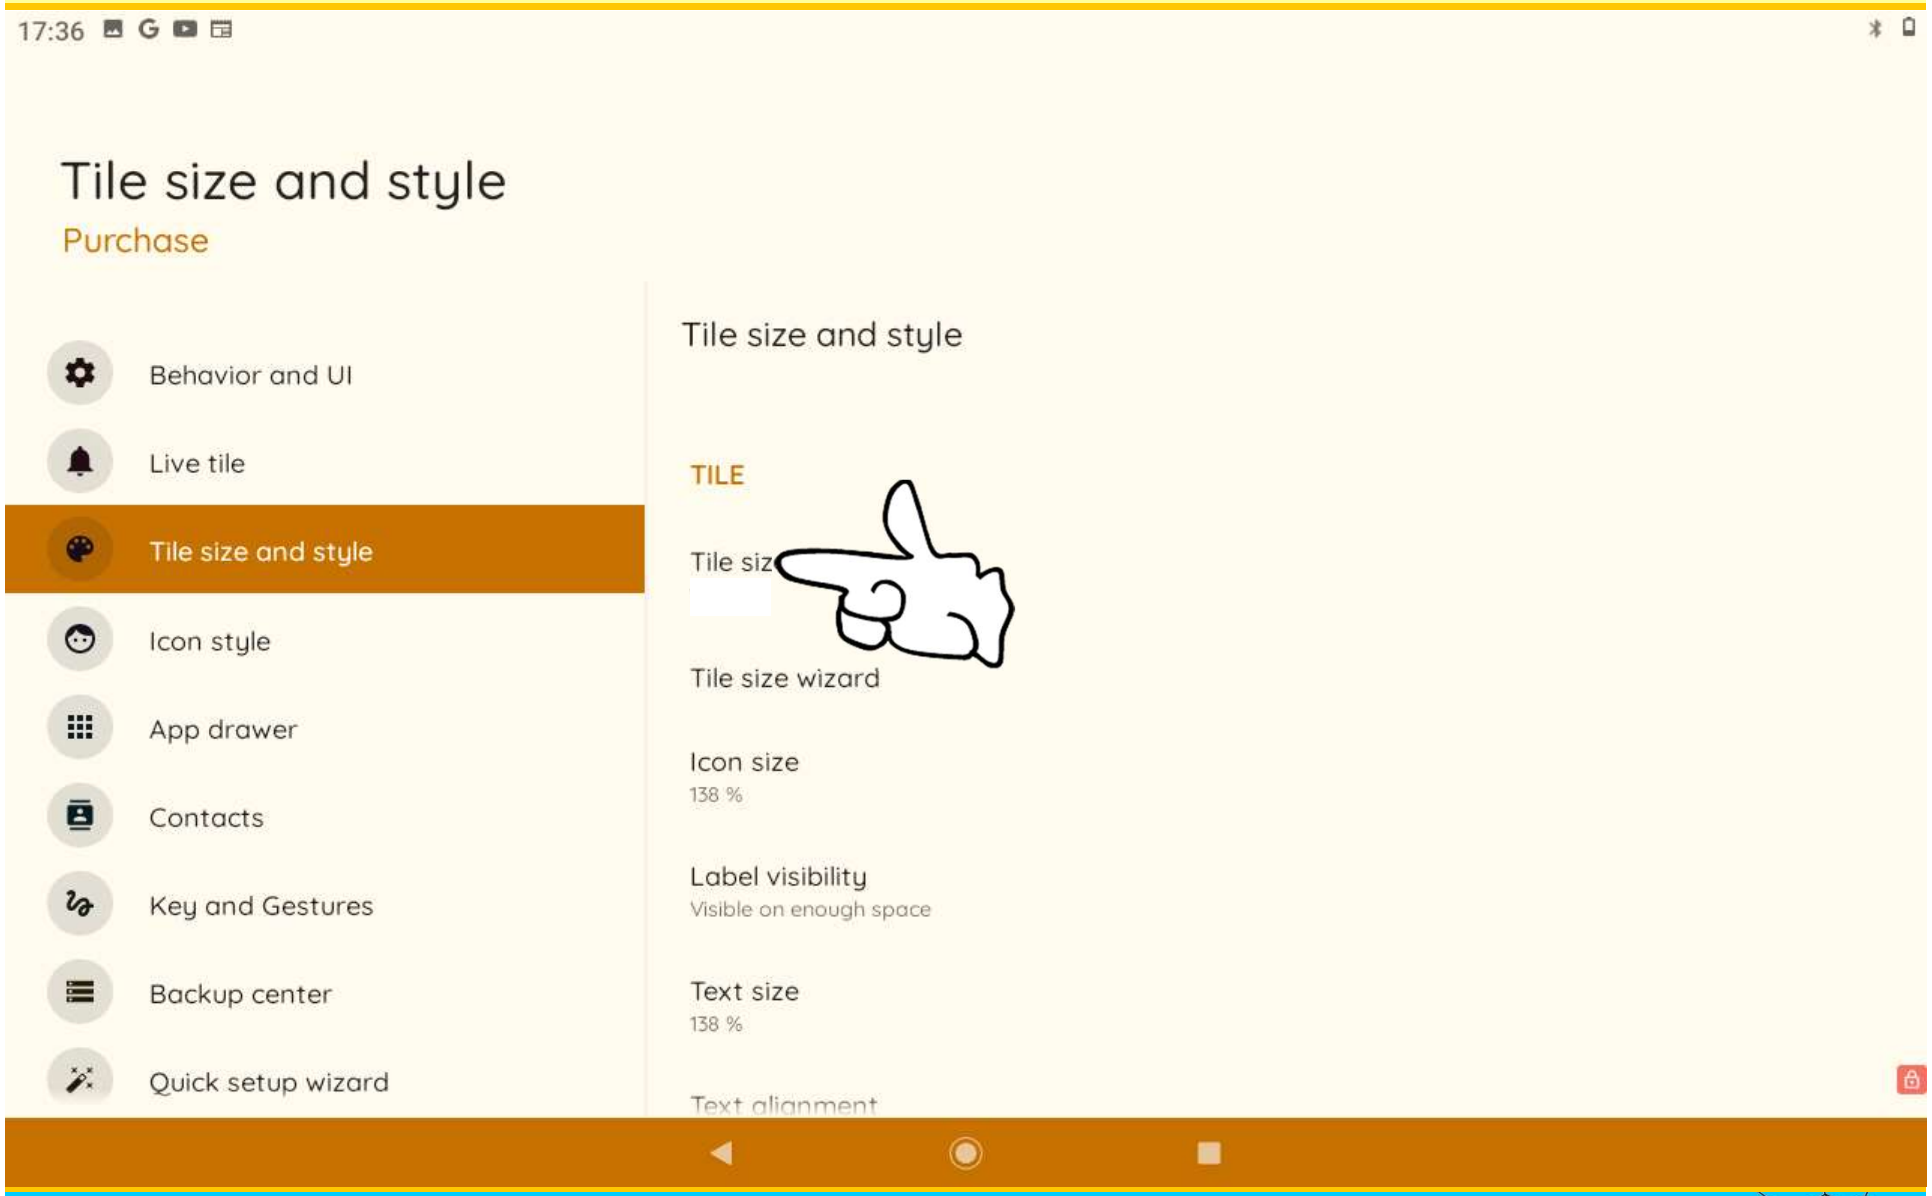

Let us connect you

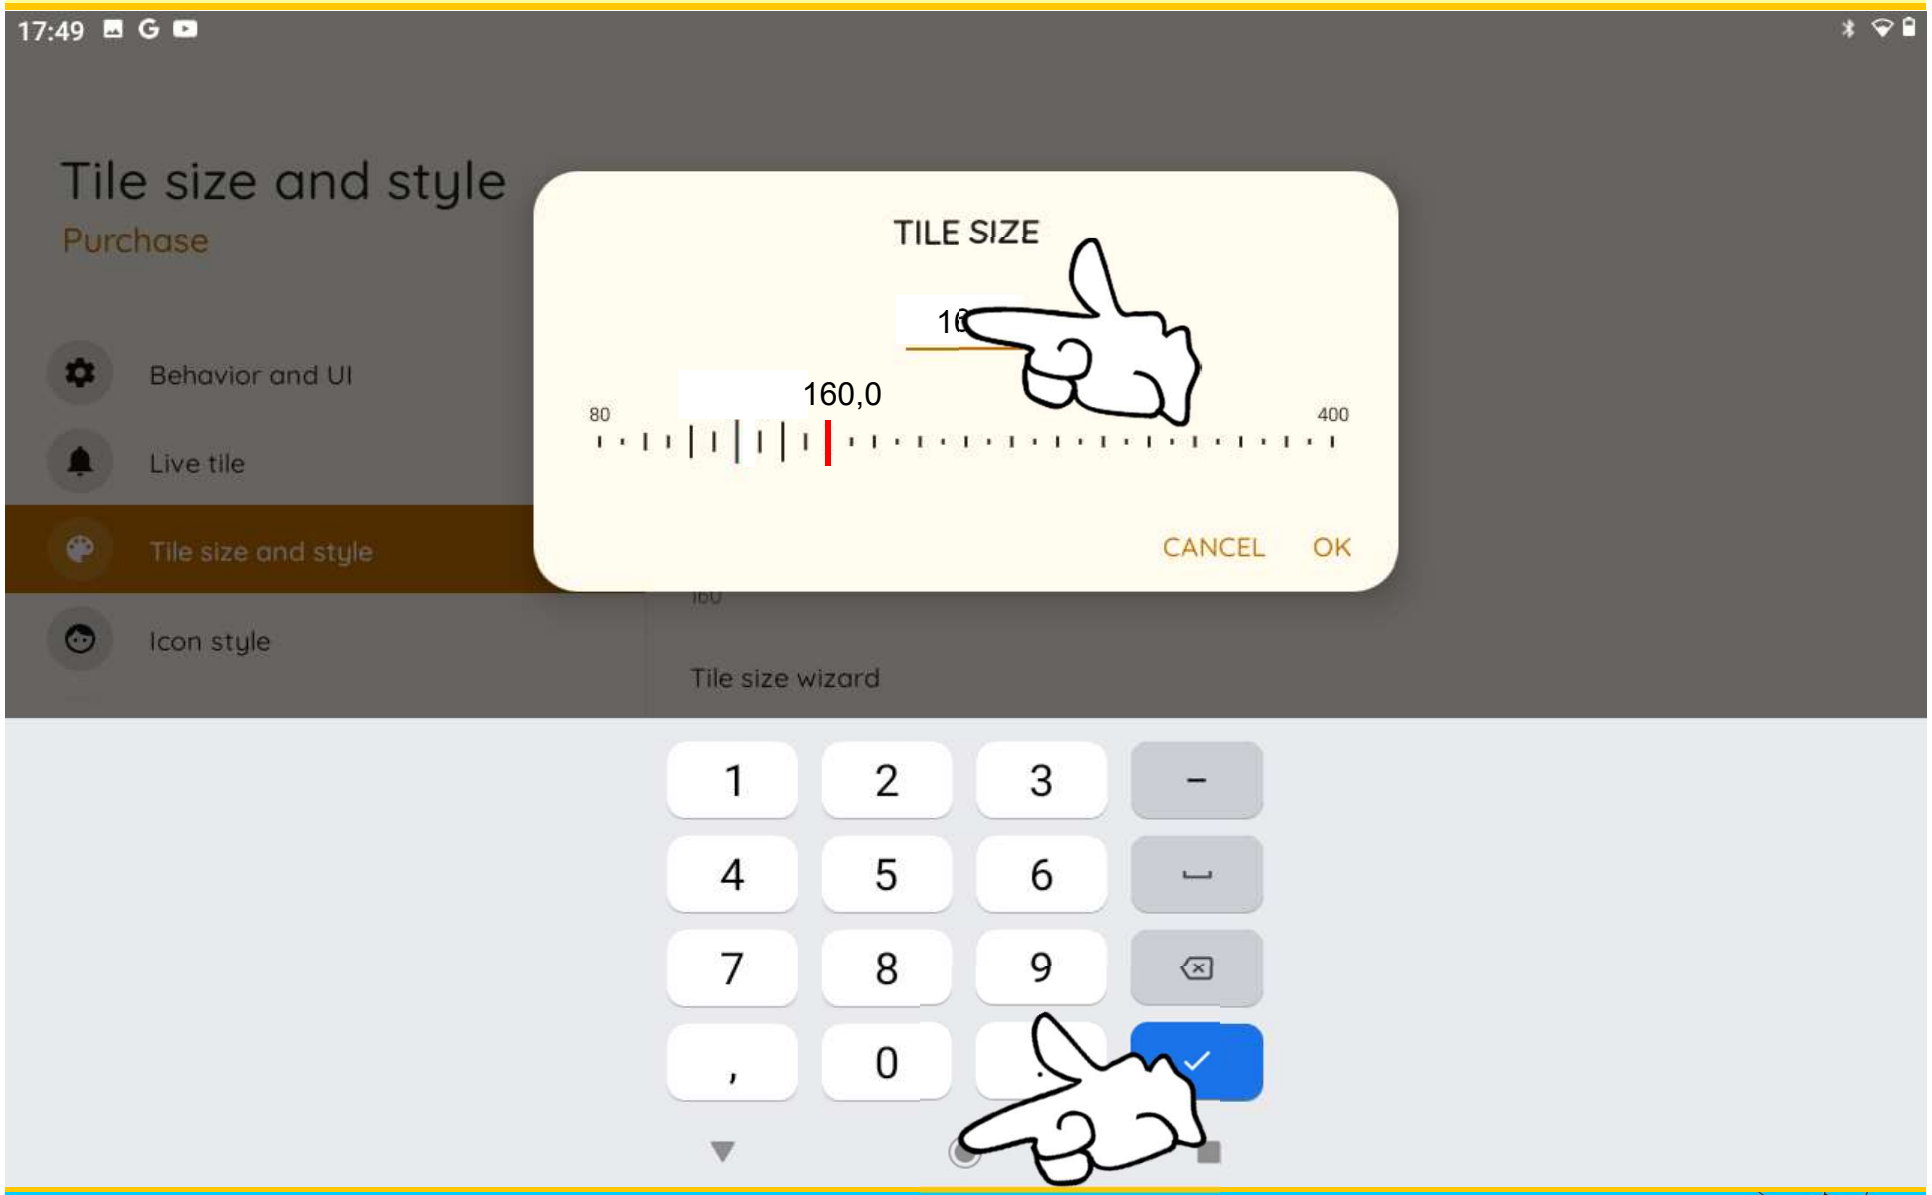

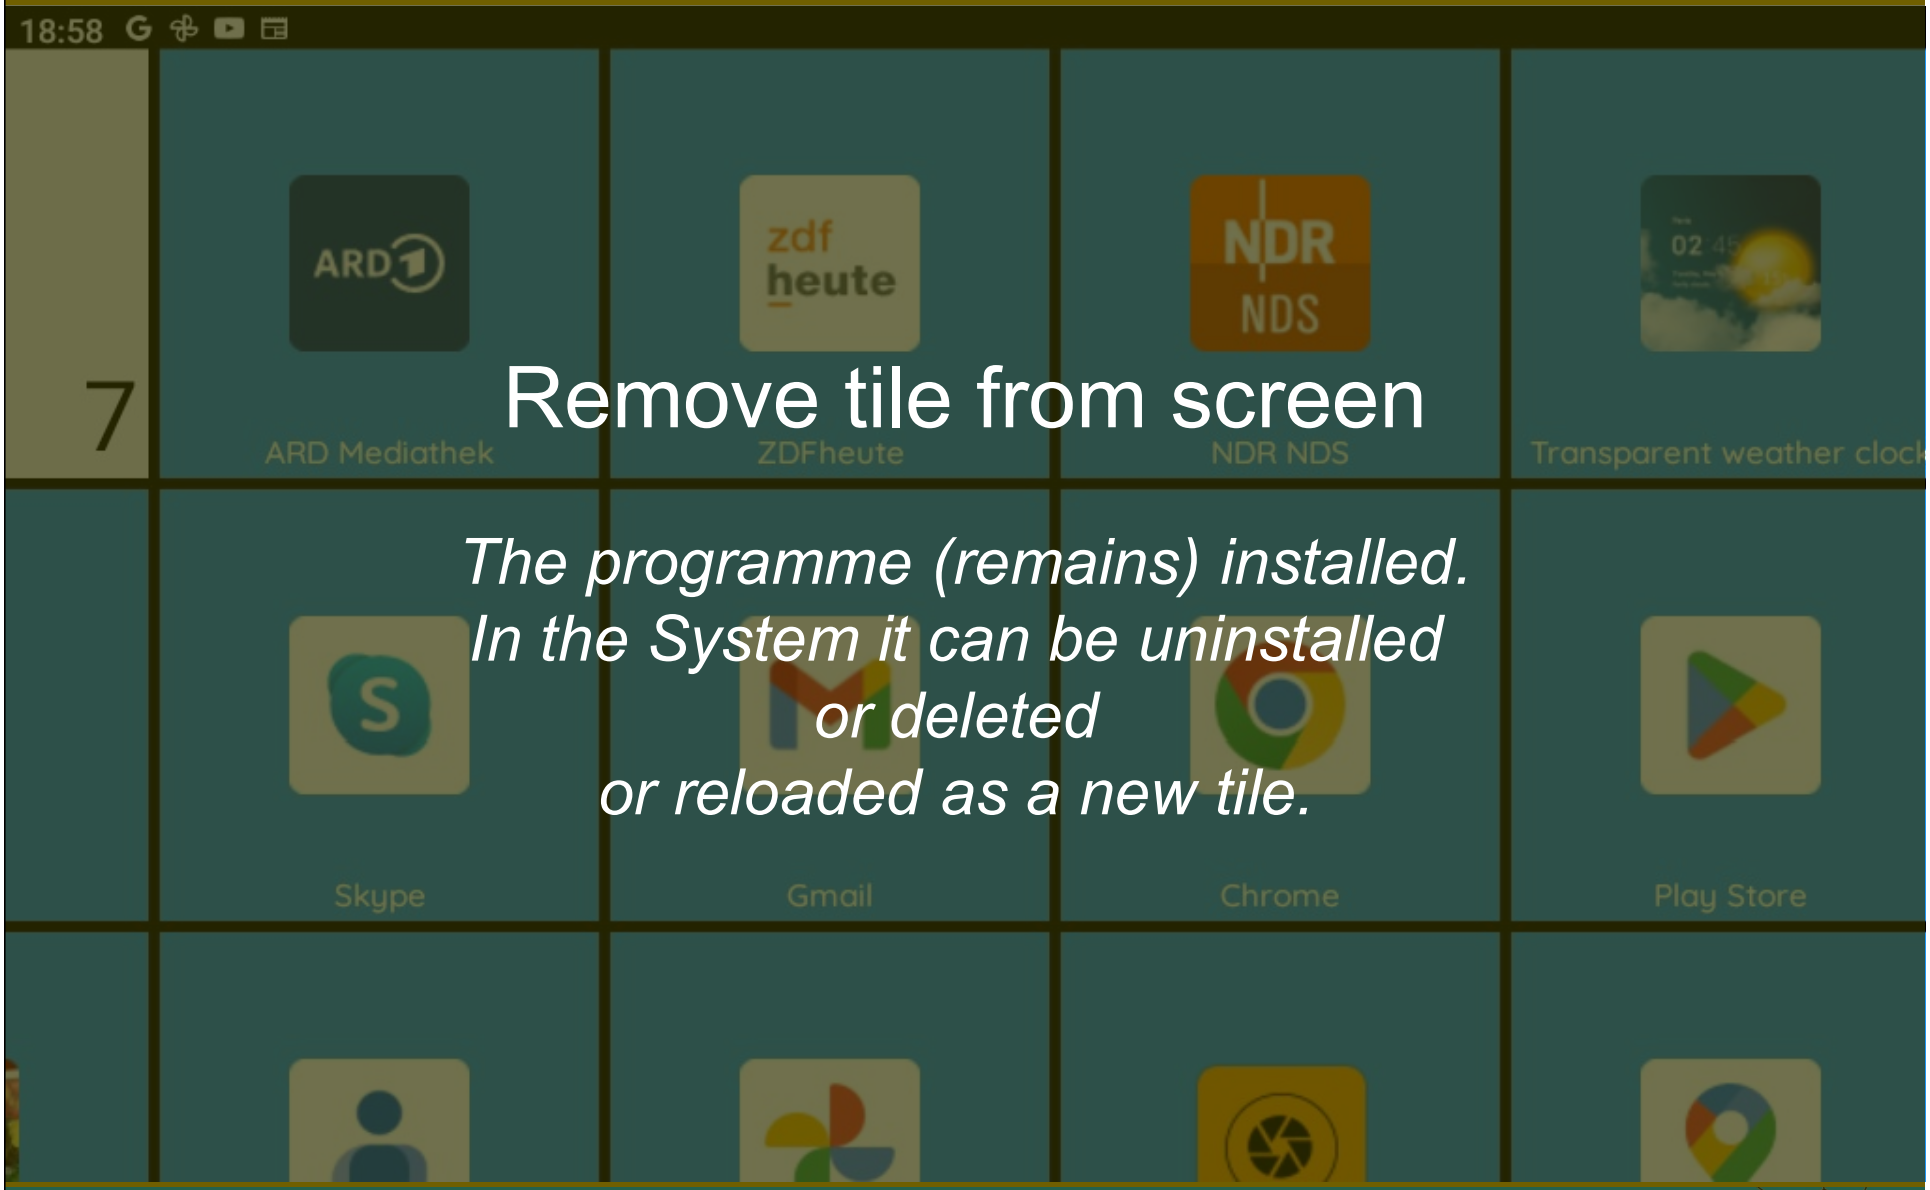

Remove tile from screen

The programme (remains) installed.
In the System it can be uninstalled
or deleted
or reloaded as a new tile.

Let us connect you

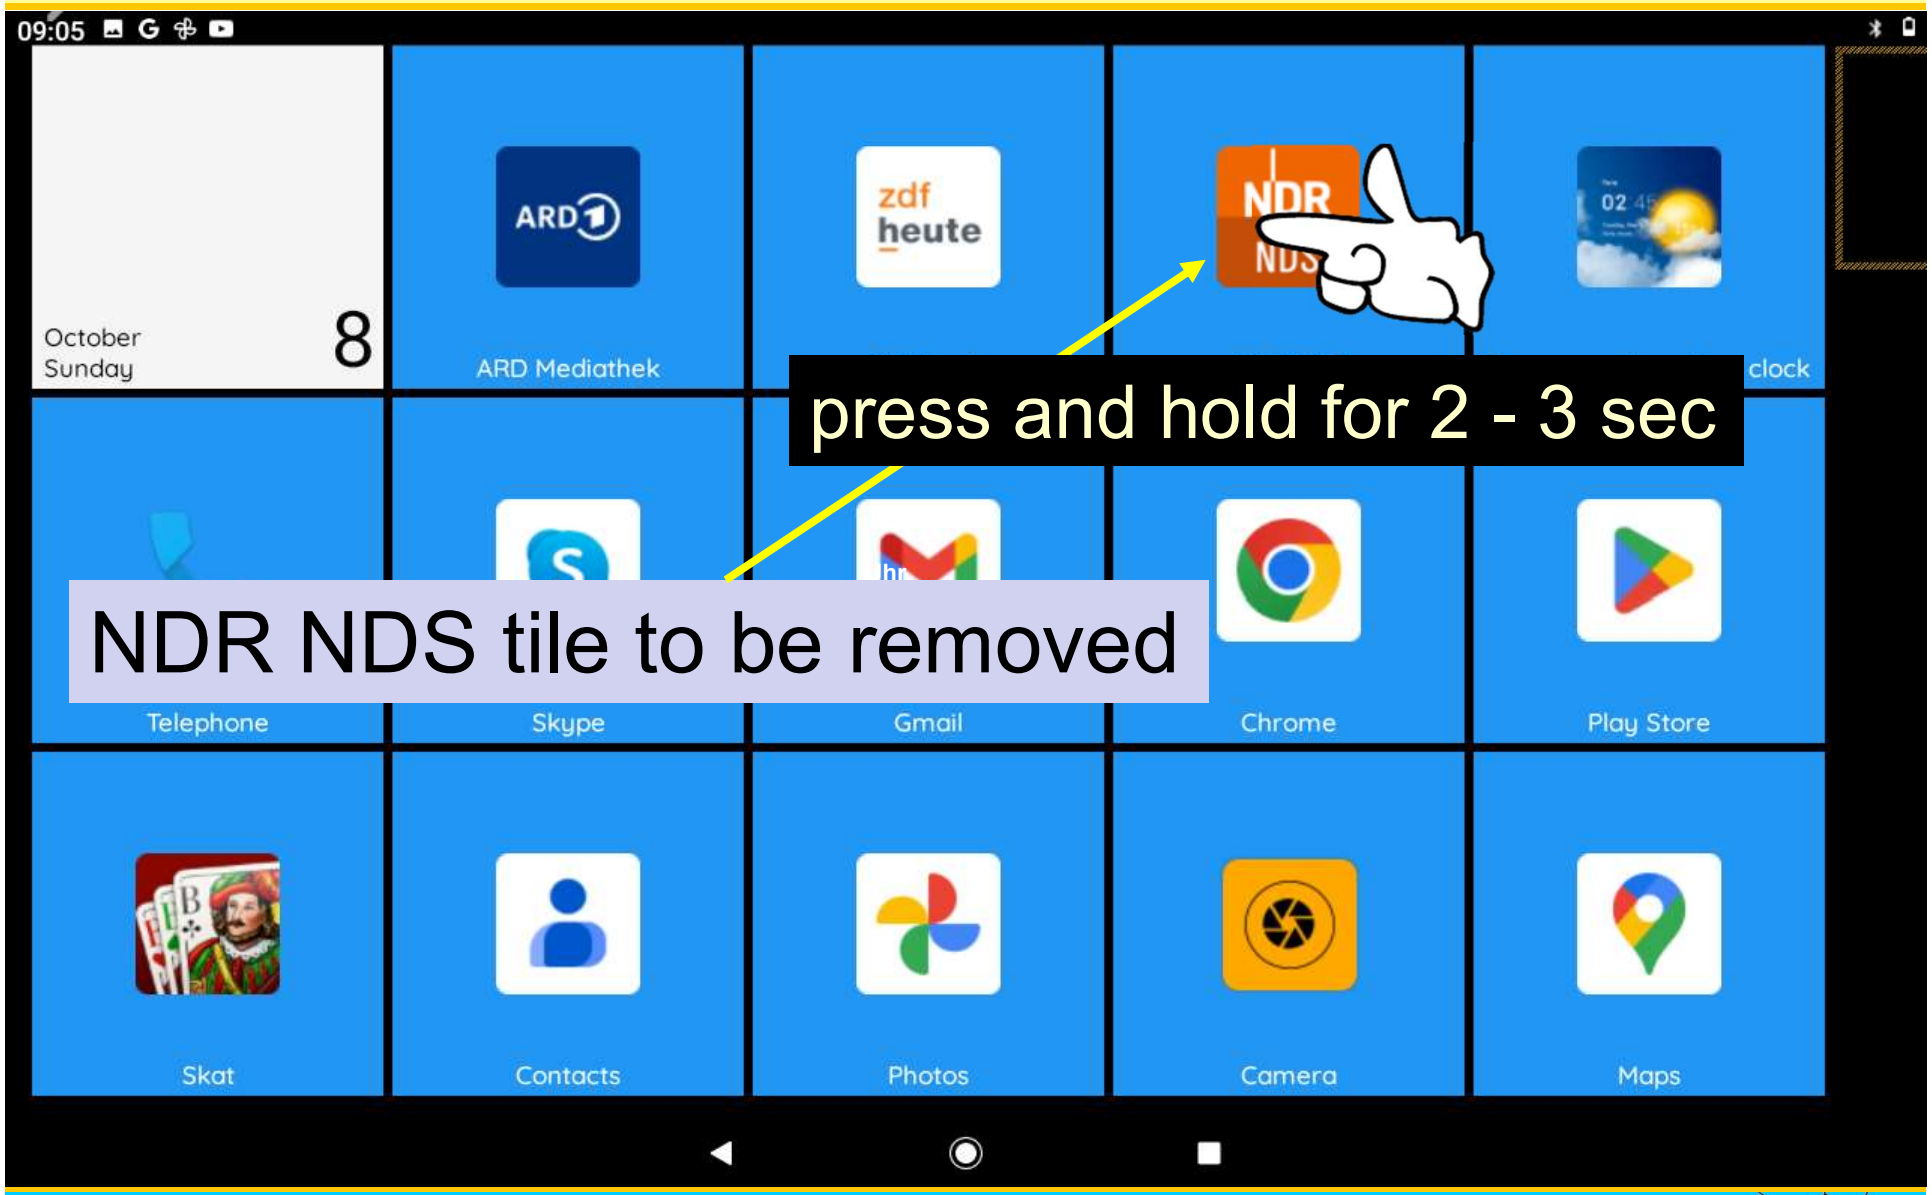

Let us connect you

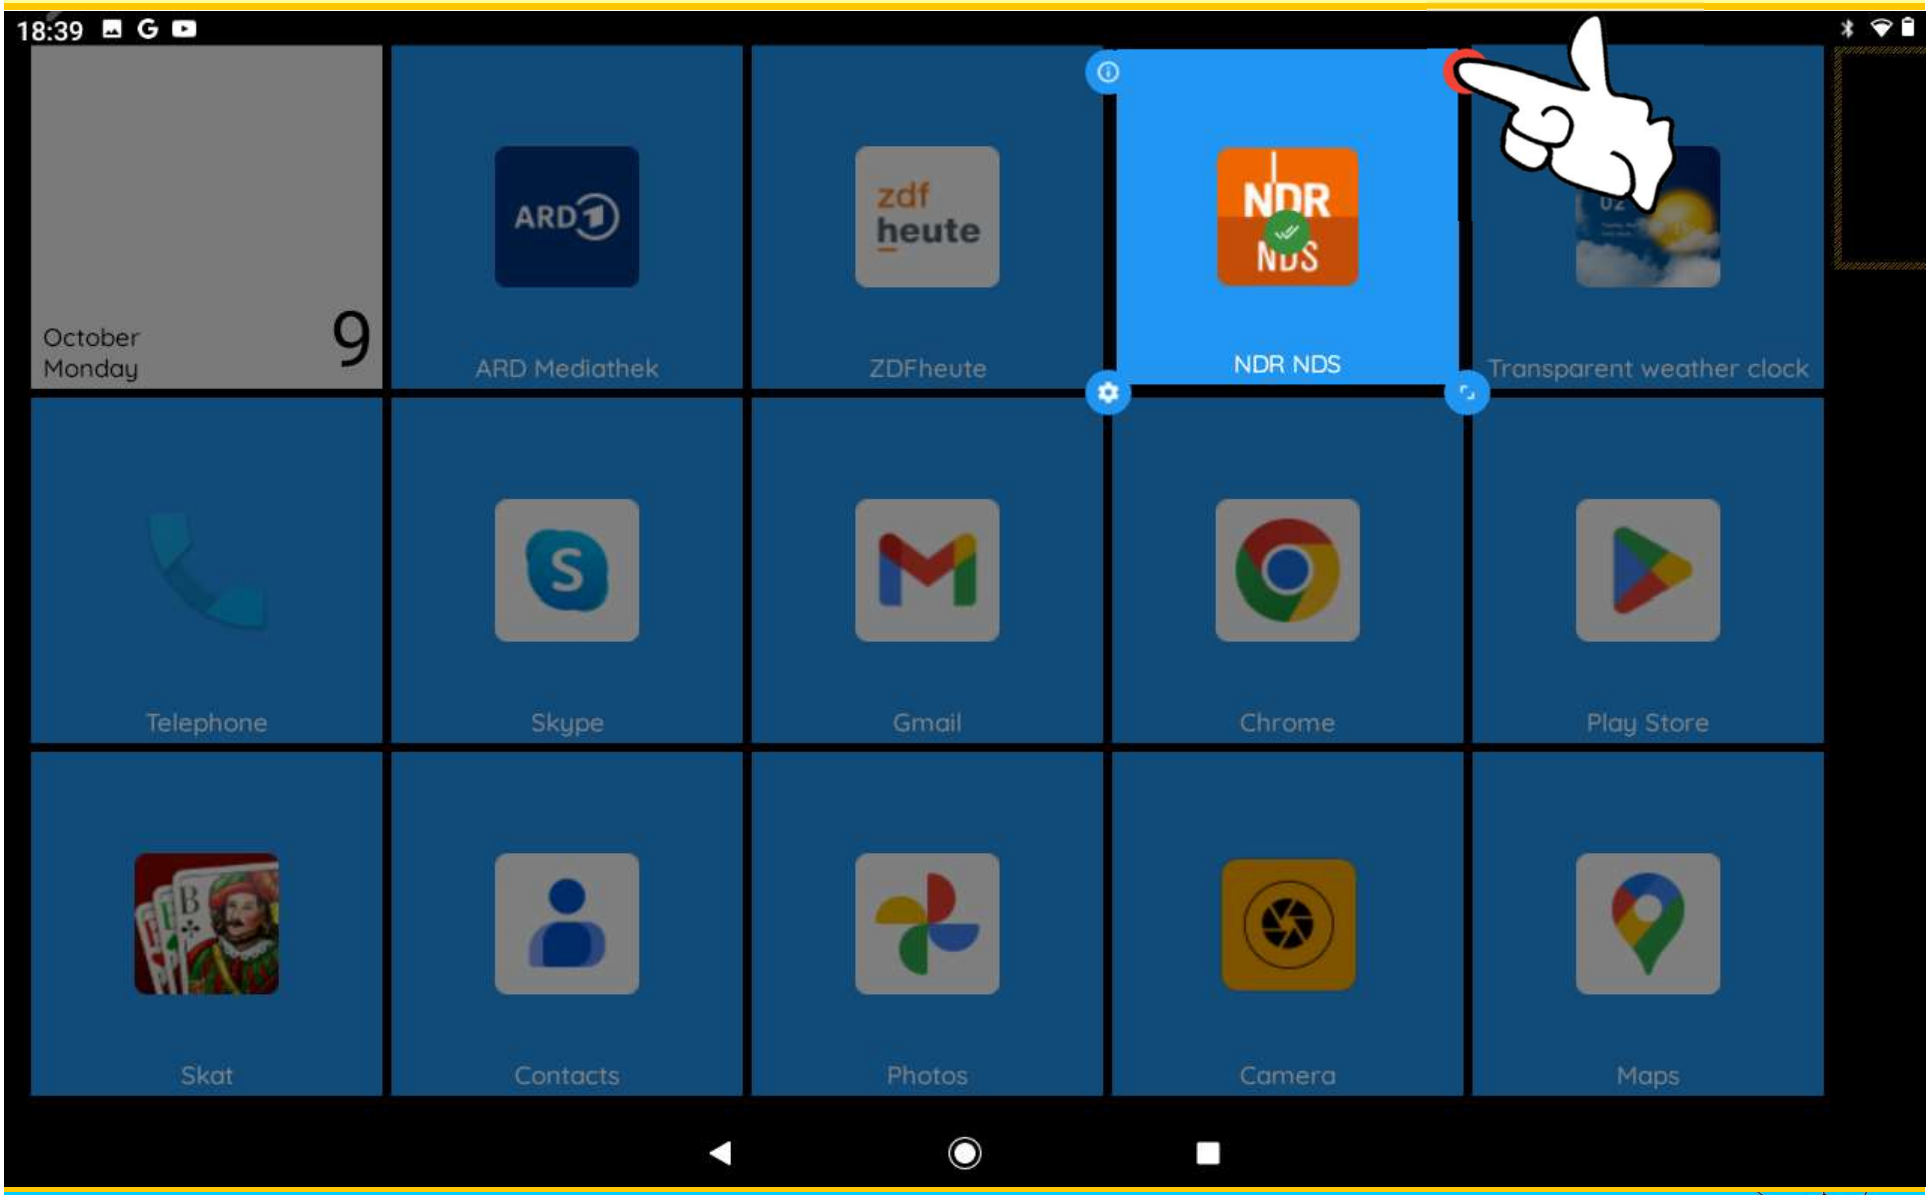

Removing the tile for "NDR NDS"

Let us connect you

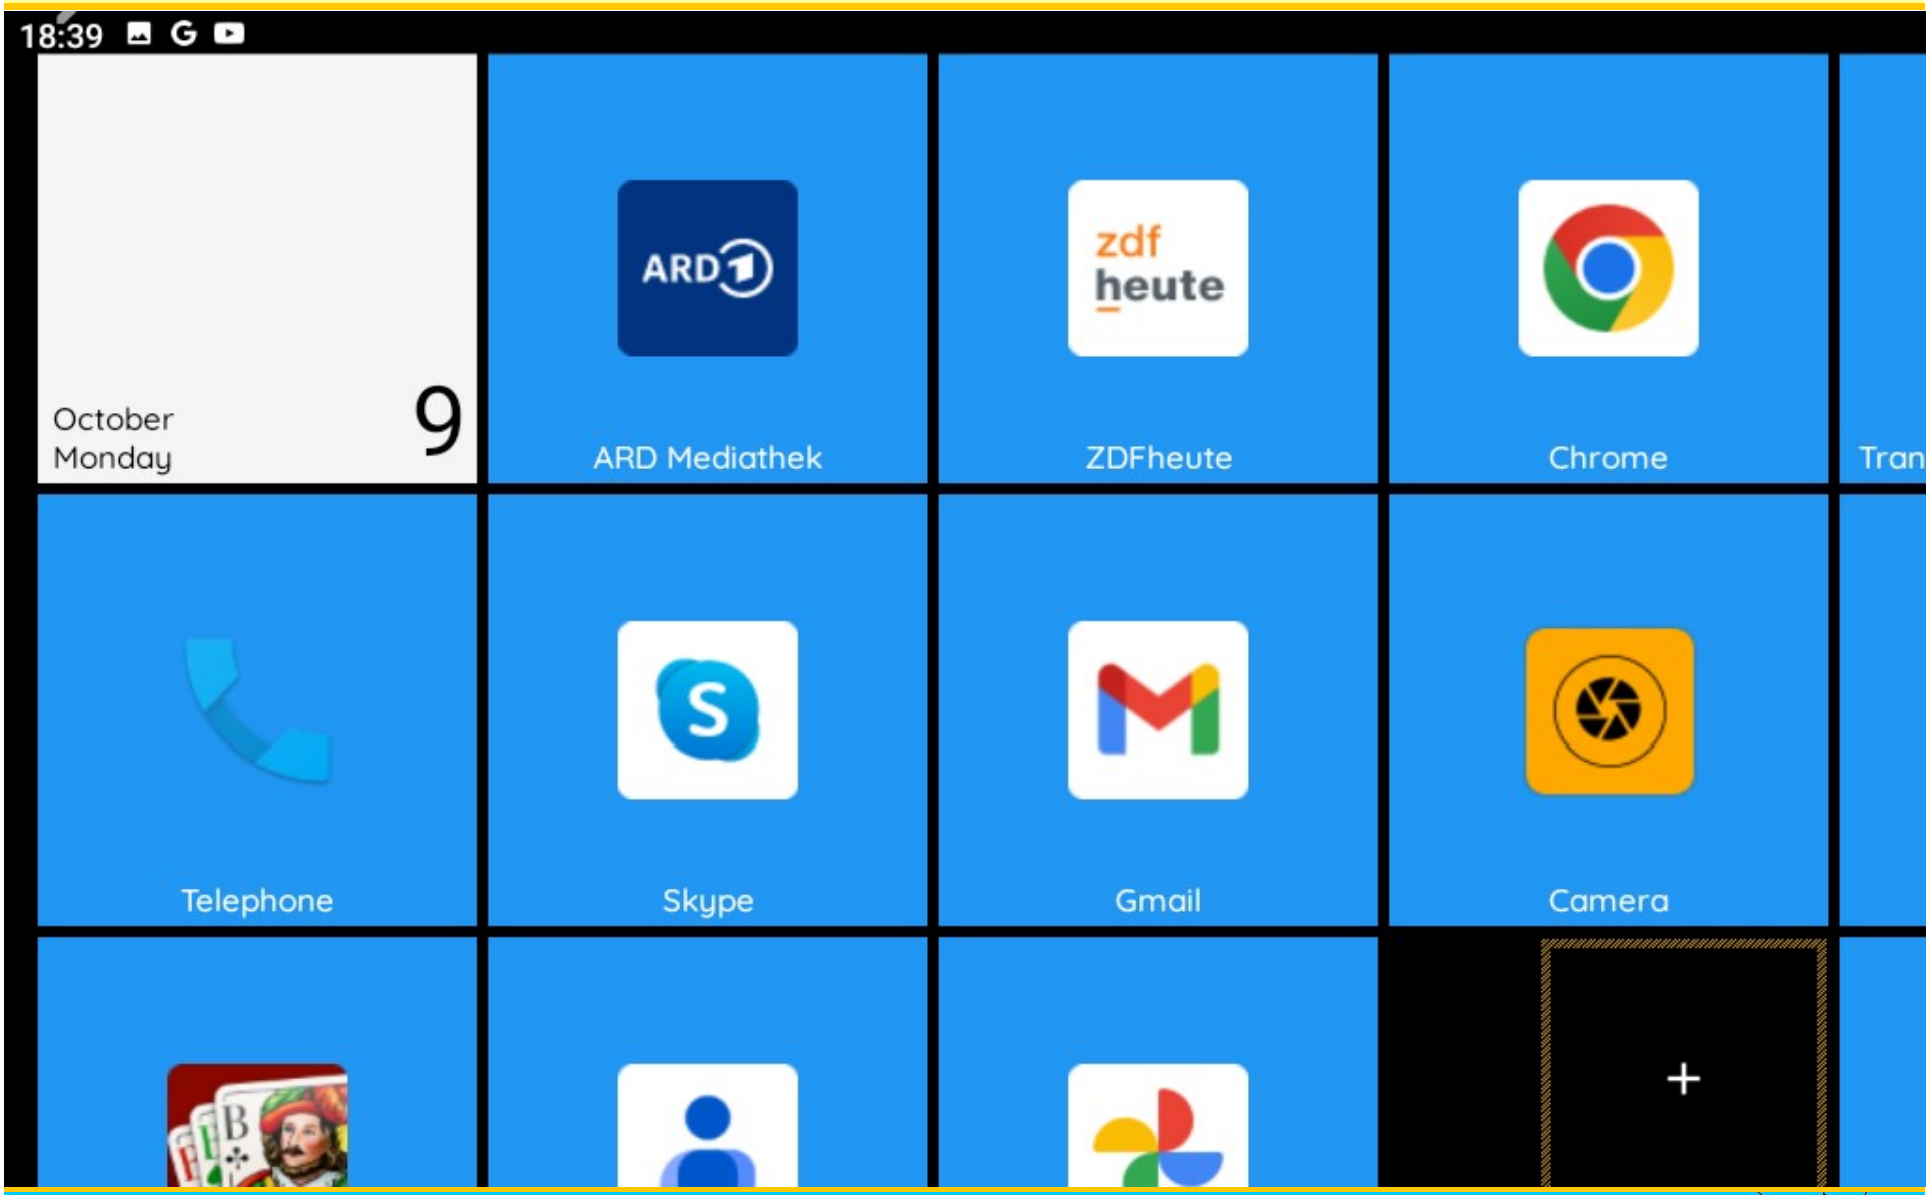

Inserting a programme tile

The programme is already installed,
but not set up as a tile.

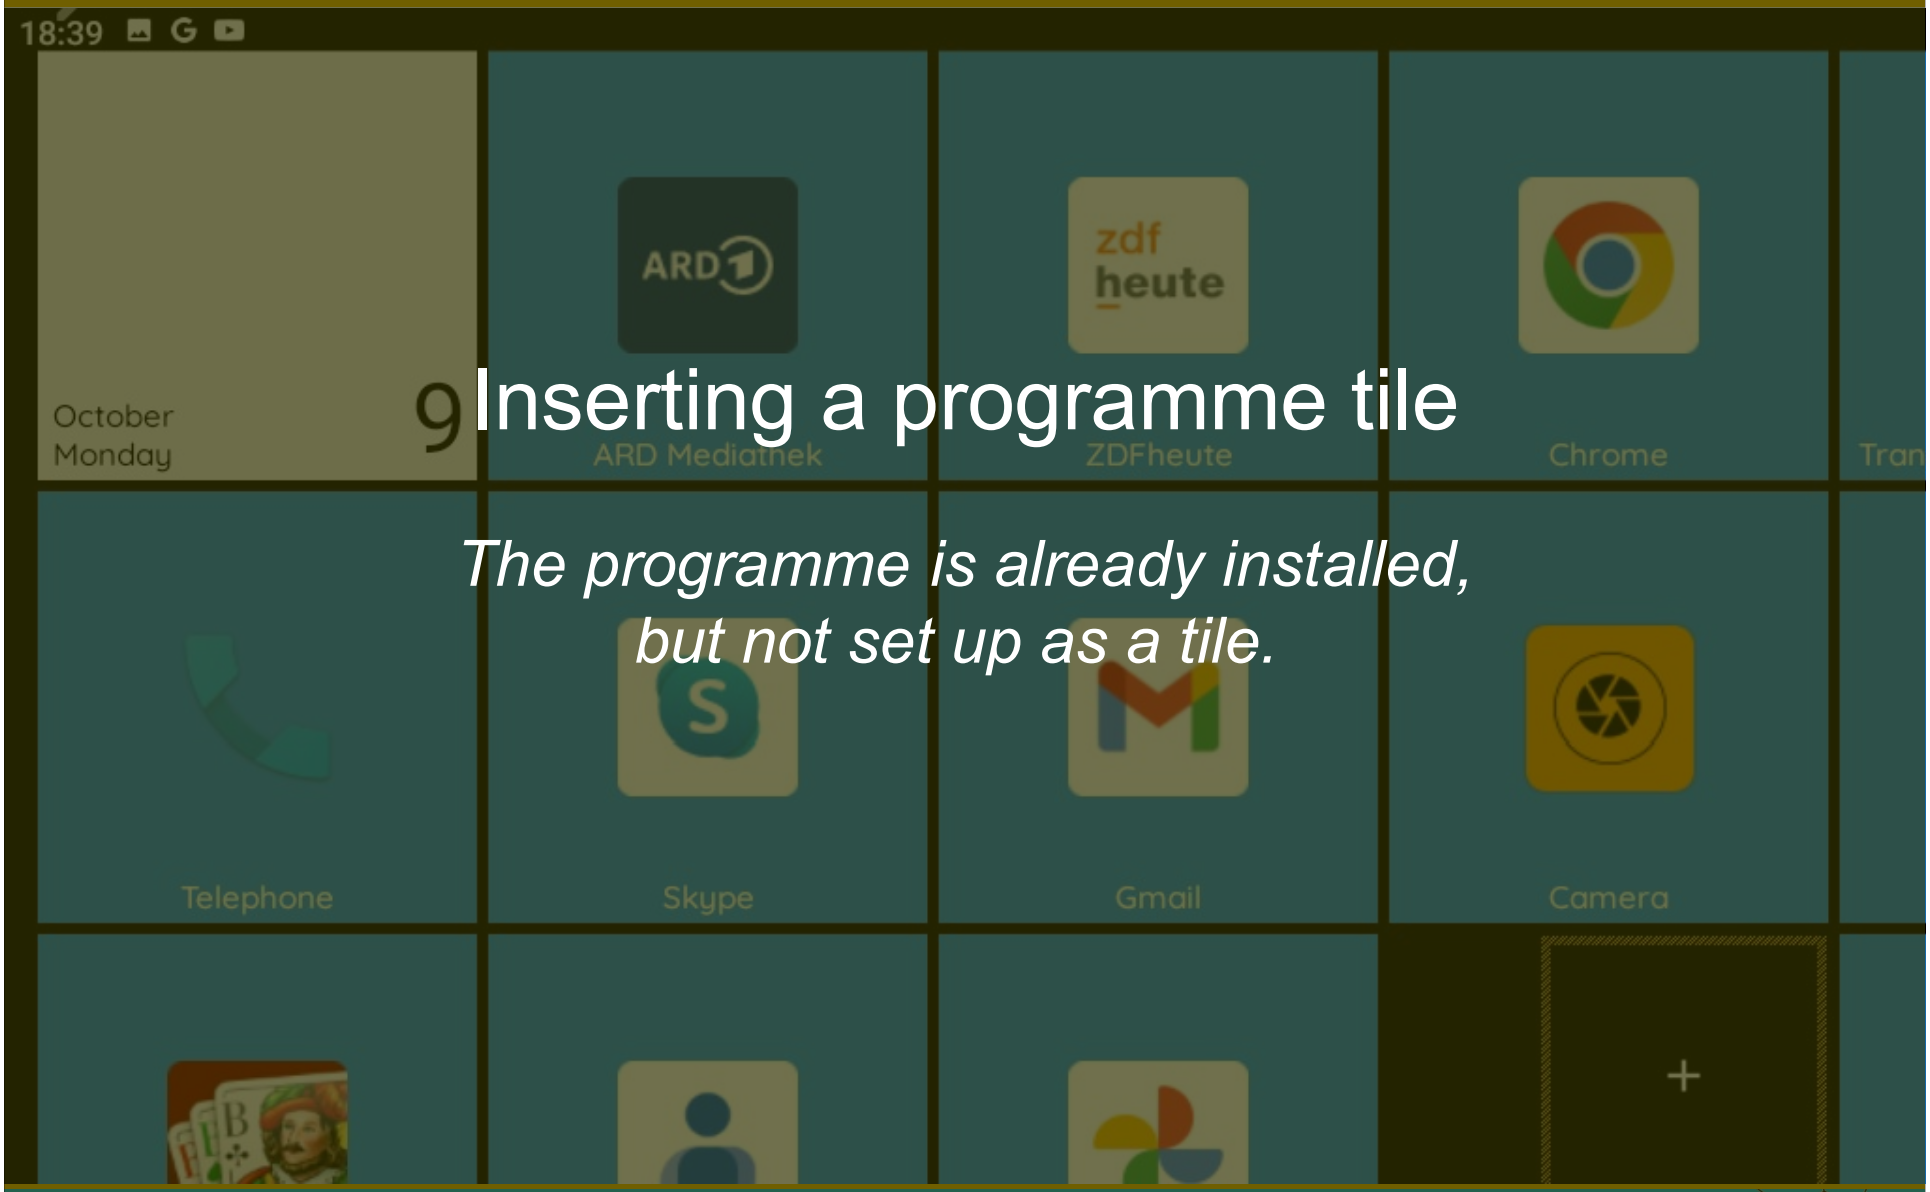

Let us connect you

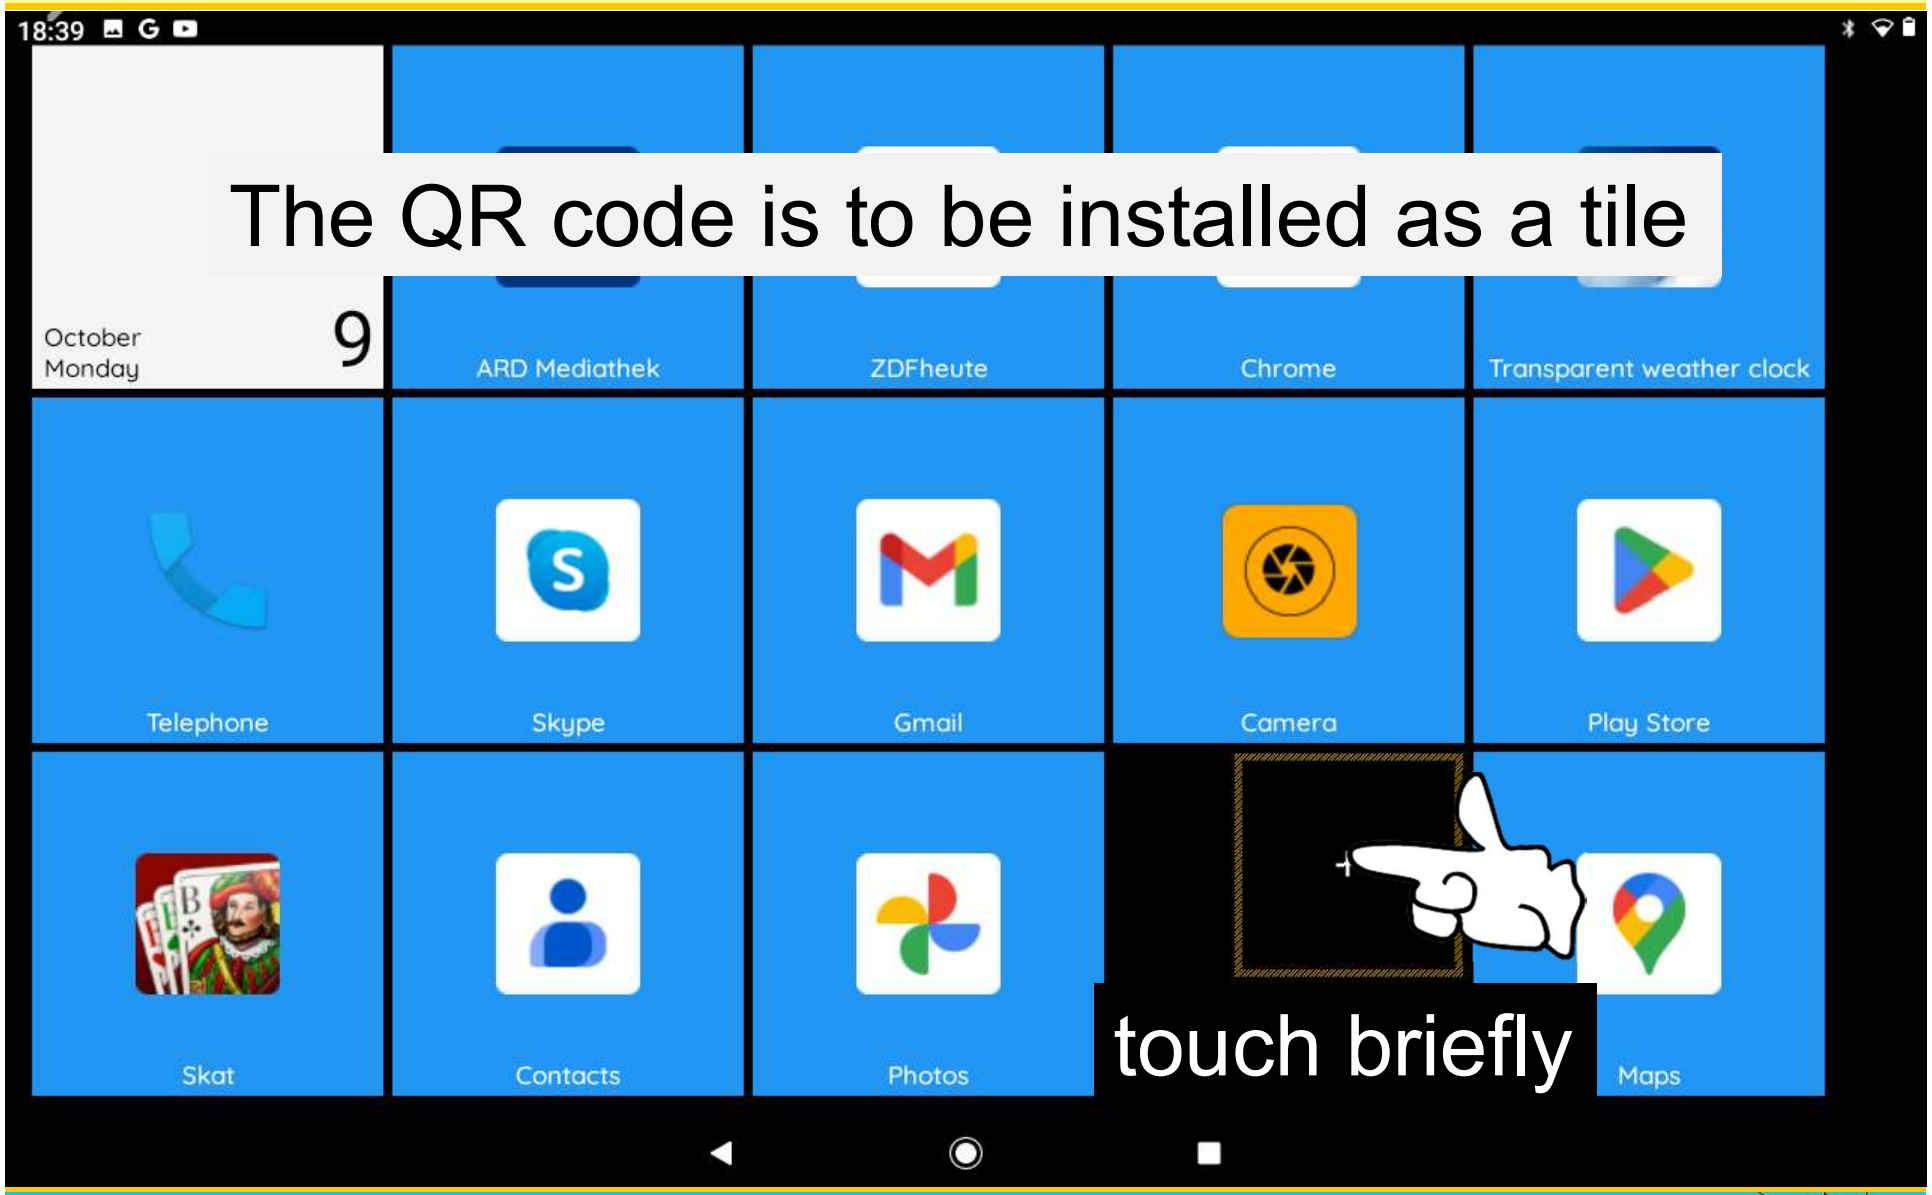

The QR code is to be installed as a tile

touch briefly

Let us connect you

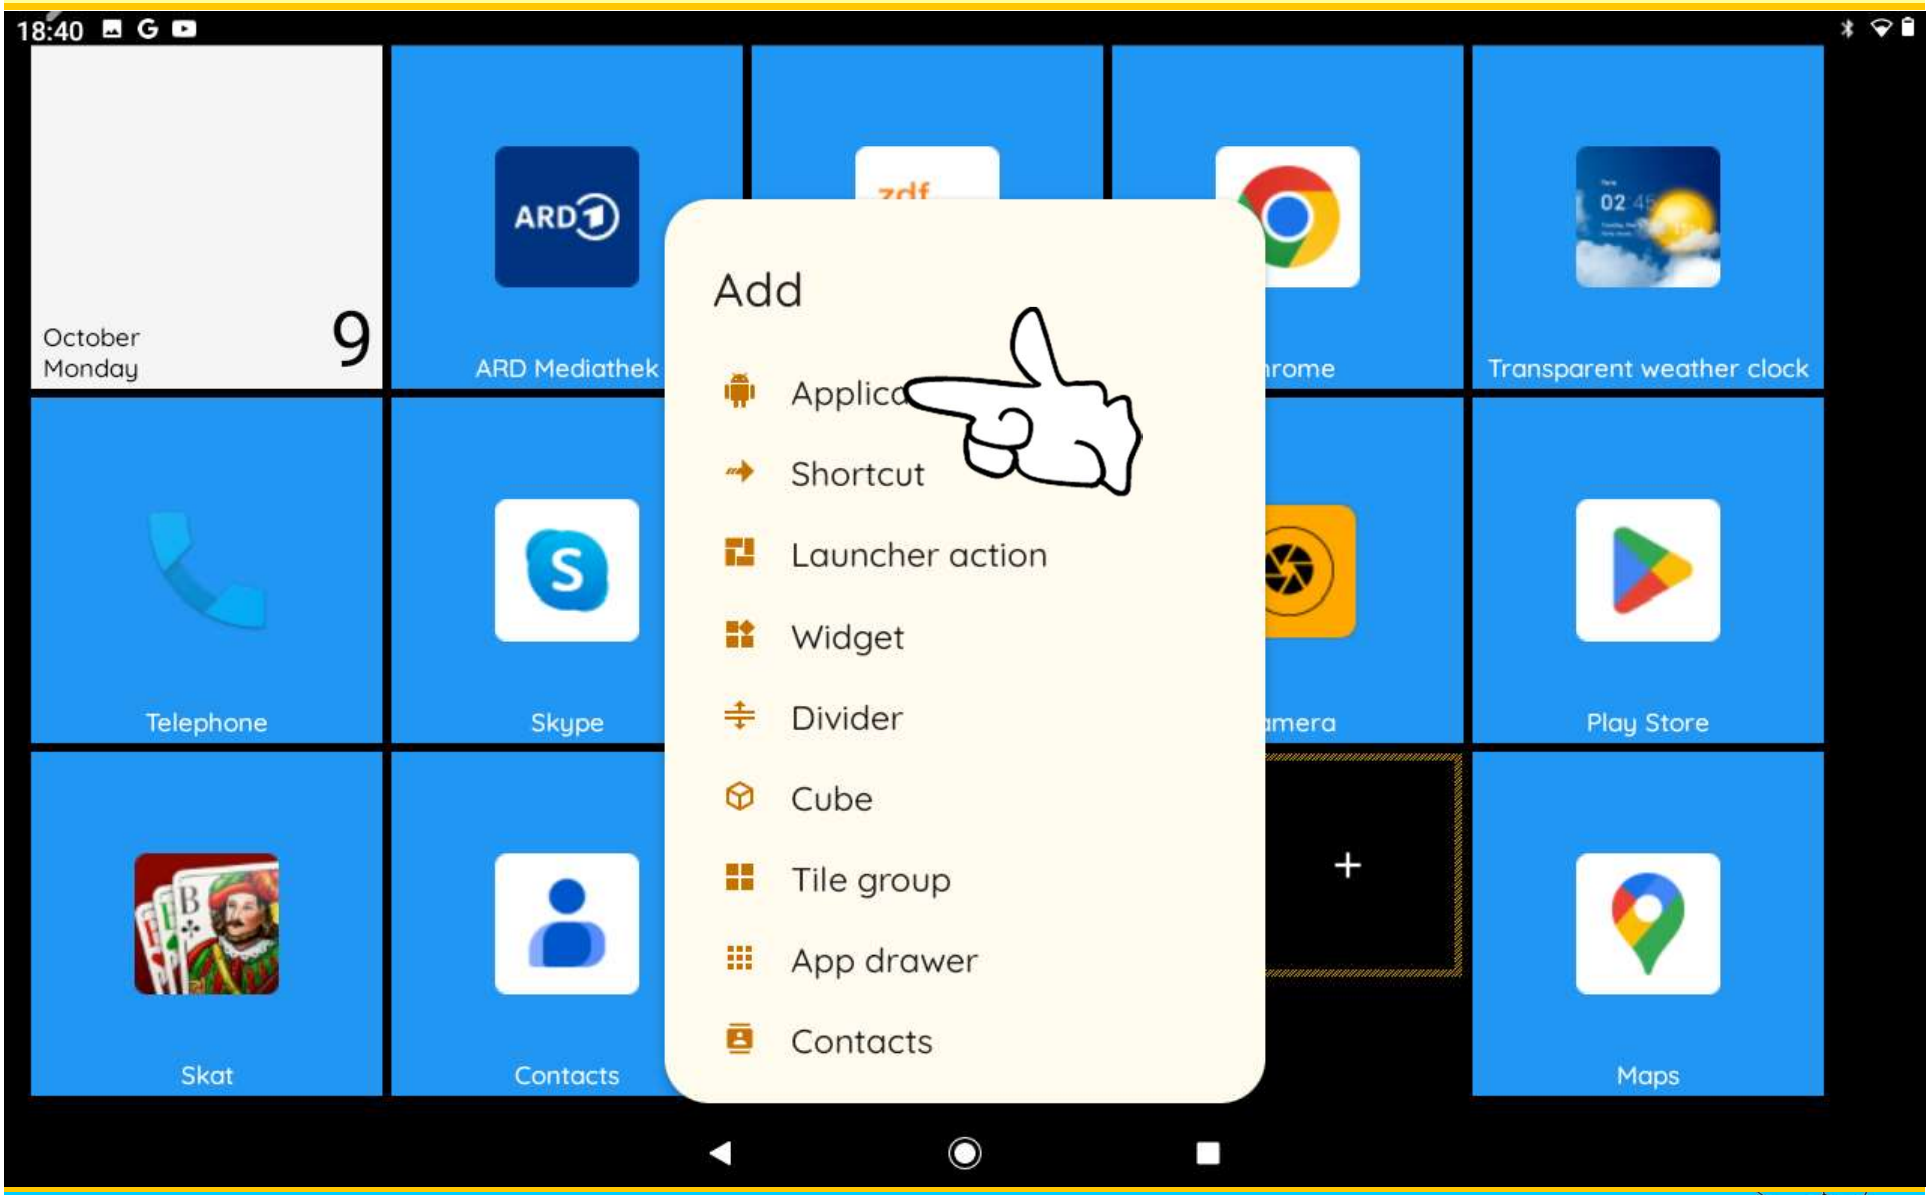

Let us connect you

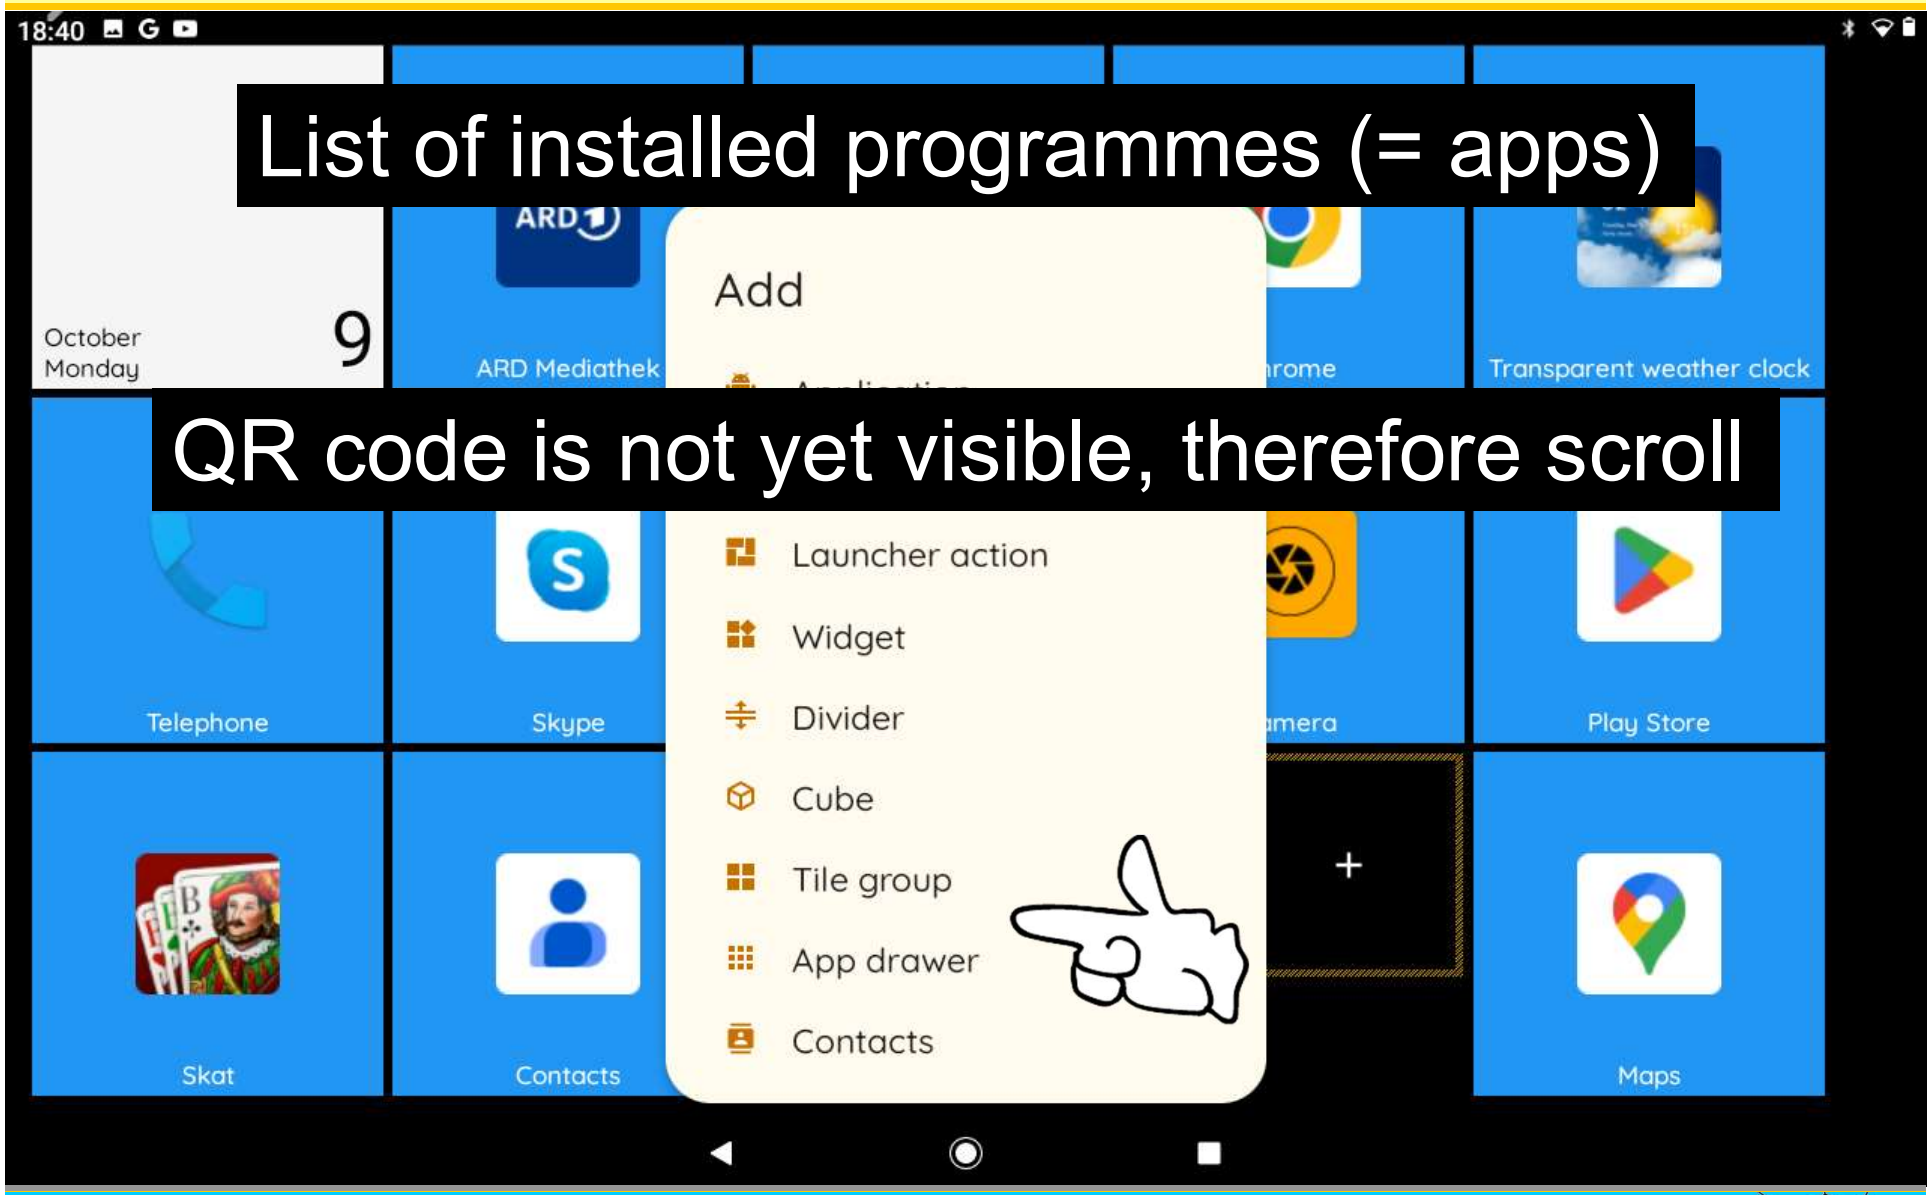

Let us connect you

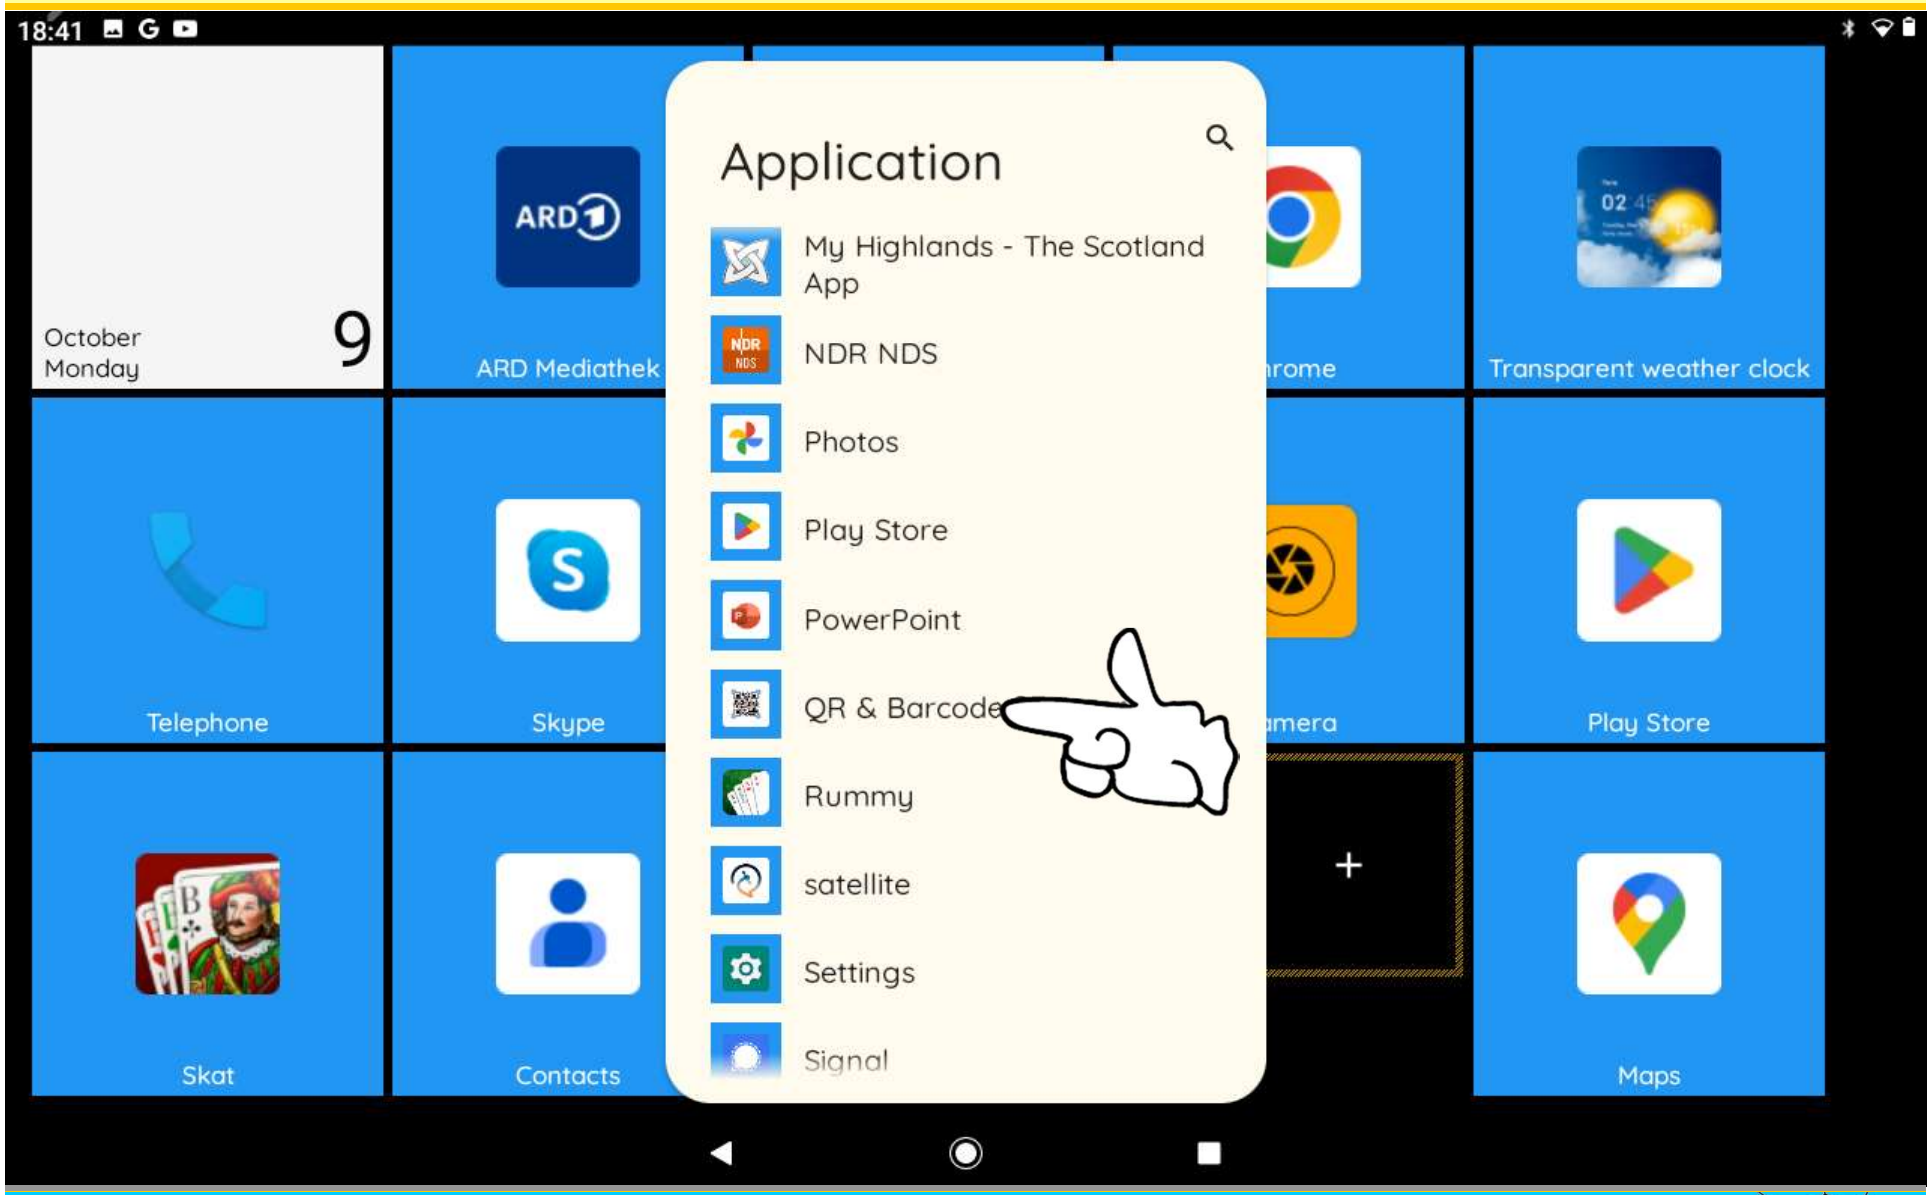

Tap on QR & Barcode to insert corresponding tile

Let us connect you

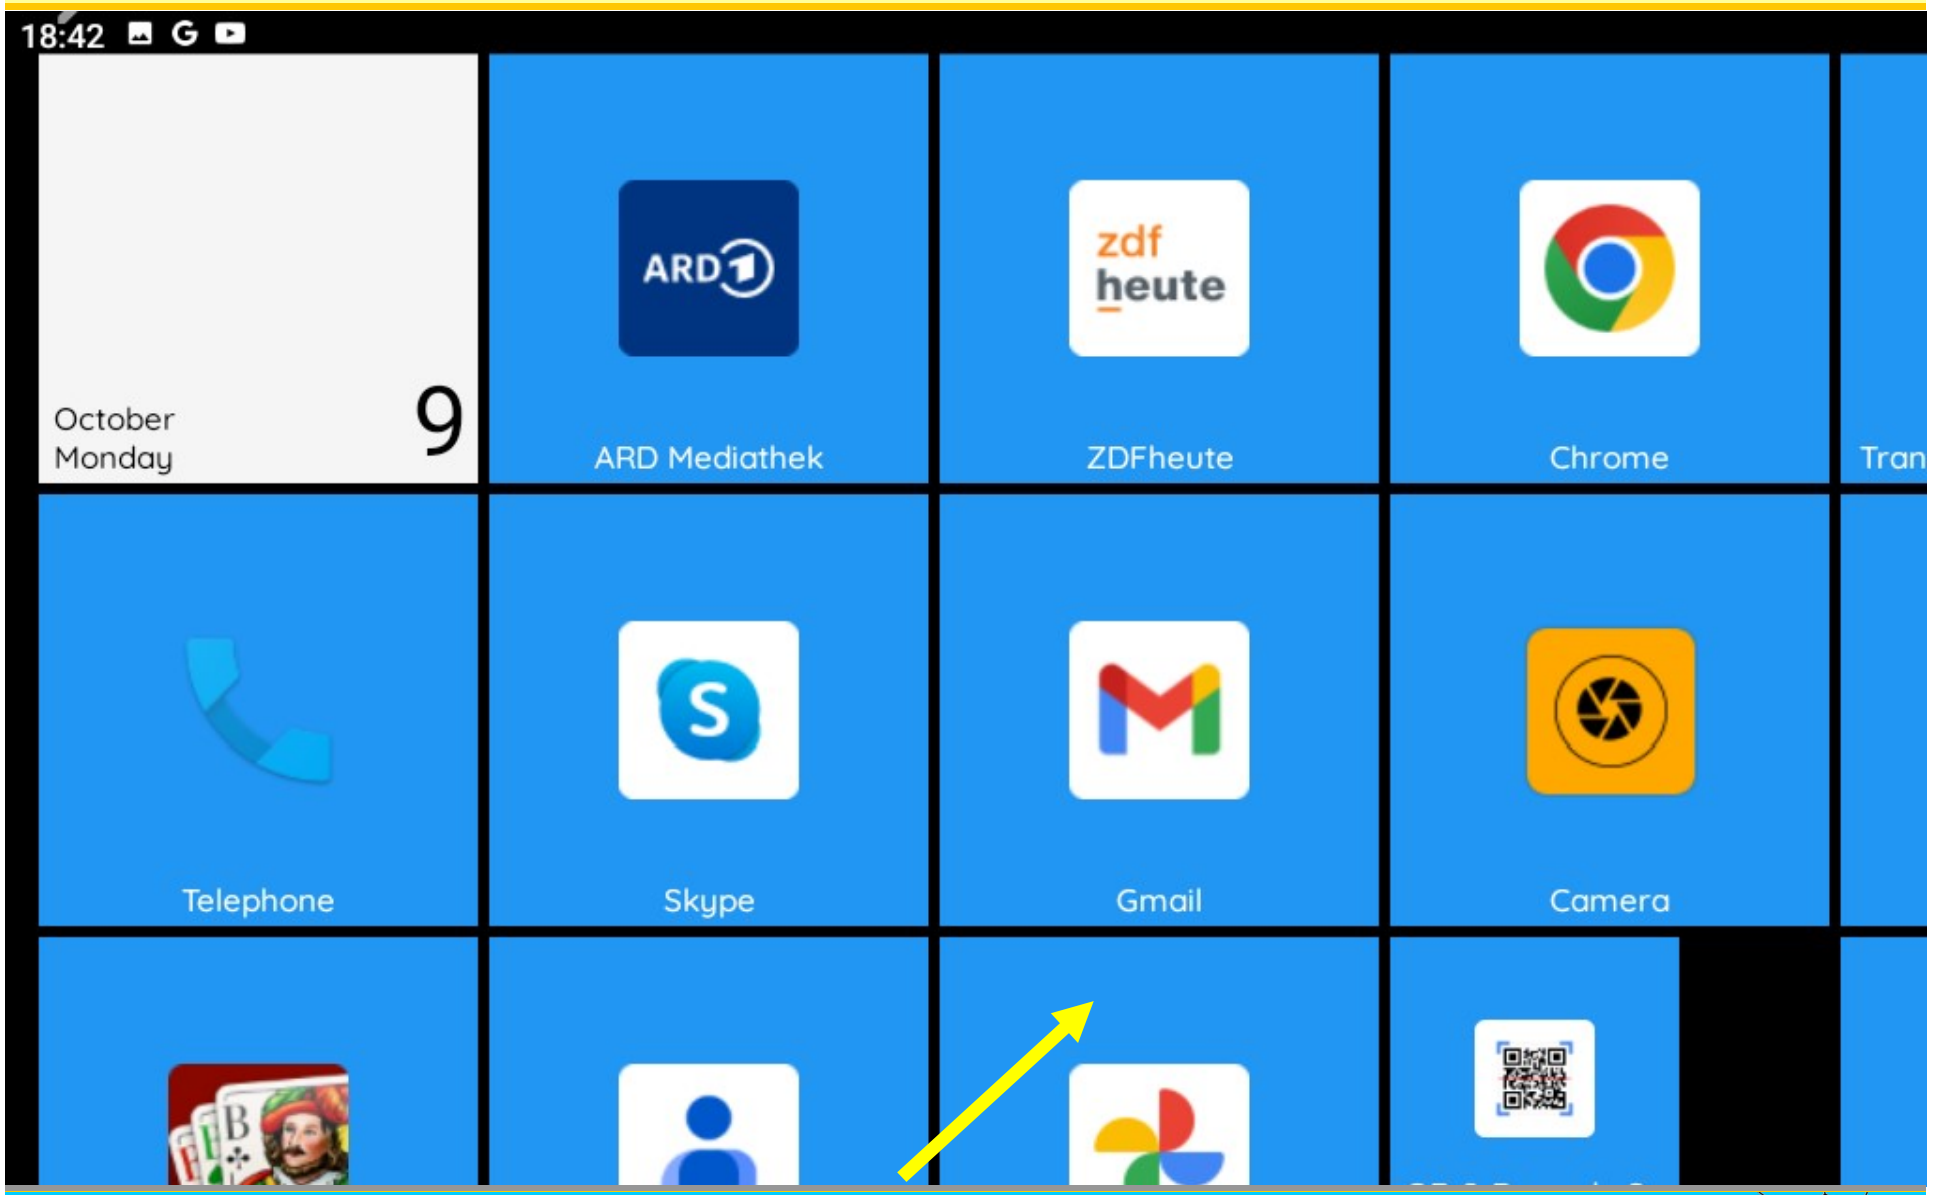

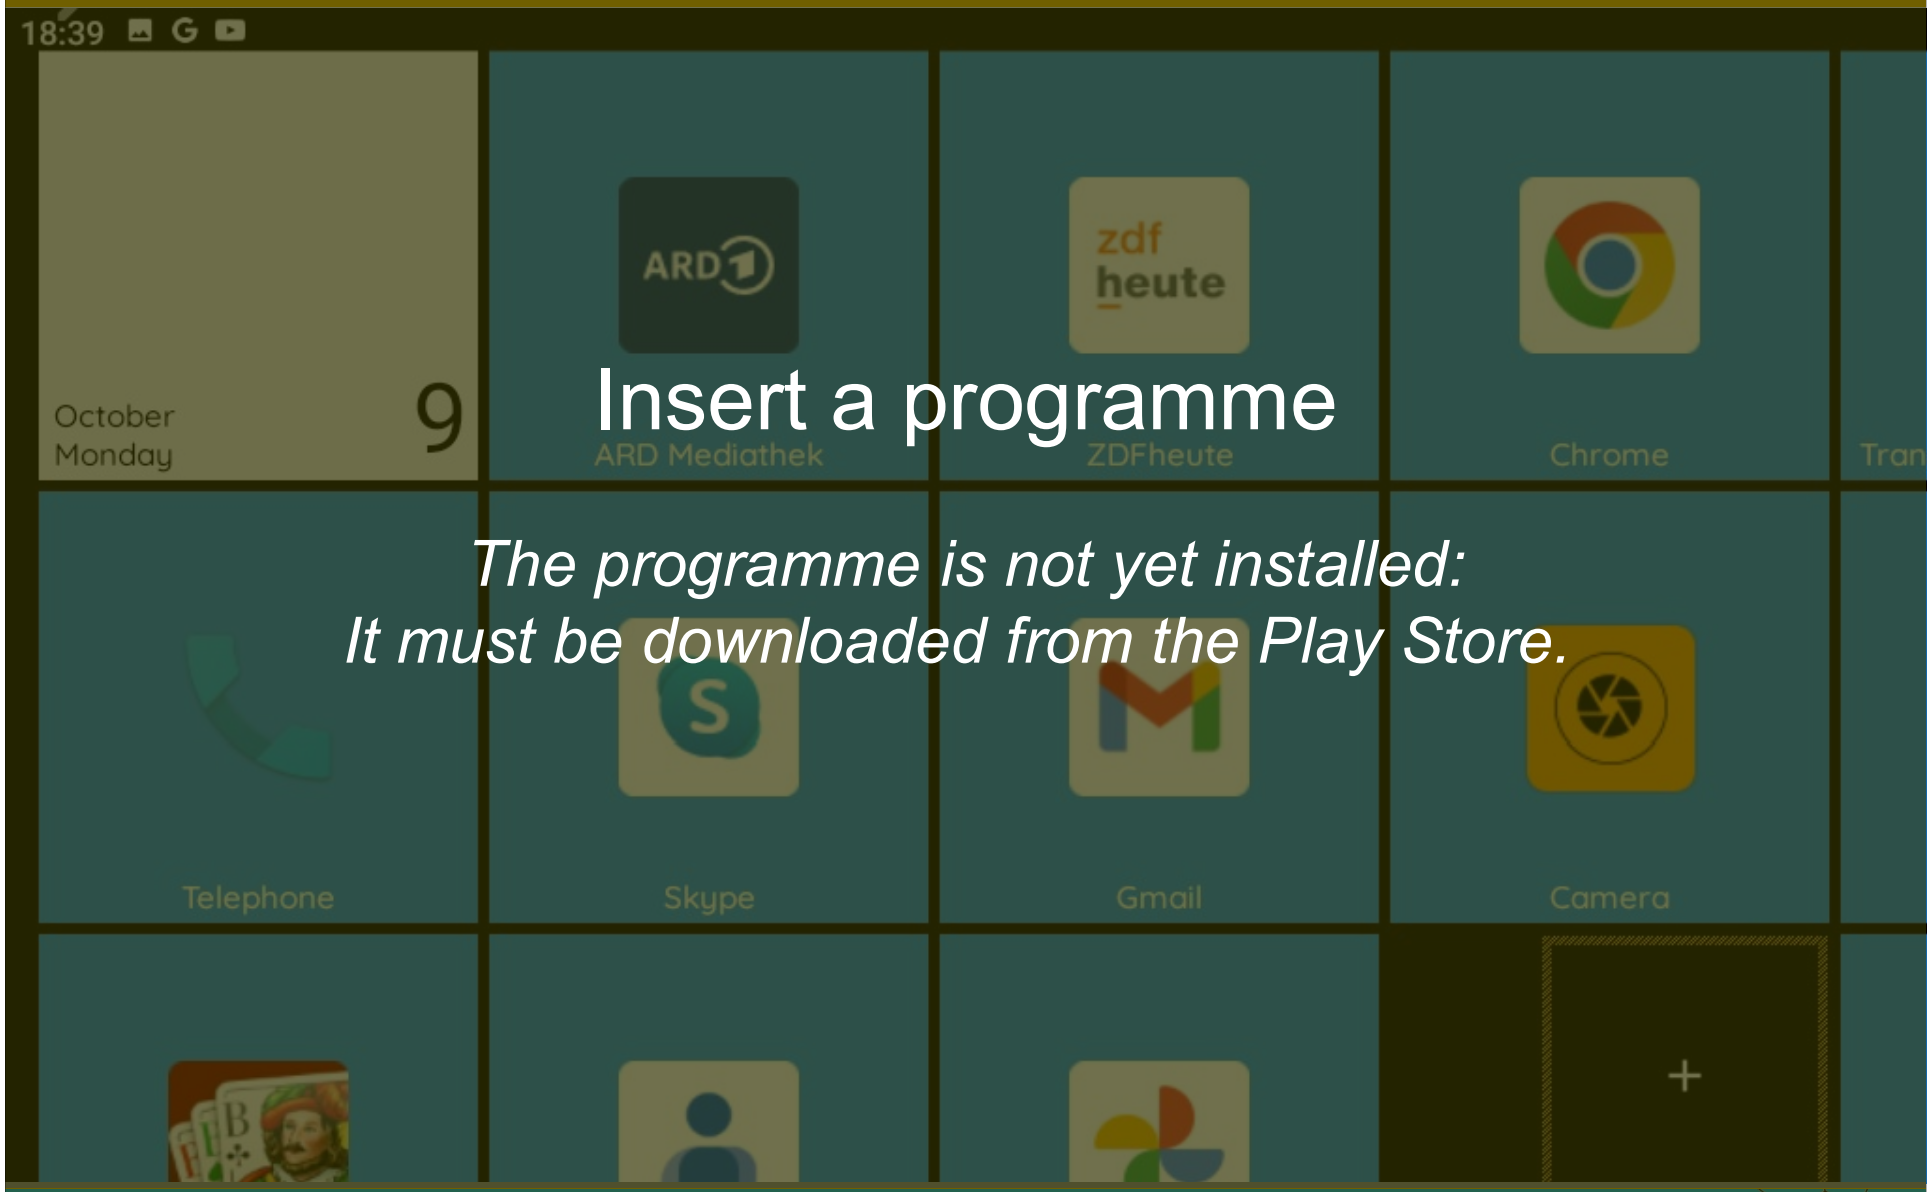

Insert a programme

The programme is not yet installed:
It must be downloaded from the Play Store.

Let us connect you

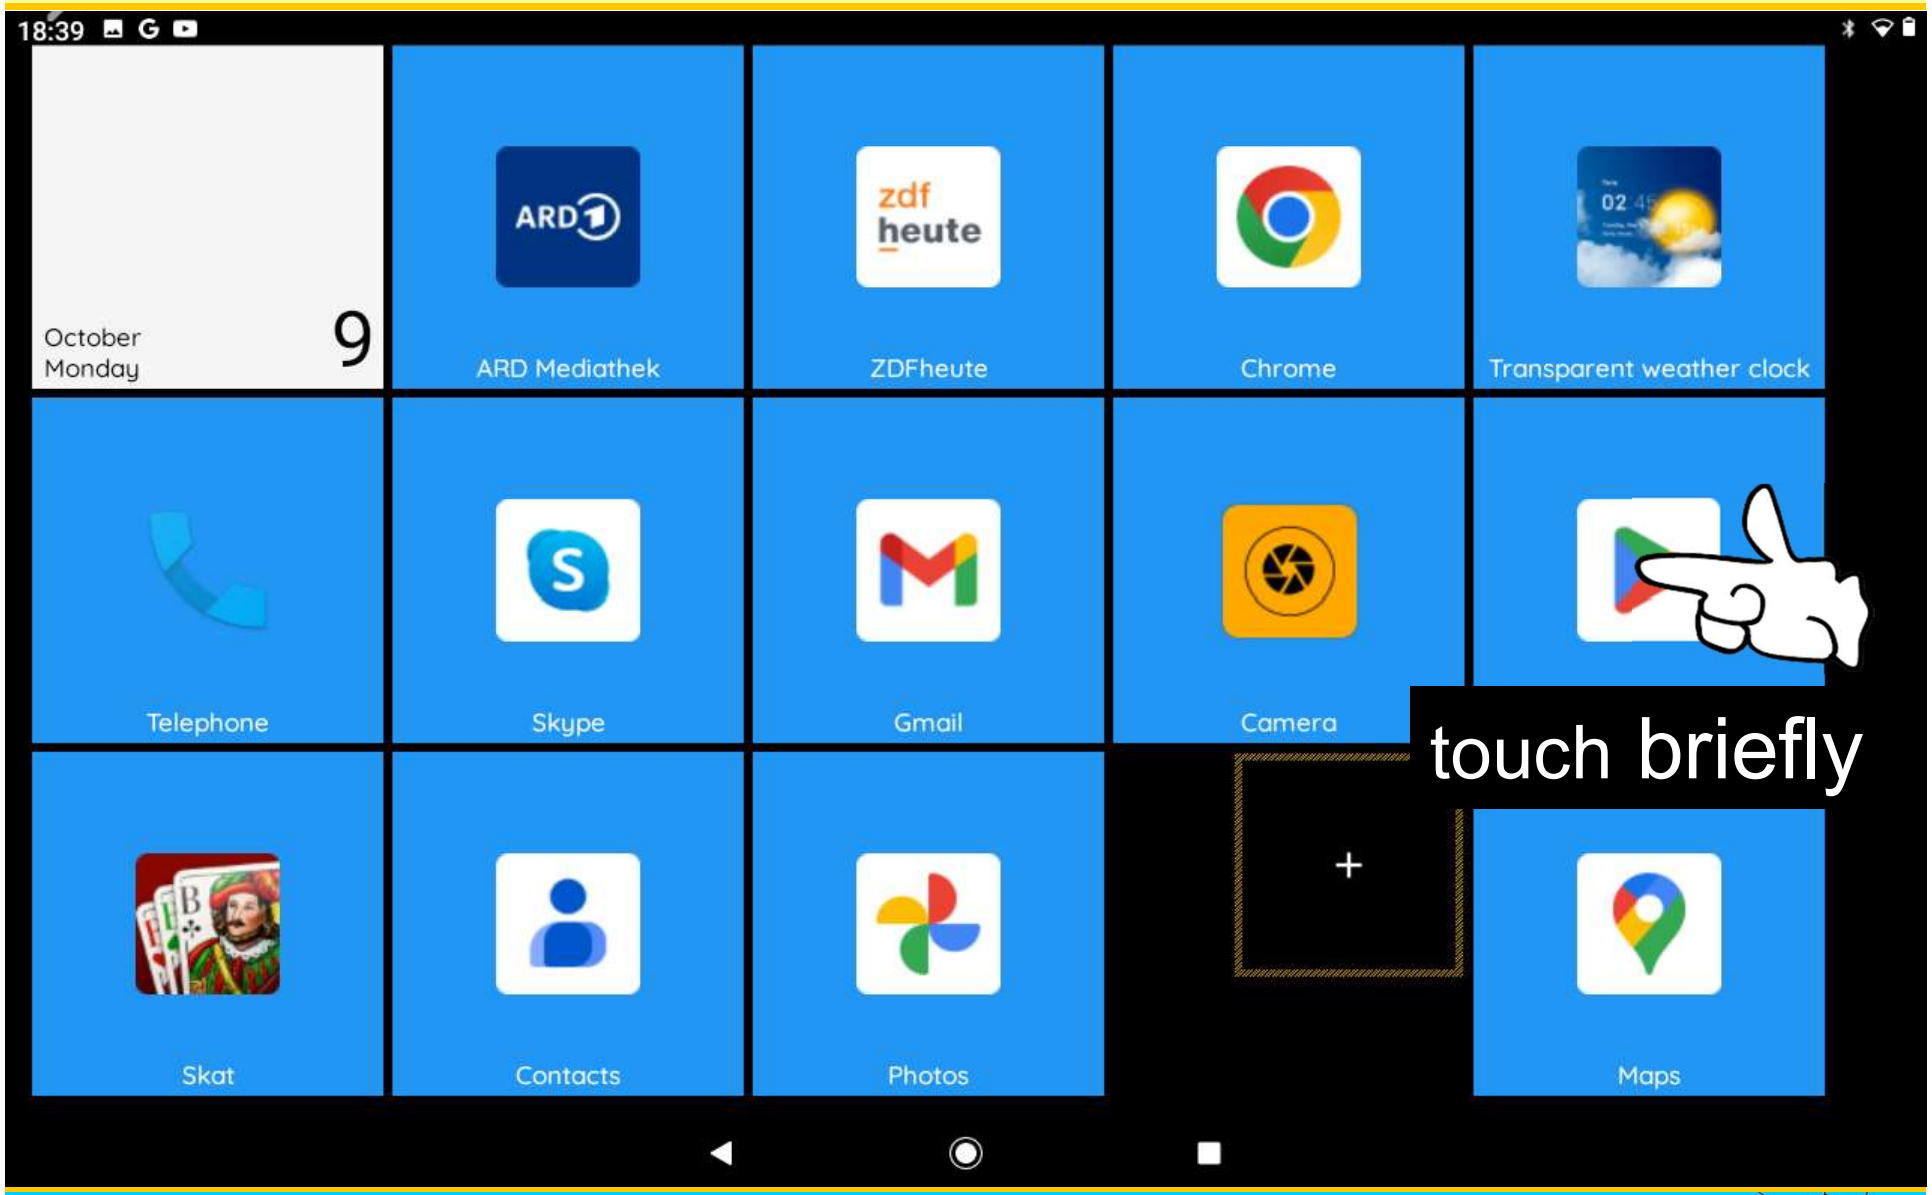

Let us connect you

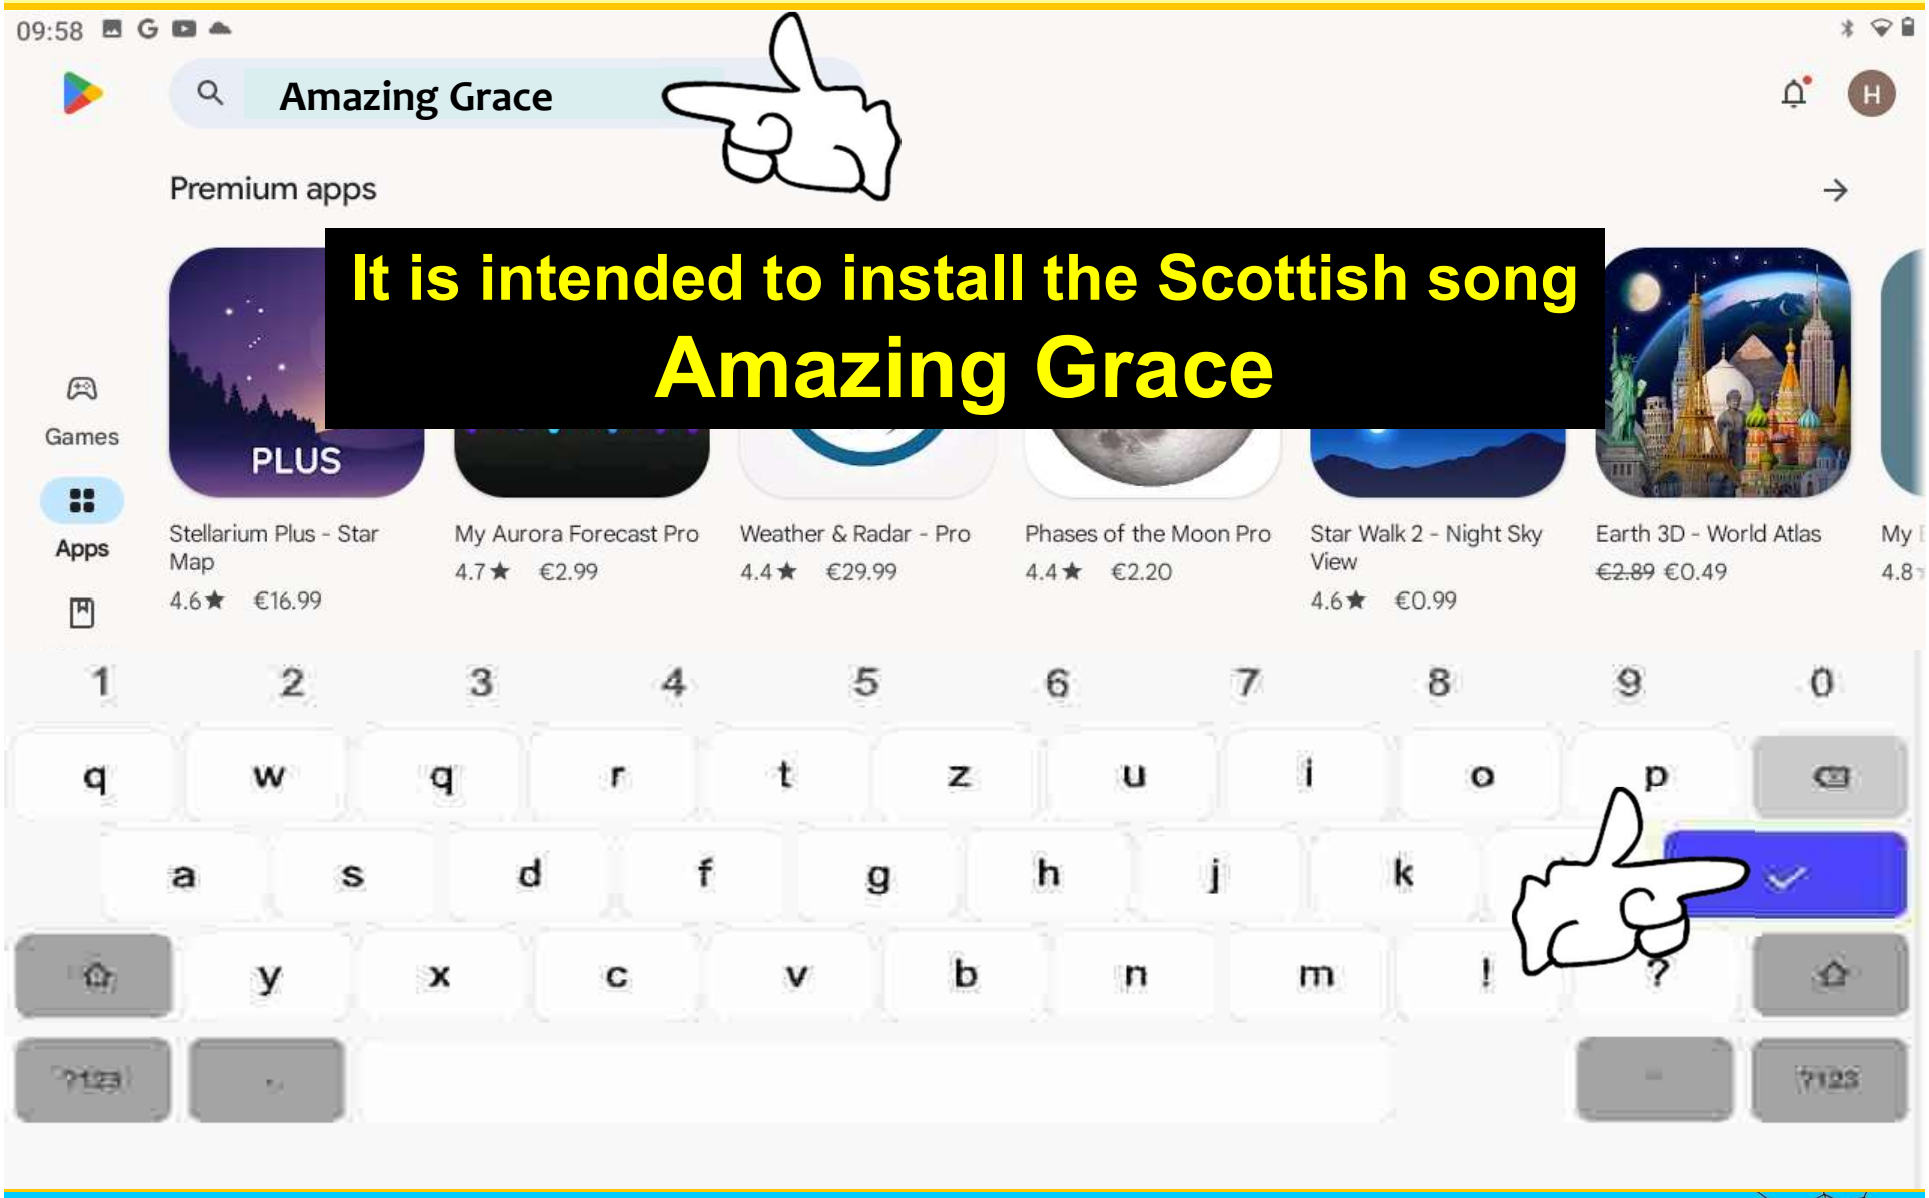

Let us connect you

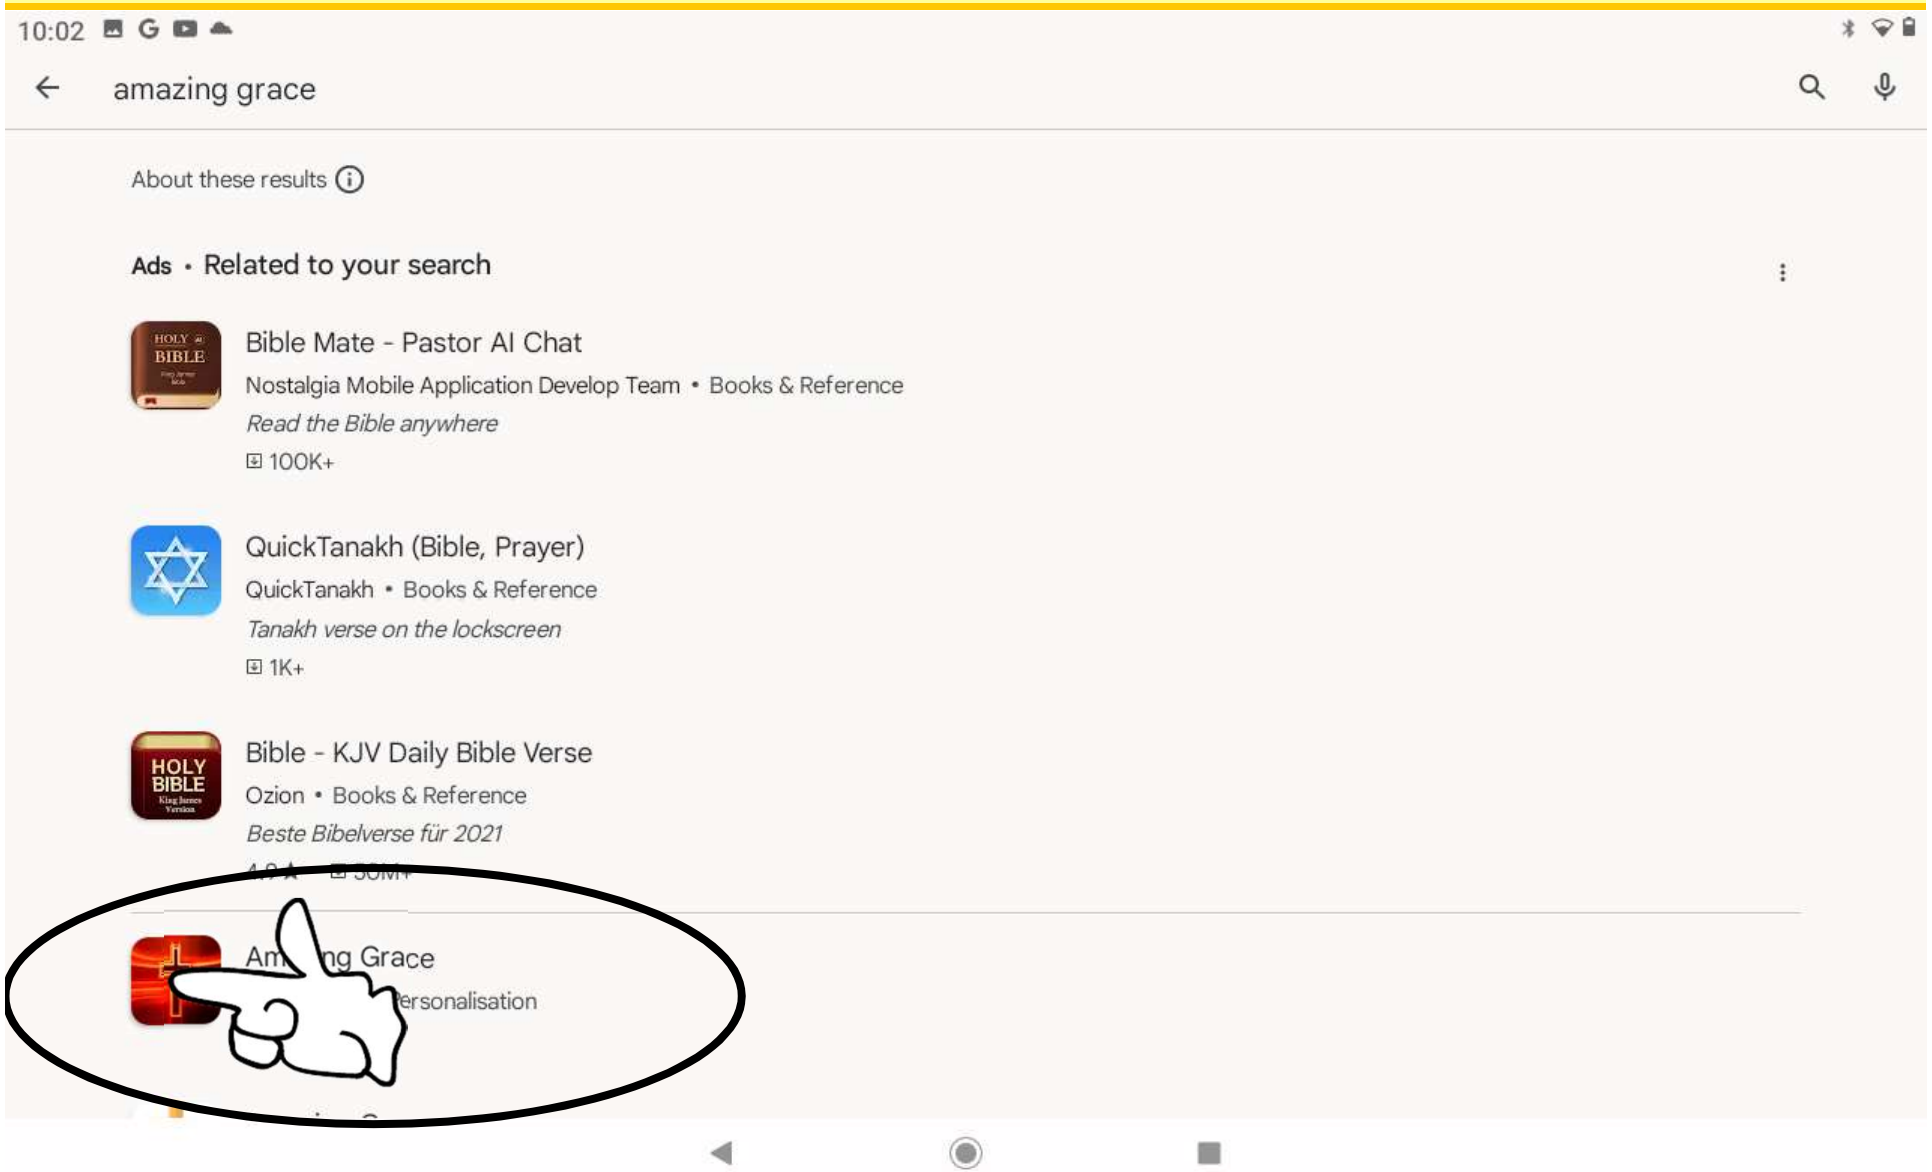

Let us connect you

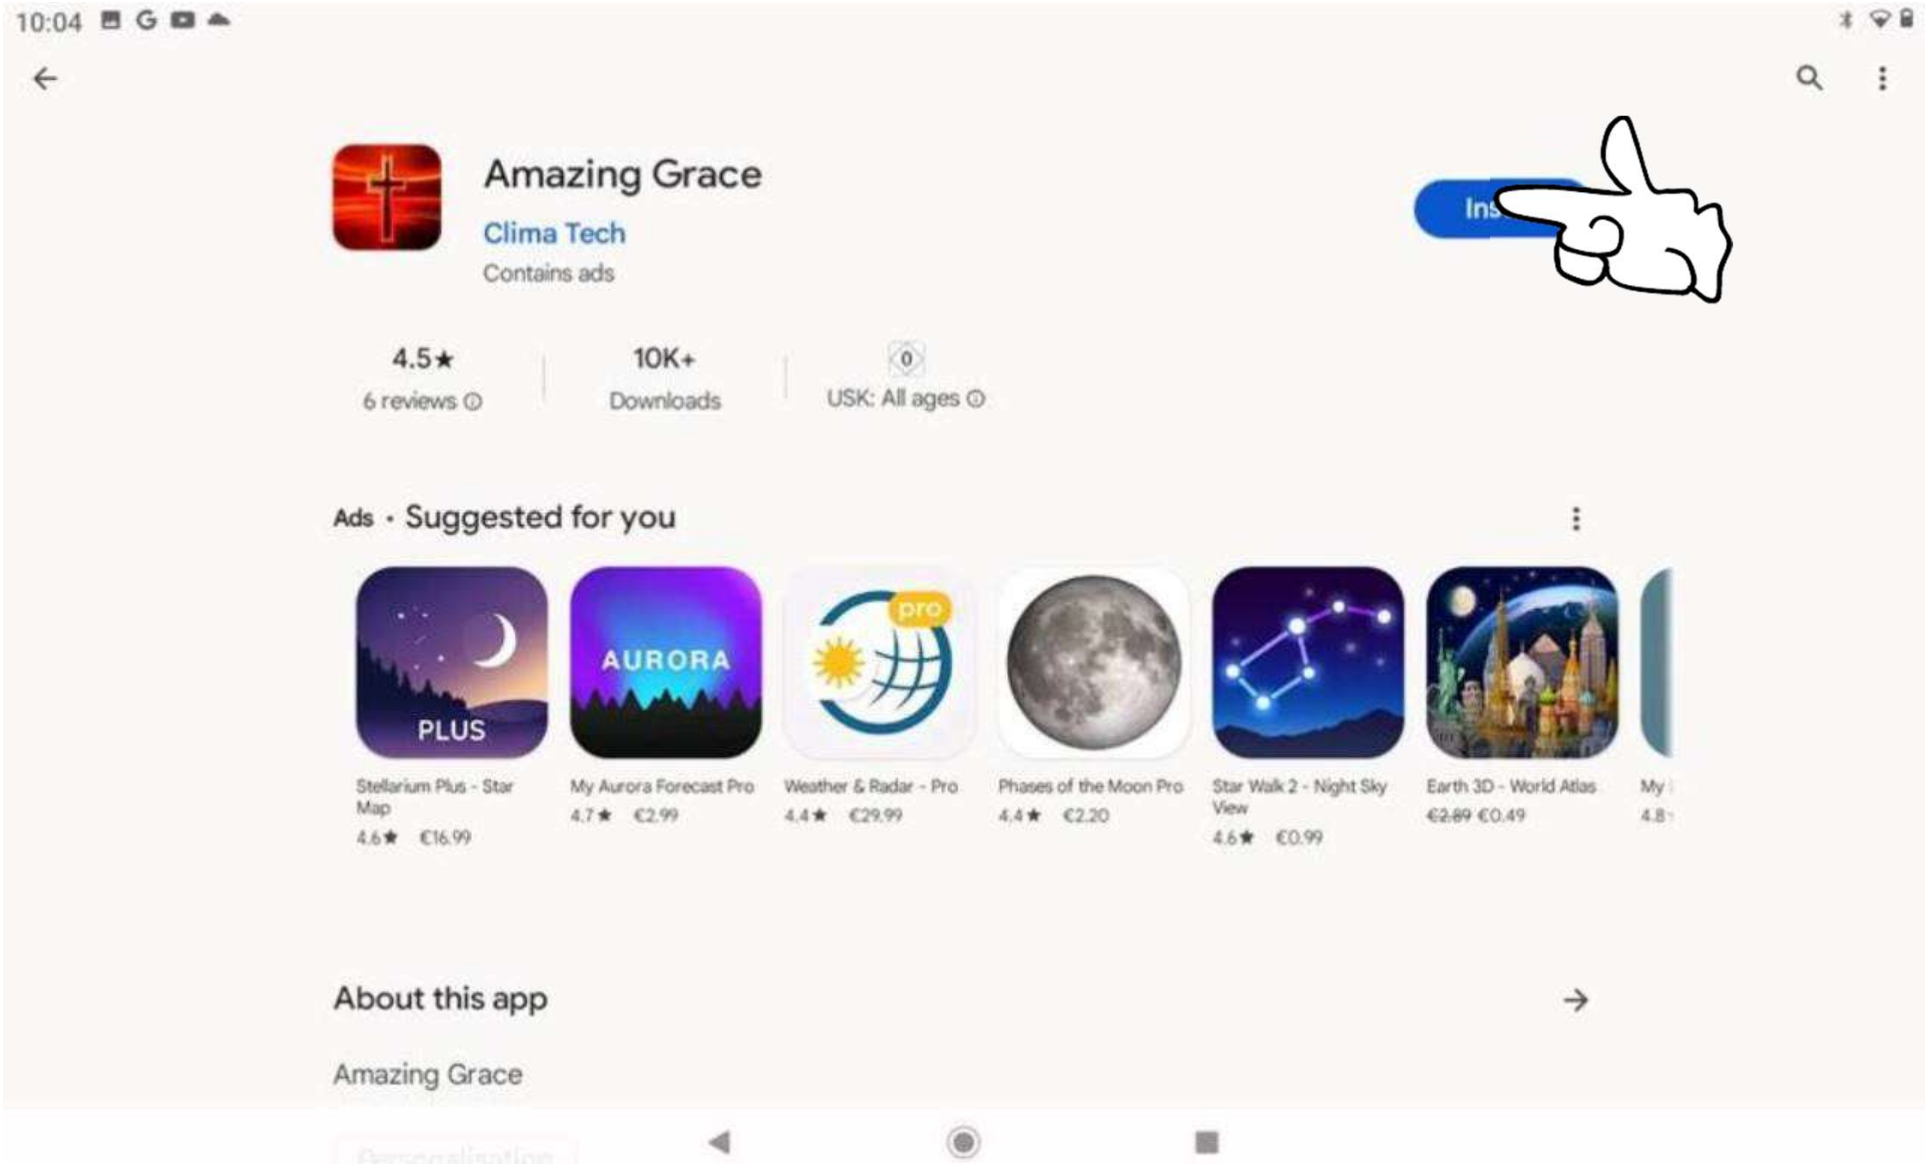

Loading progress is displayed

Let us connect you

Loading progress will be displayed

Let us connect you

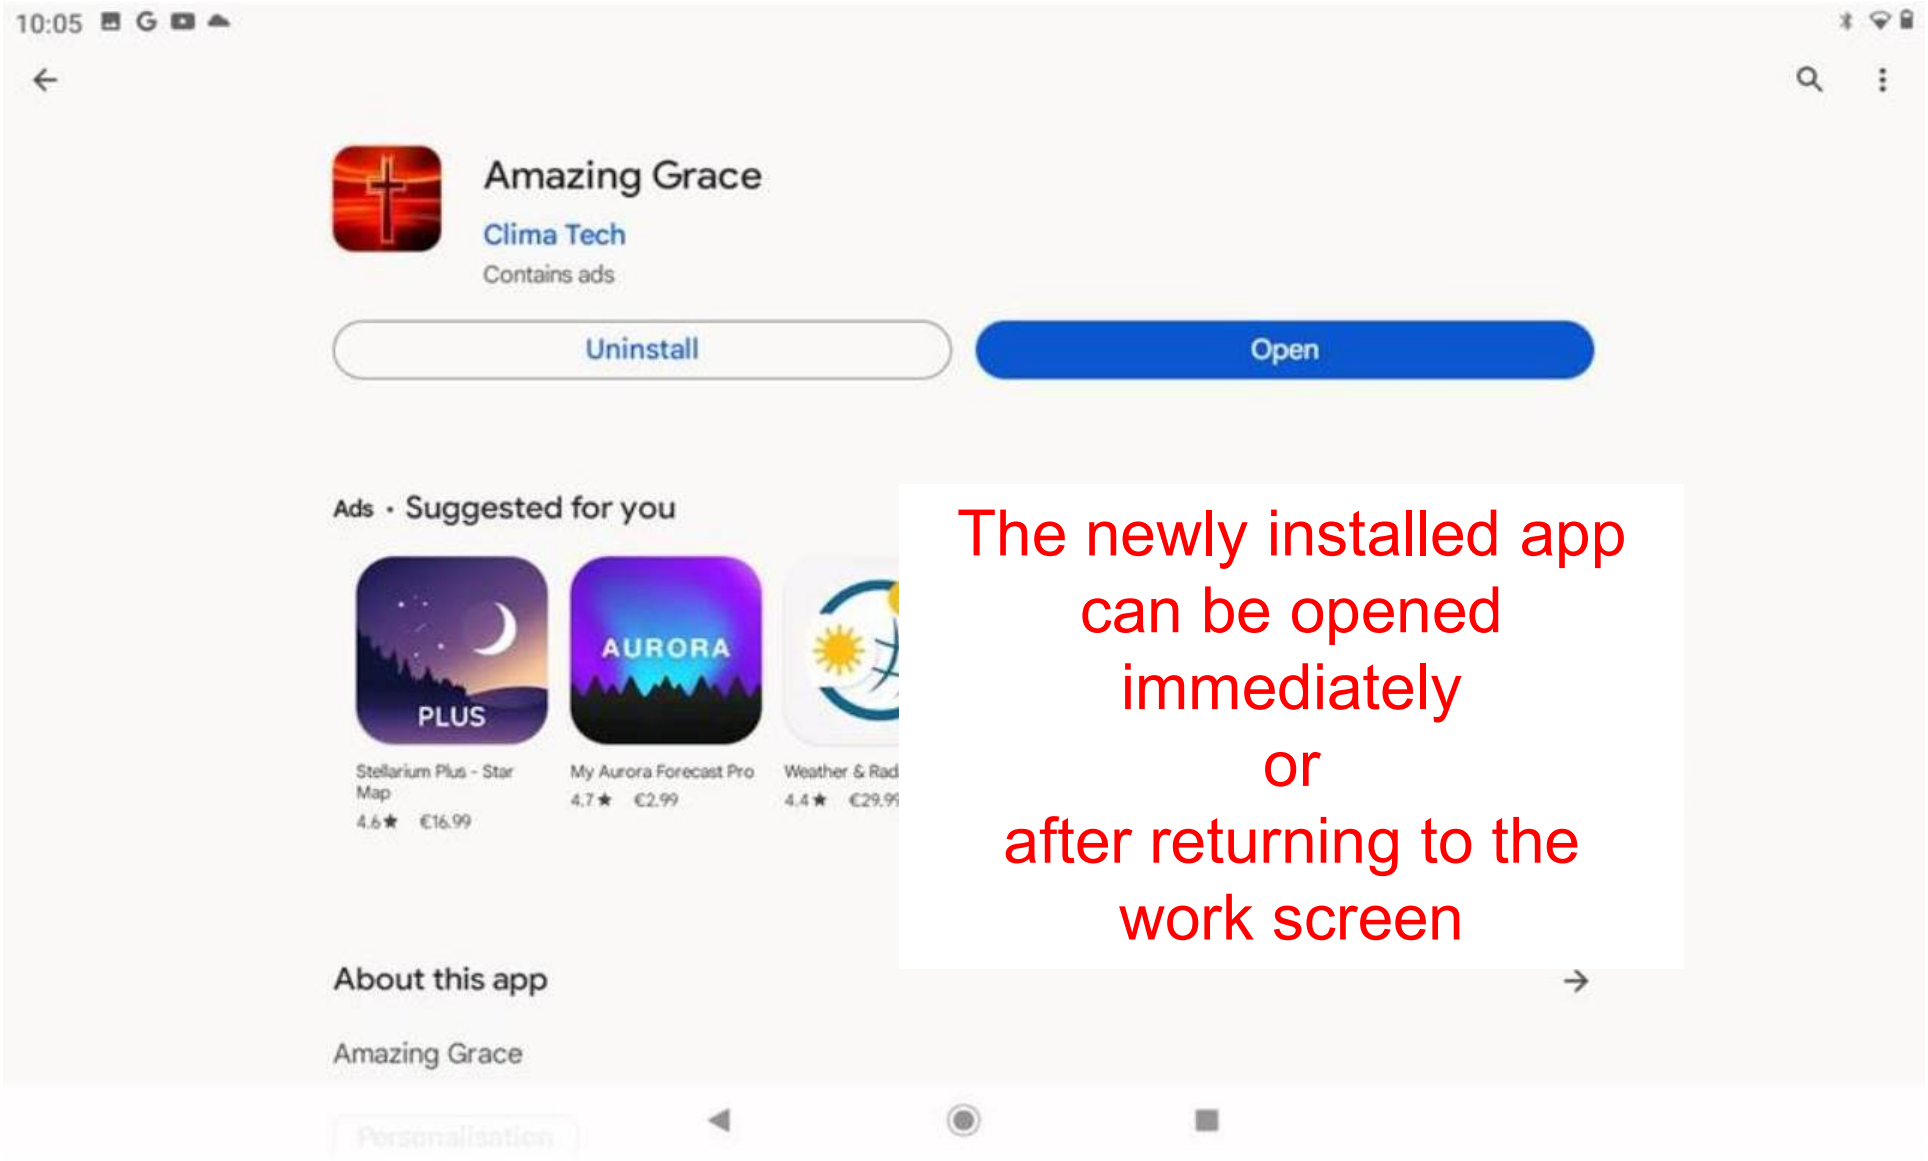

The newly installed app
can be opened
immediately
or
after returning to the
work screen

Let us connect you

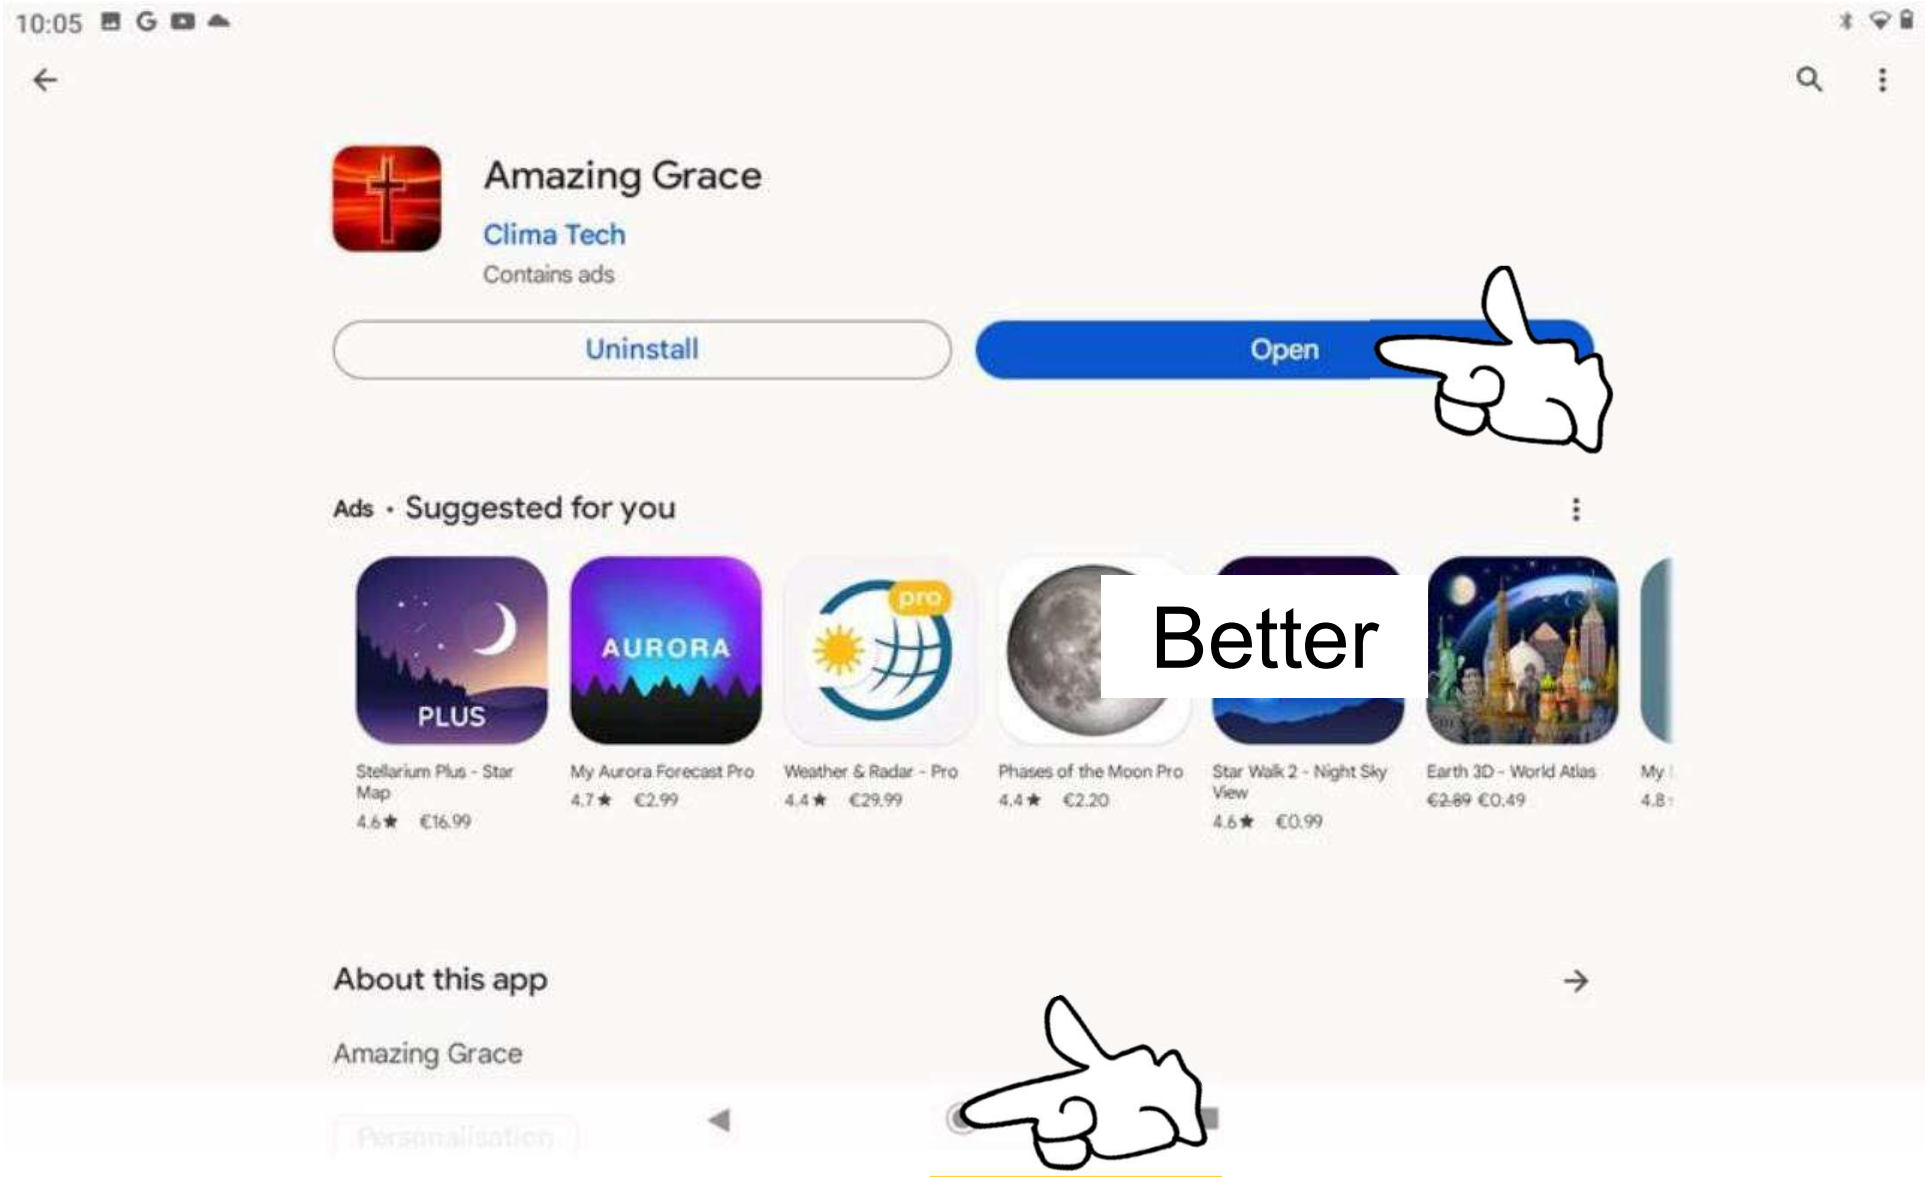

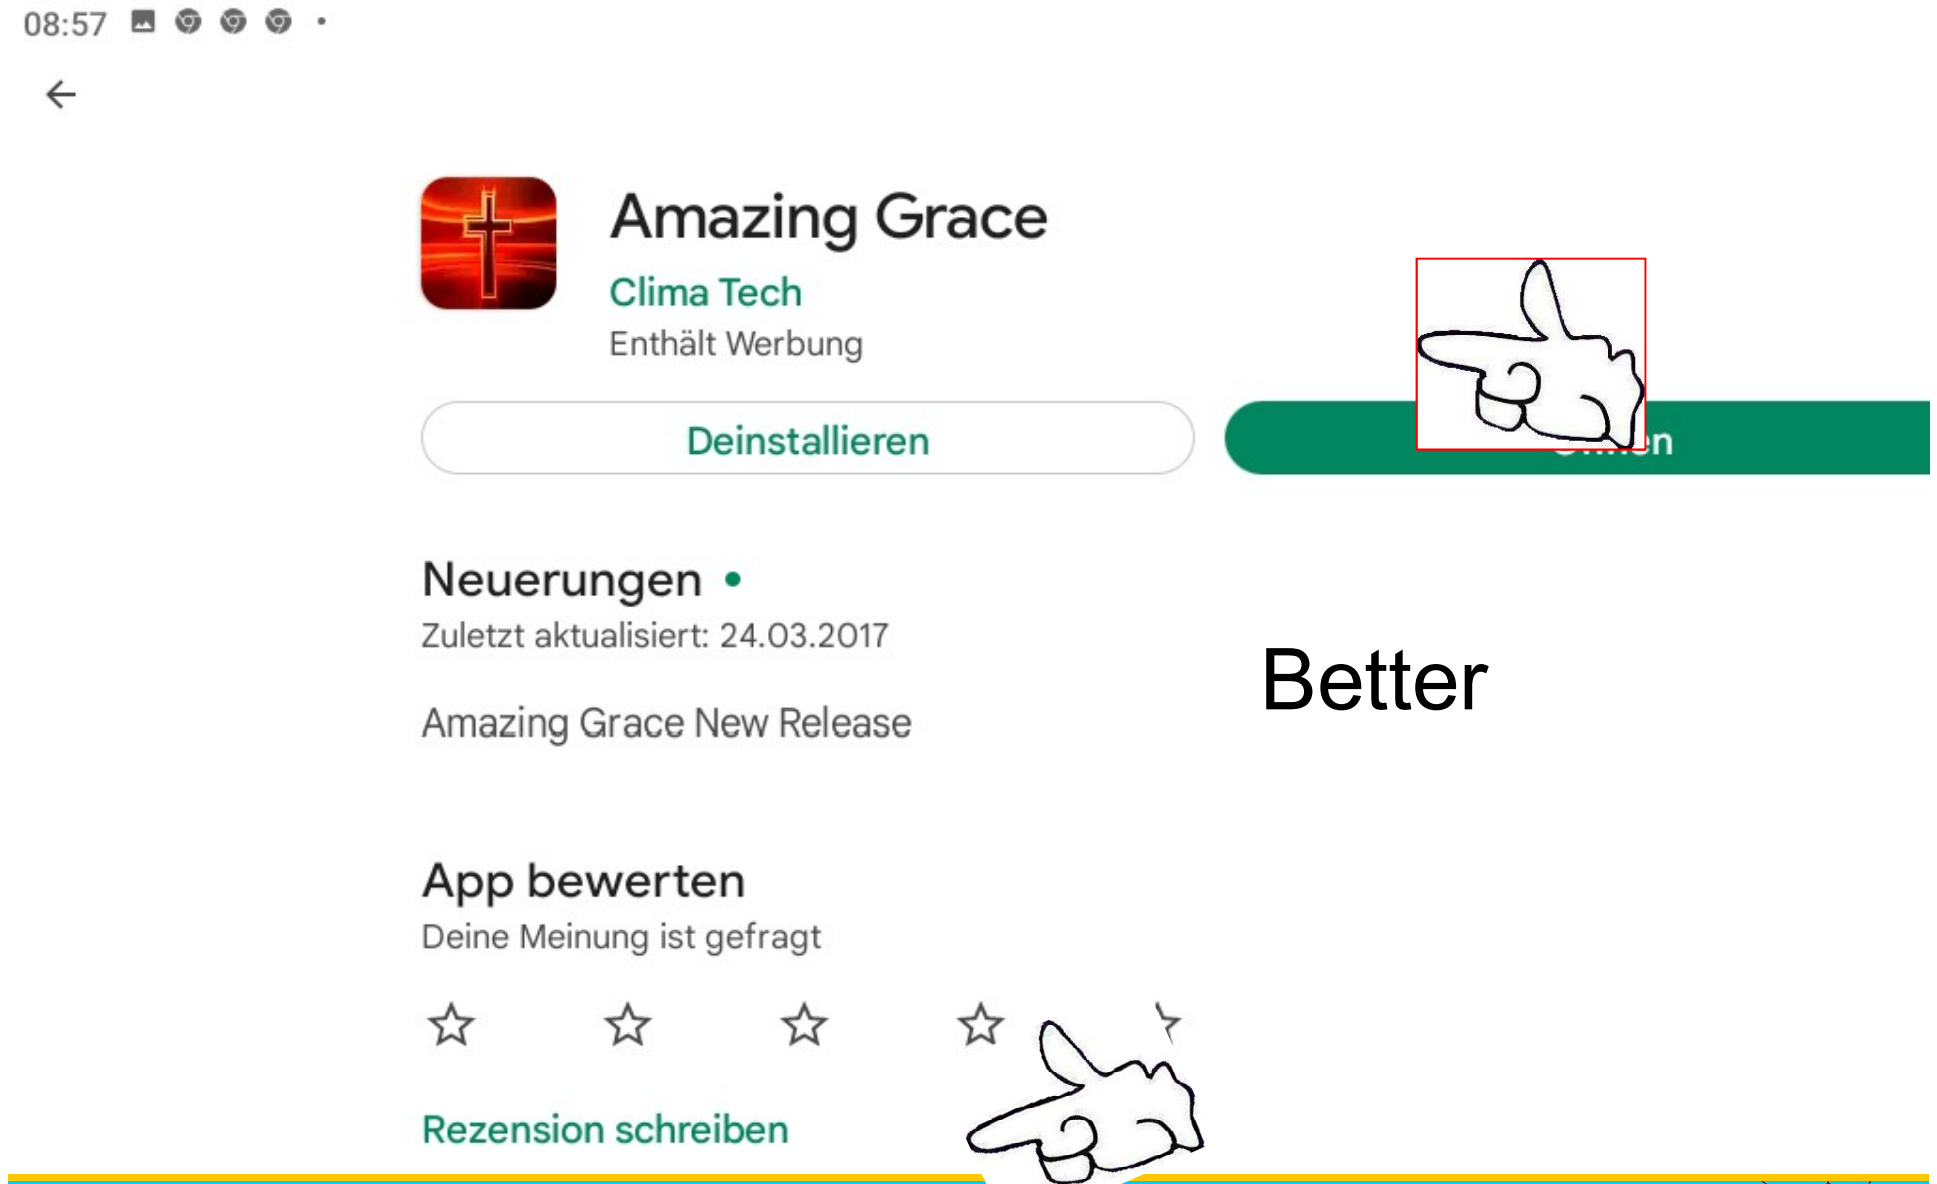
08:57
Amazing Grace
Clima Tech
Enthält Werbung
Deinstallieren
Neuerungen
Zuletzt aktualisiert: 24.03.2017
Amazing Grace New Release
App bewerten
Deine Meinung ist gefragt
Rezension schreiben

Better

Let us connect you

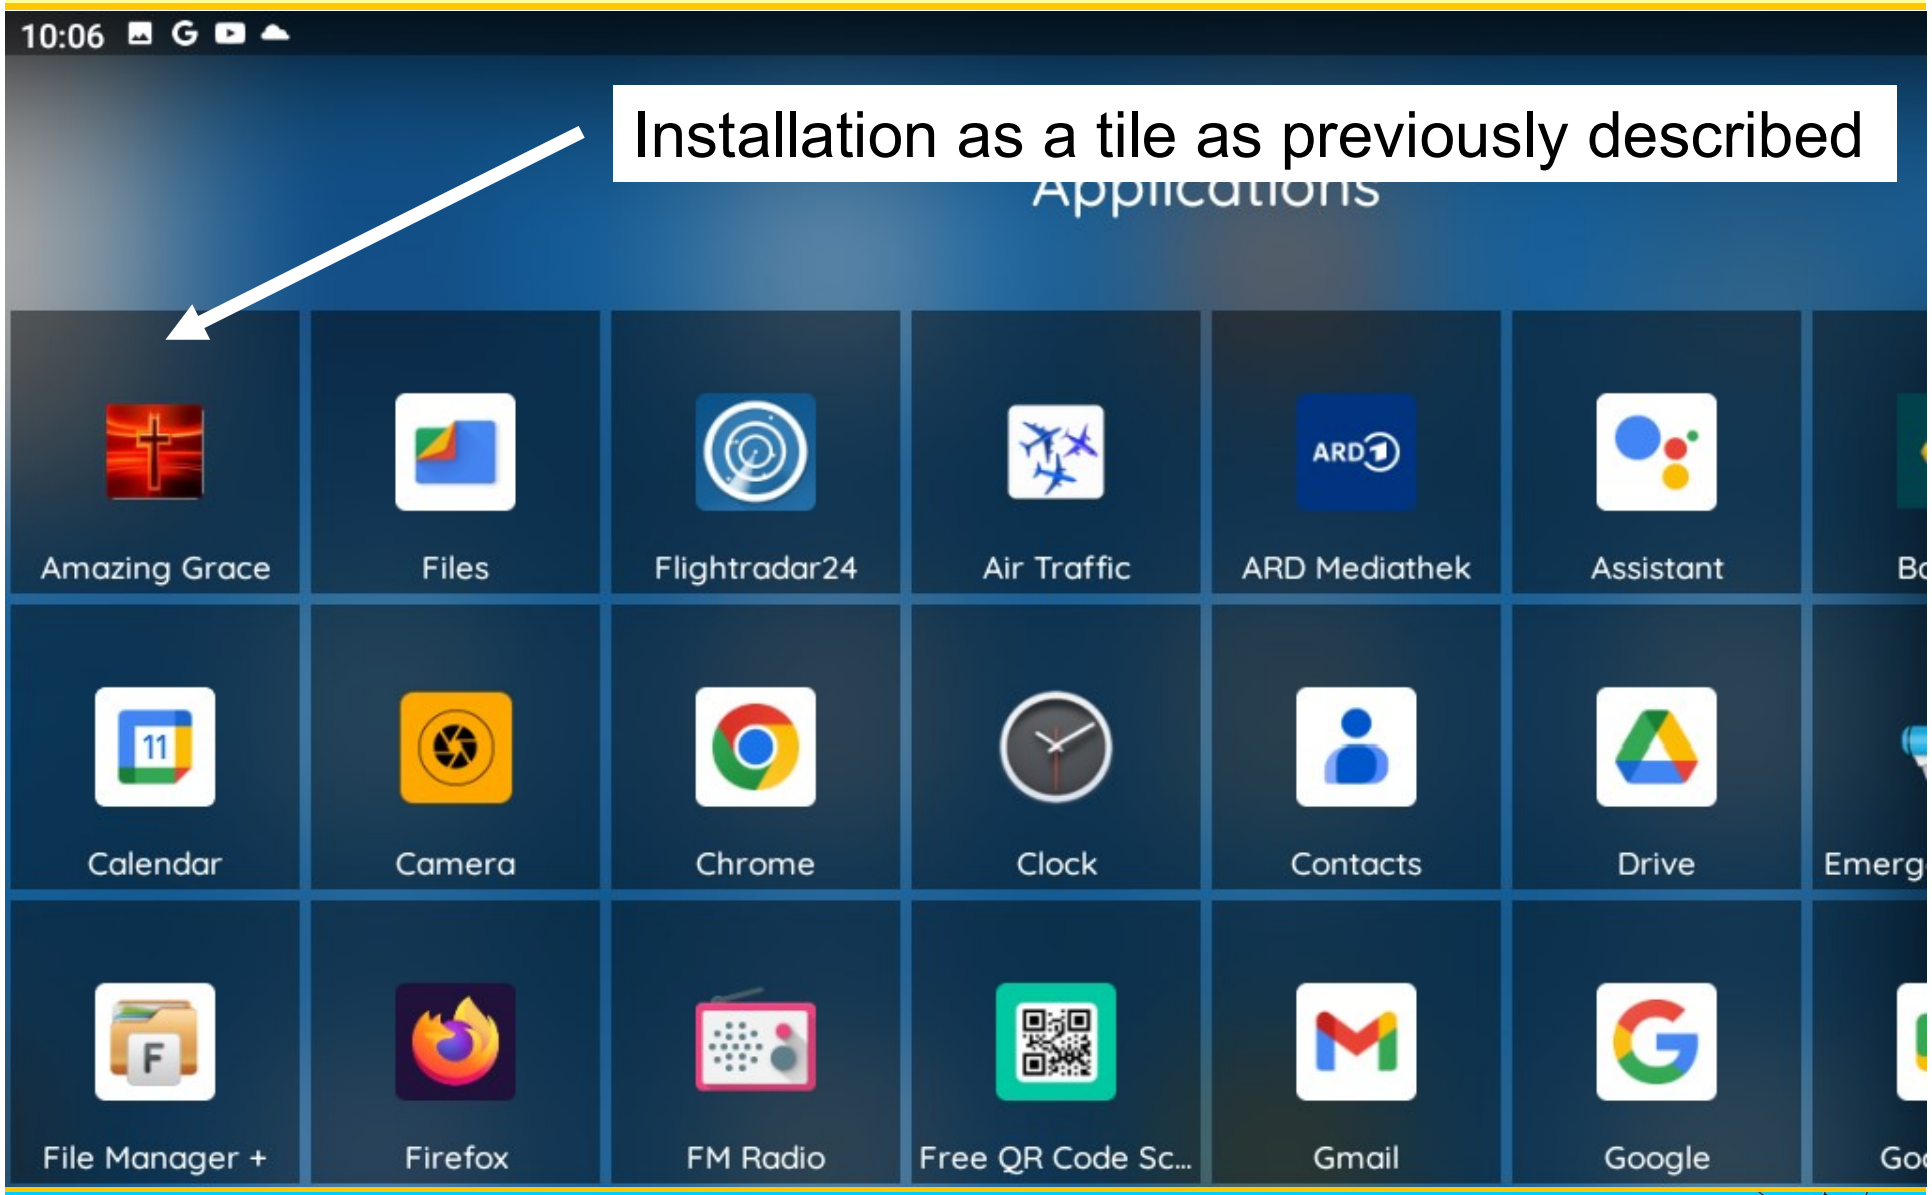

"Amazing Grace" available as an app

Let us connect you

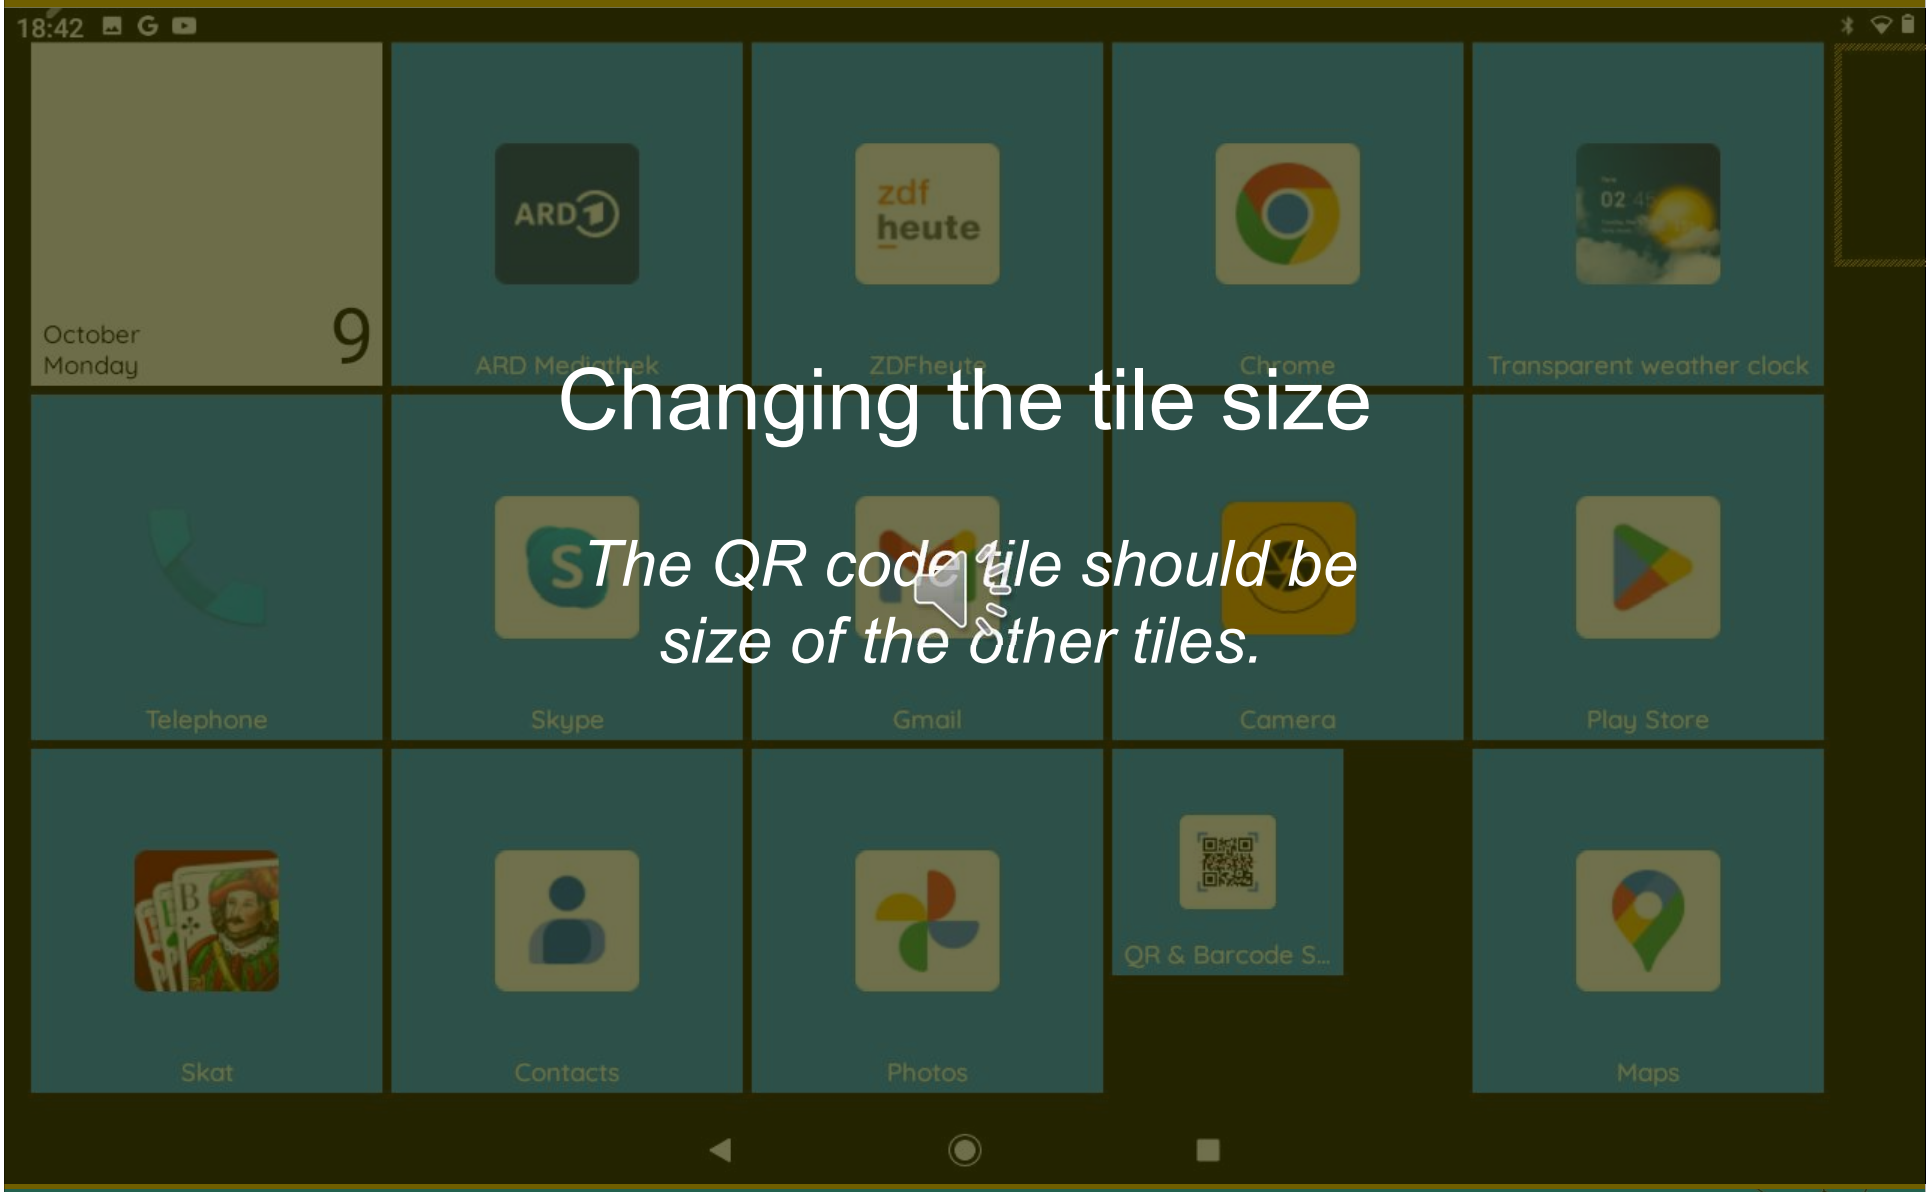

Changing the tile size

The QR code tile should be size of the other tiles.

Let us connect you

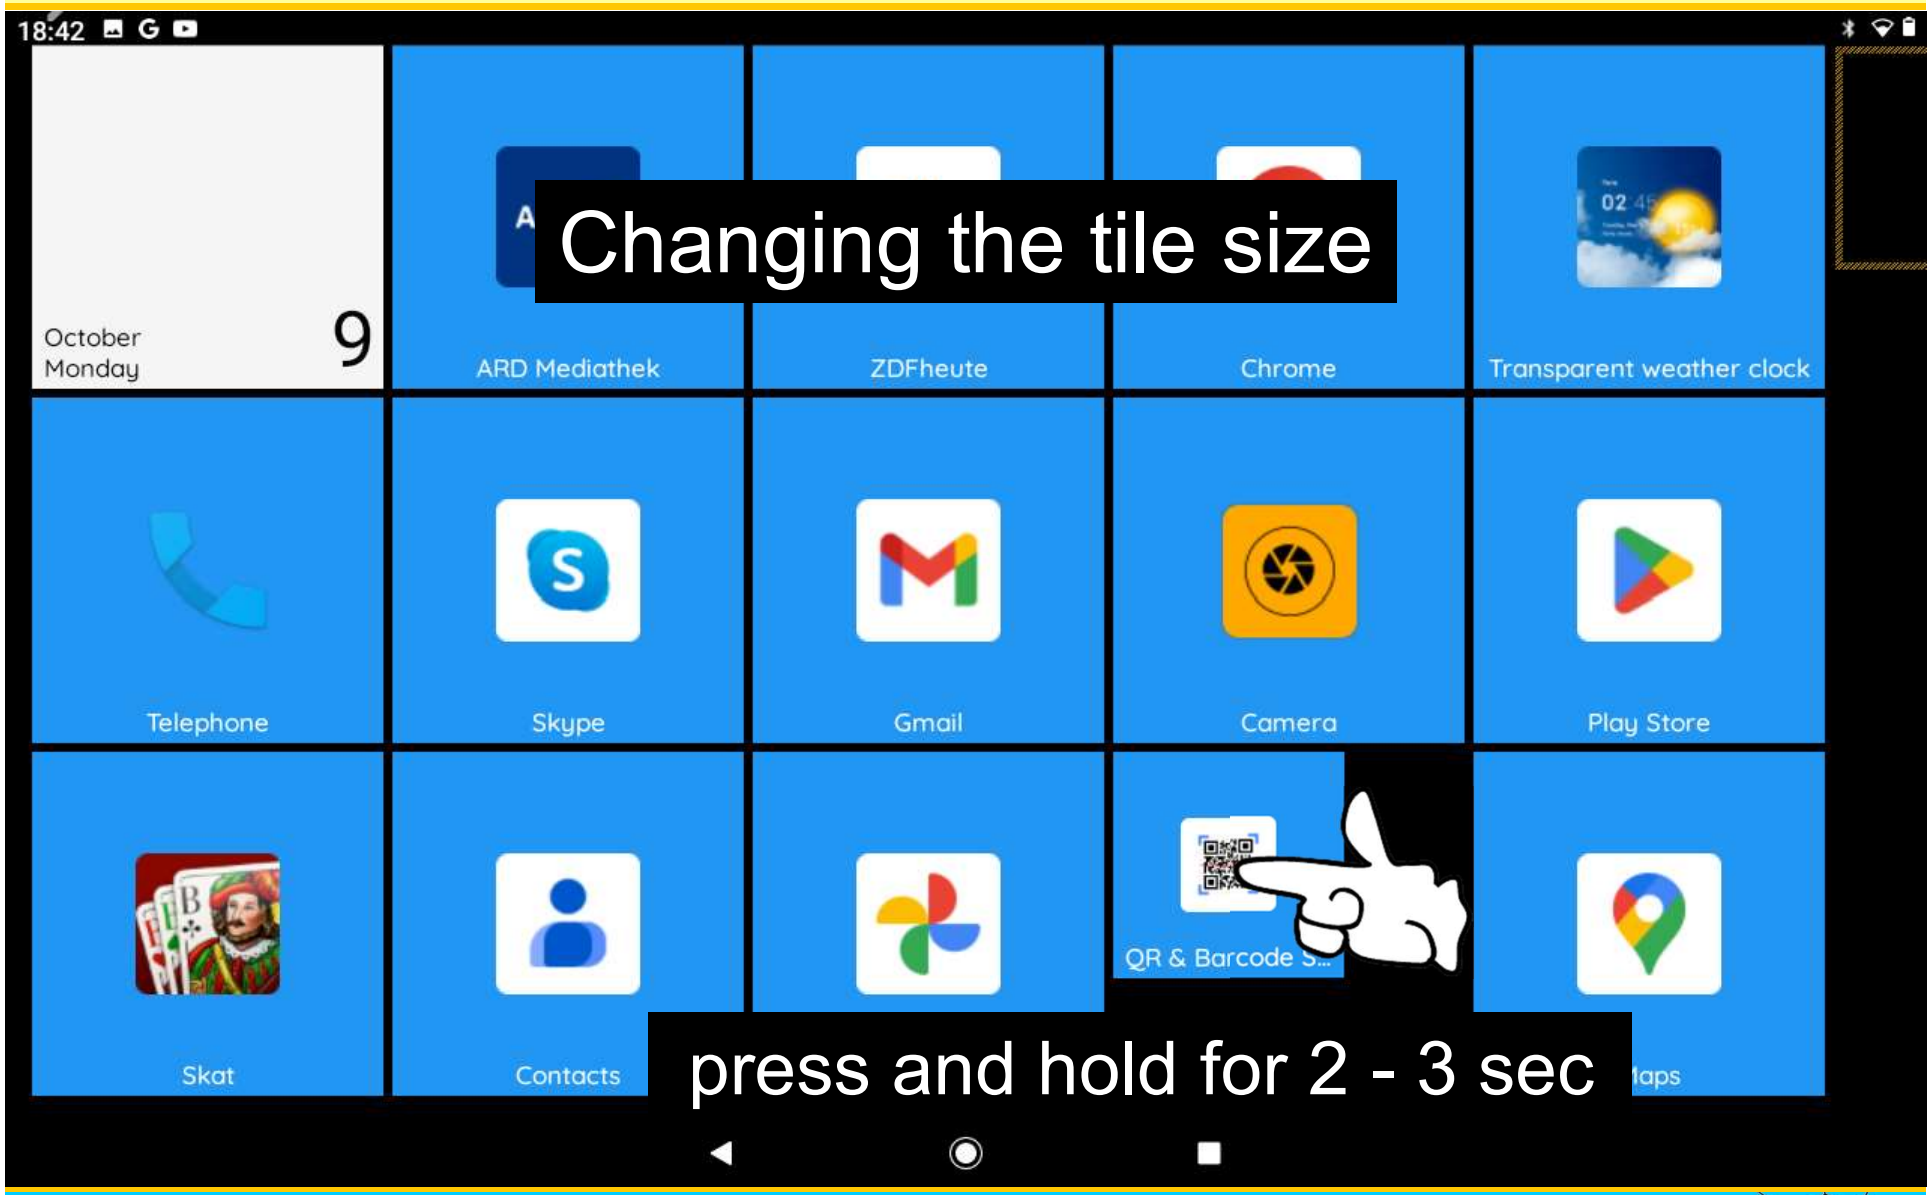

Let us connect you

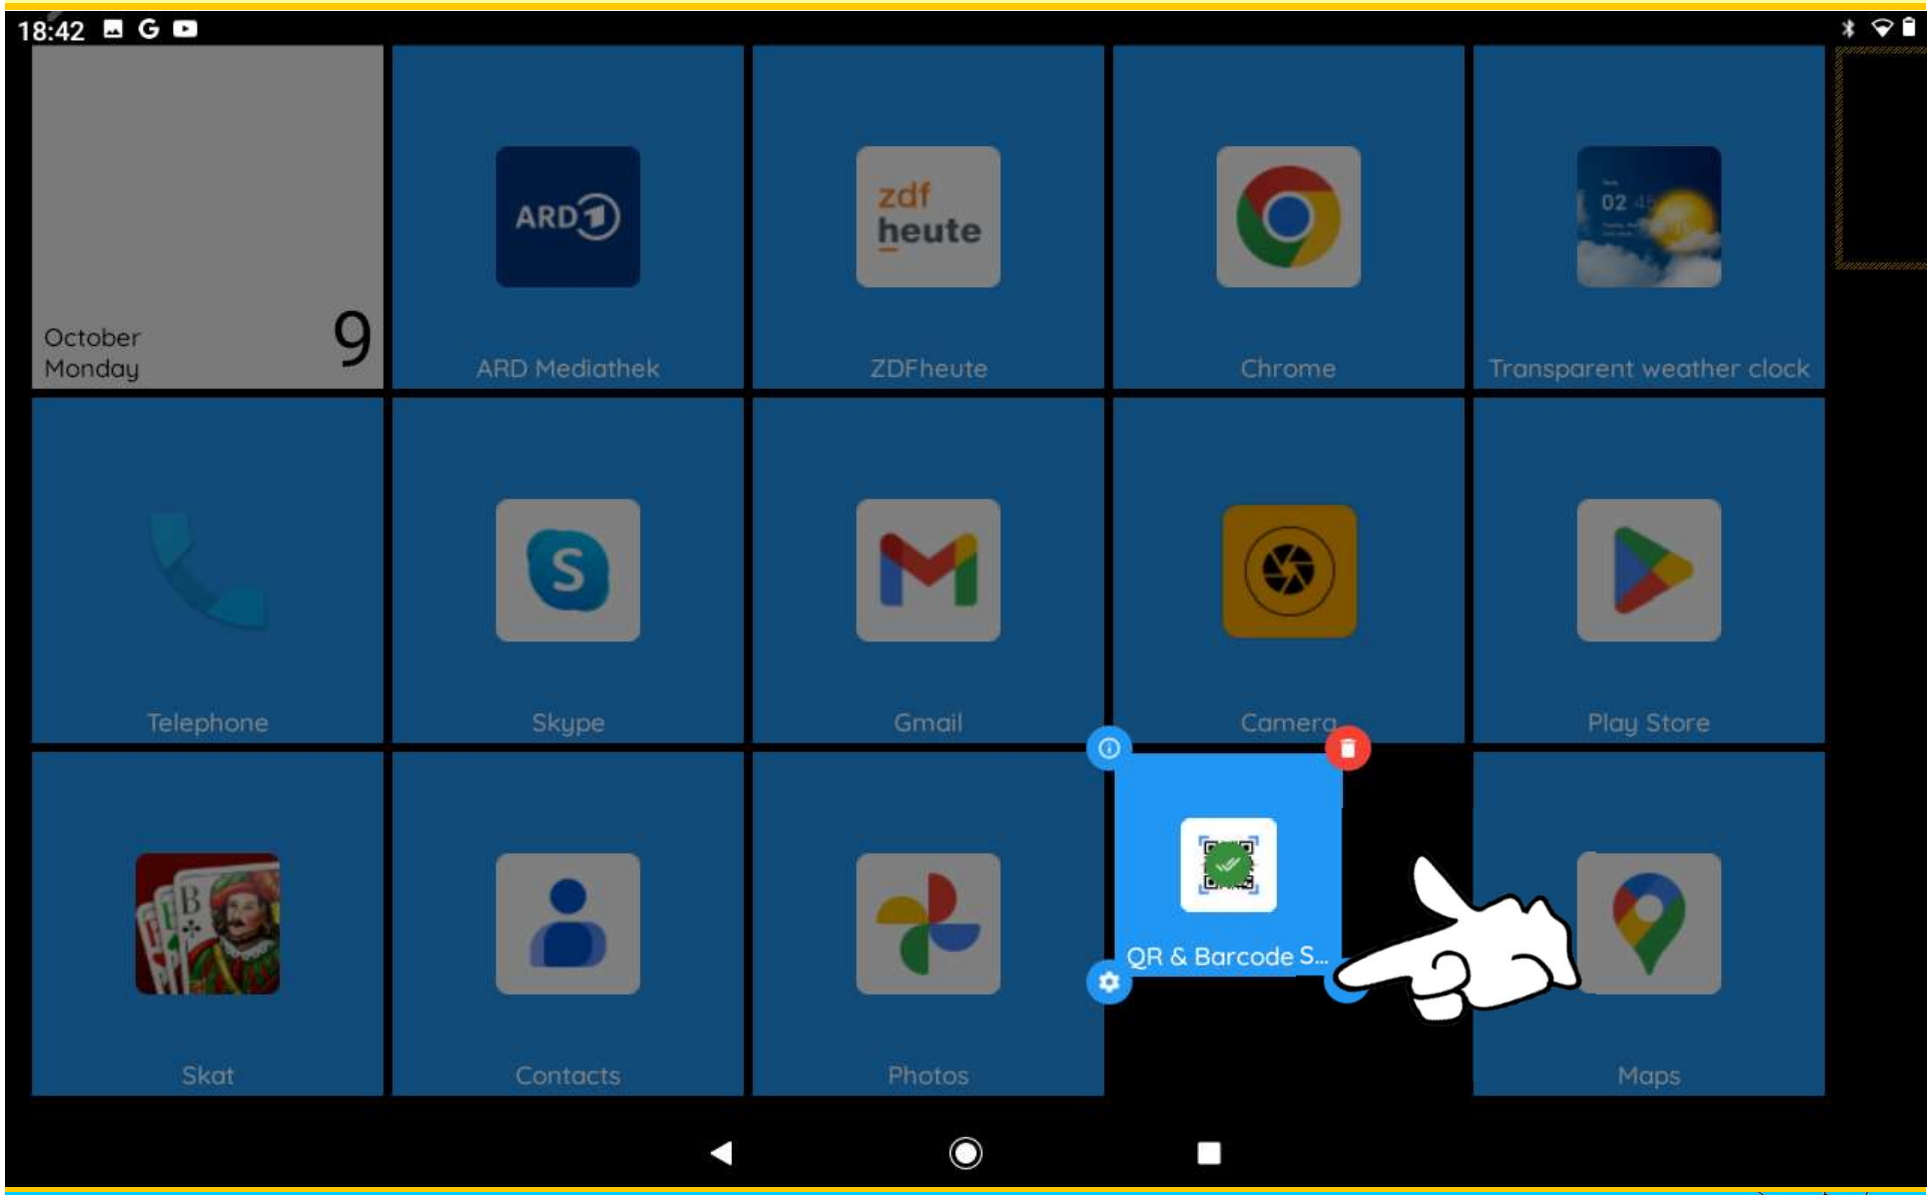

Let us connect you

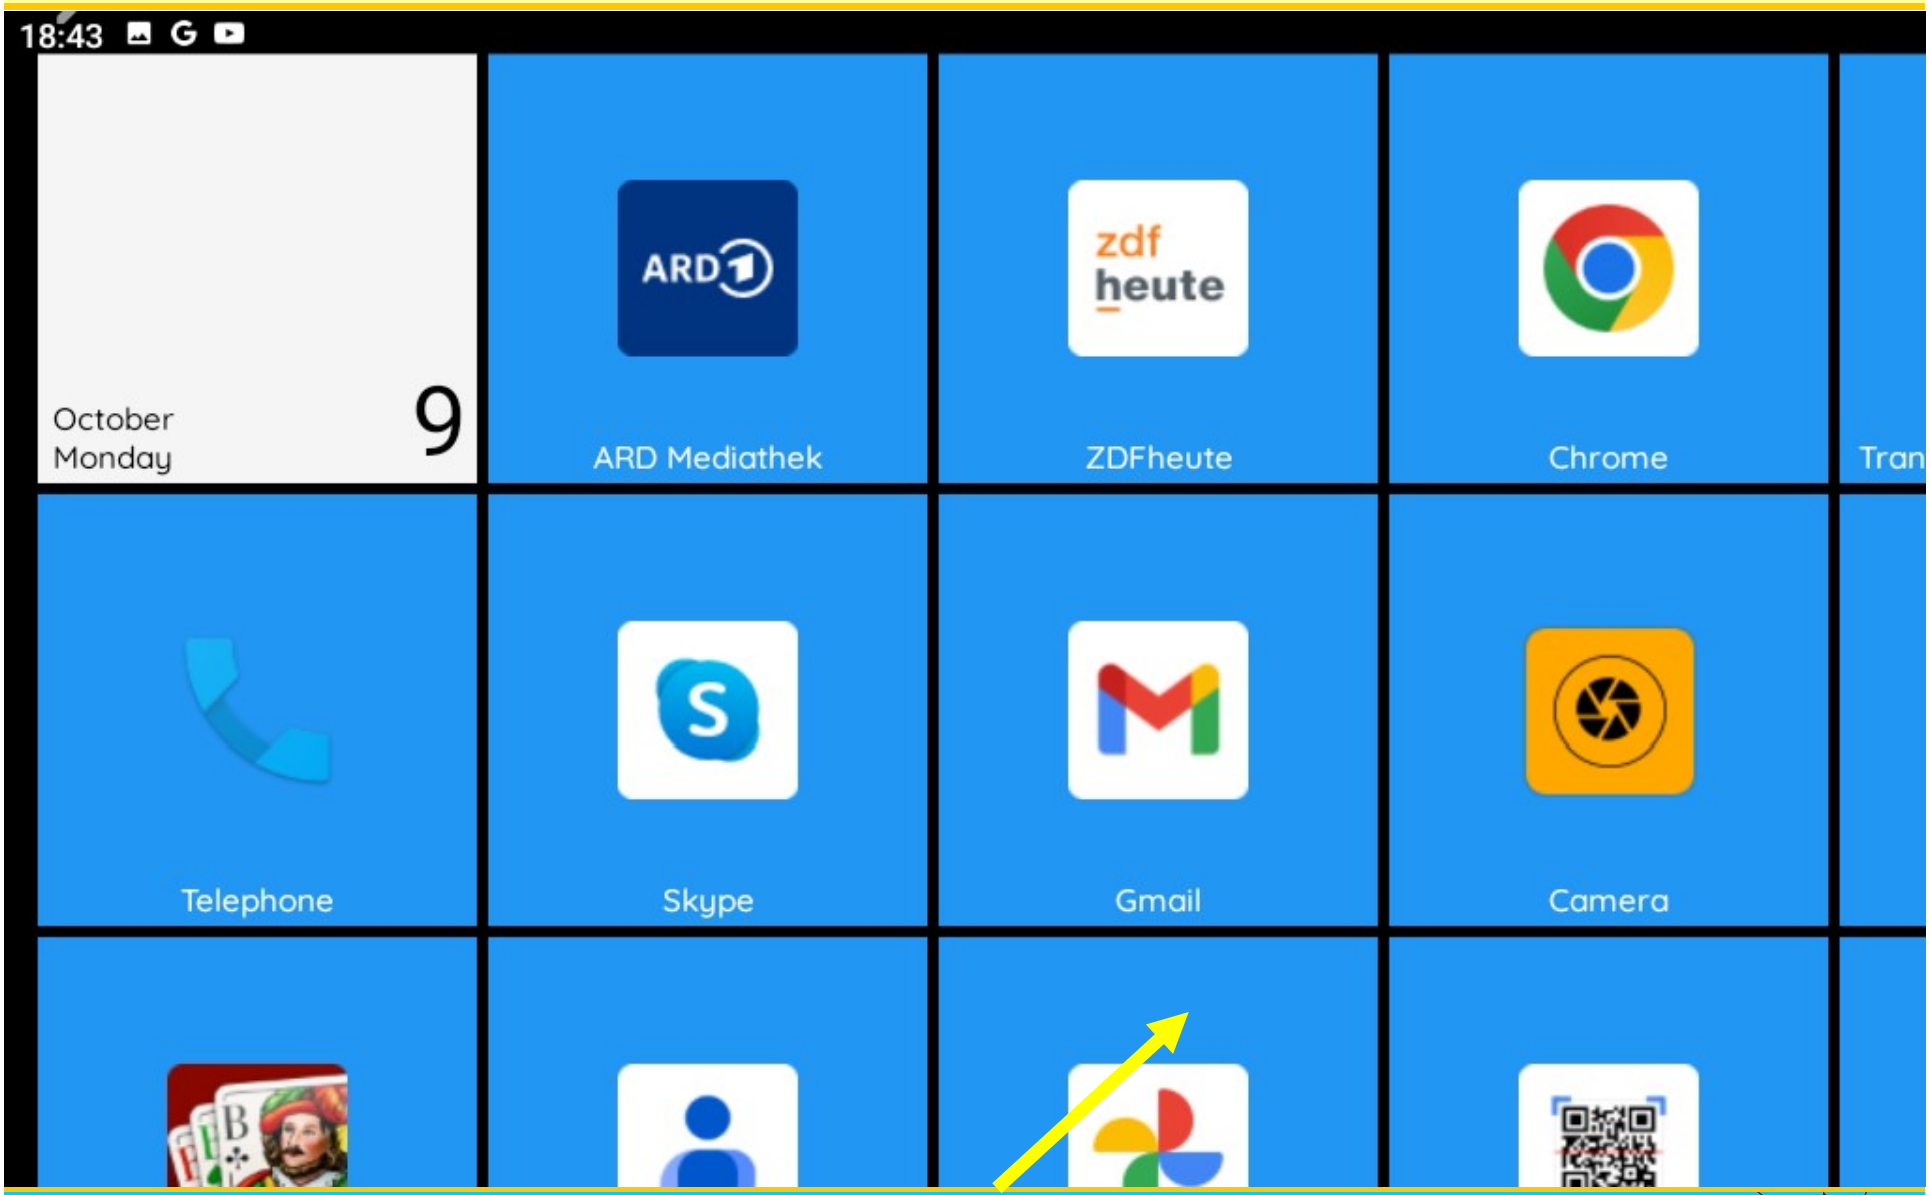

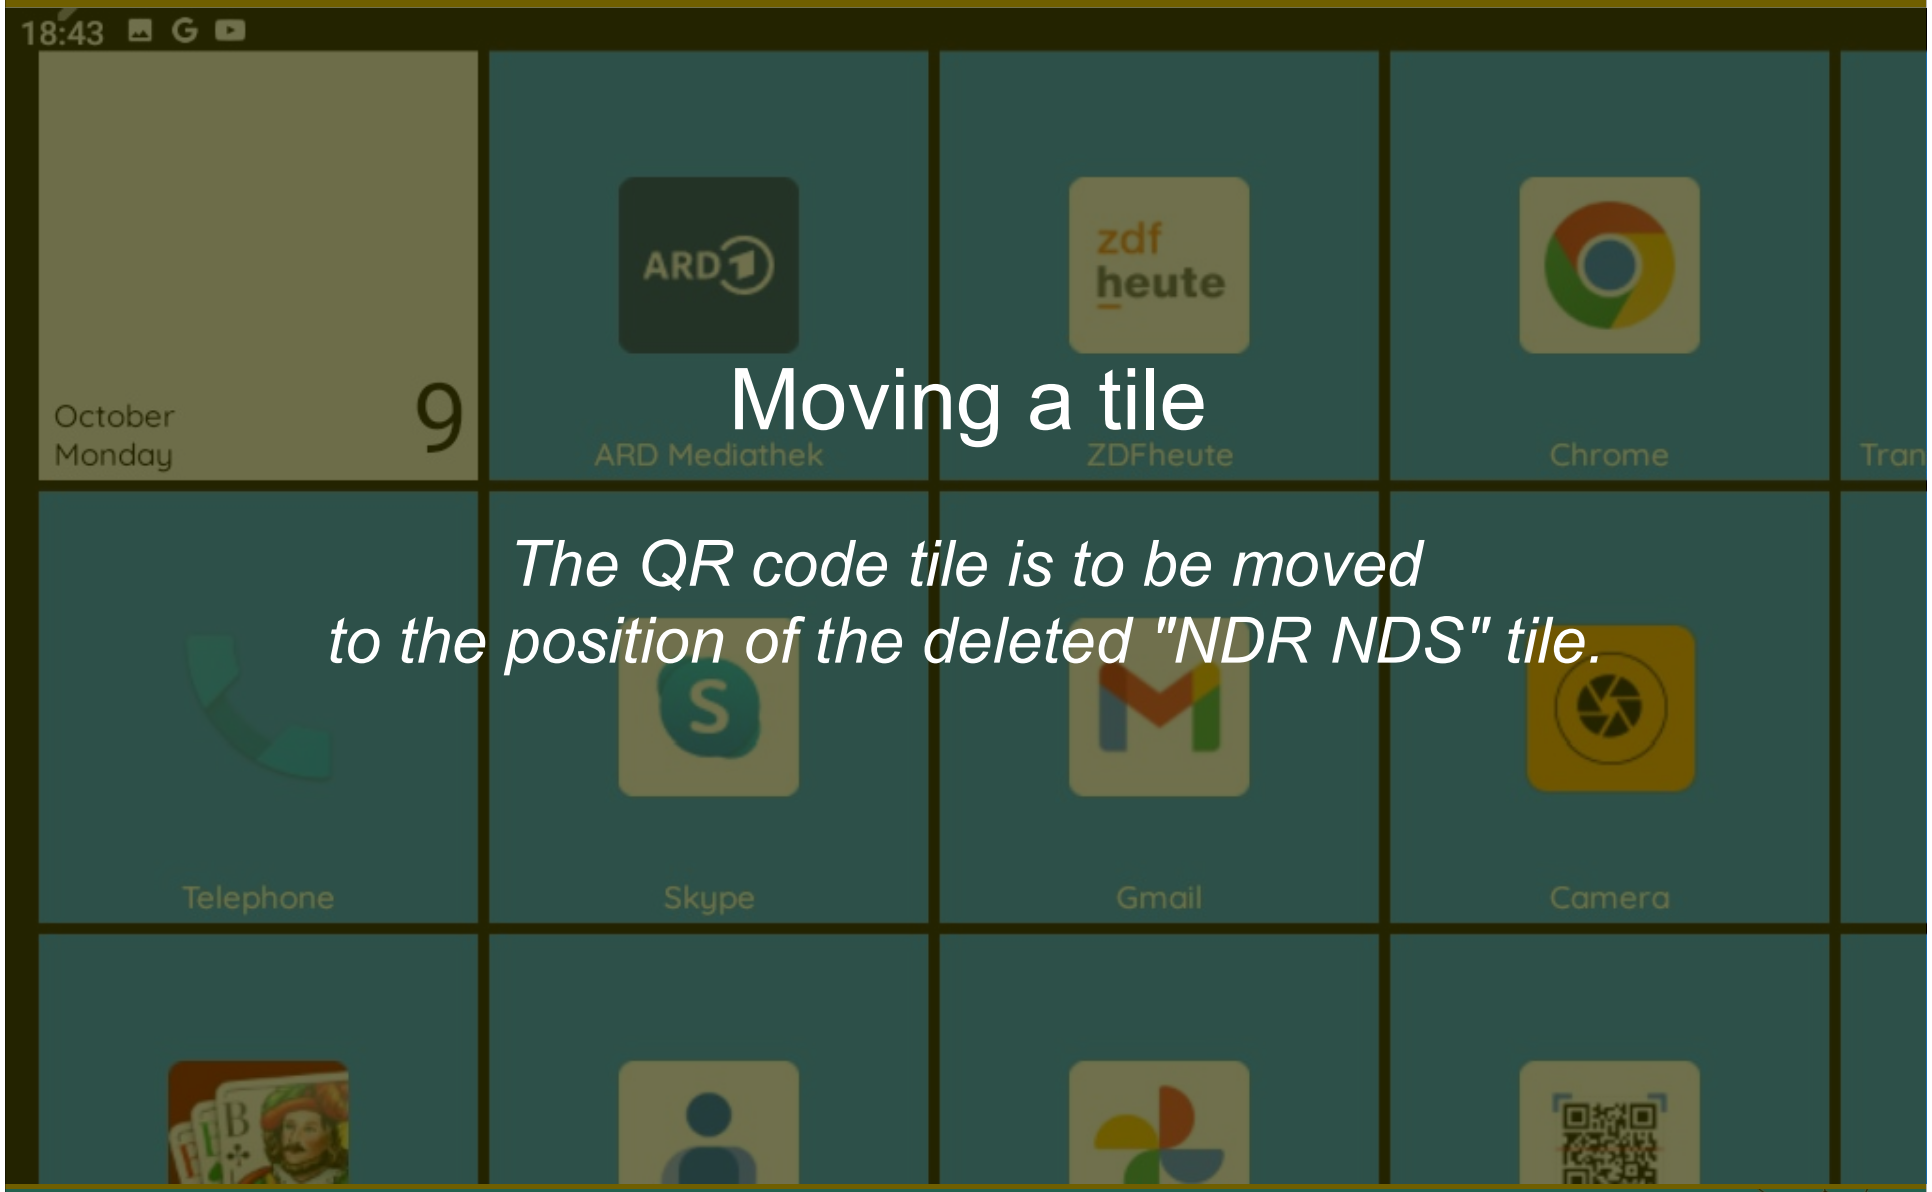

Moving a tile

The QR code tile is to be moved
to the position of the deleted "NDR NDS" tile.

Let us connect you

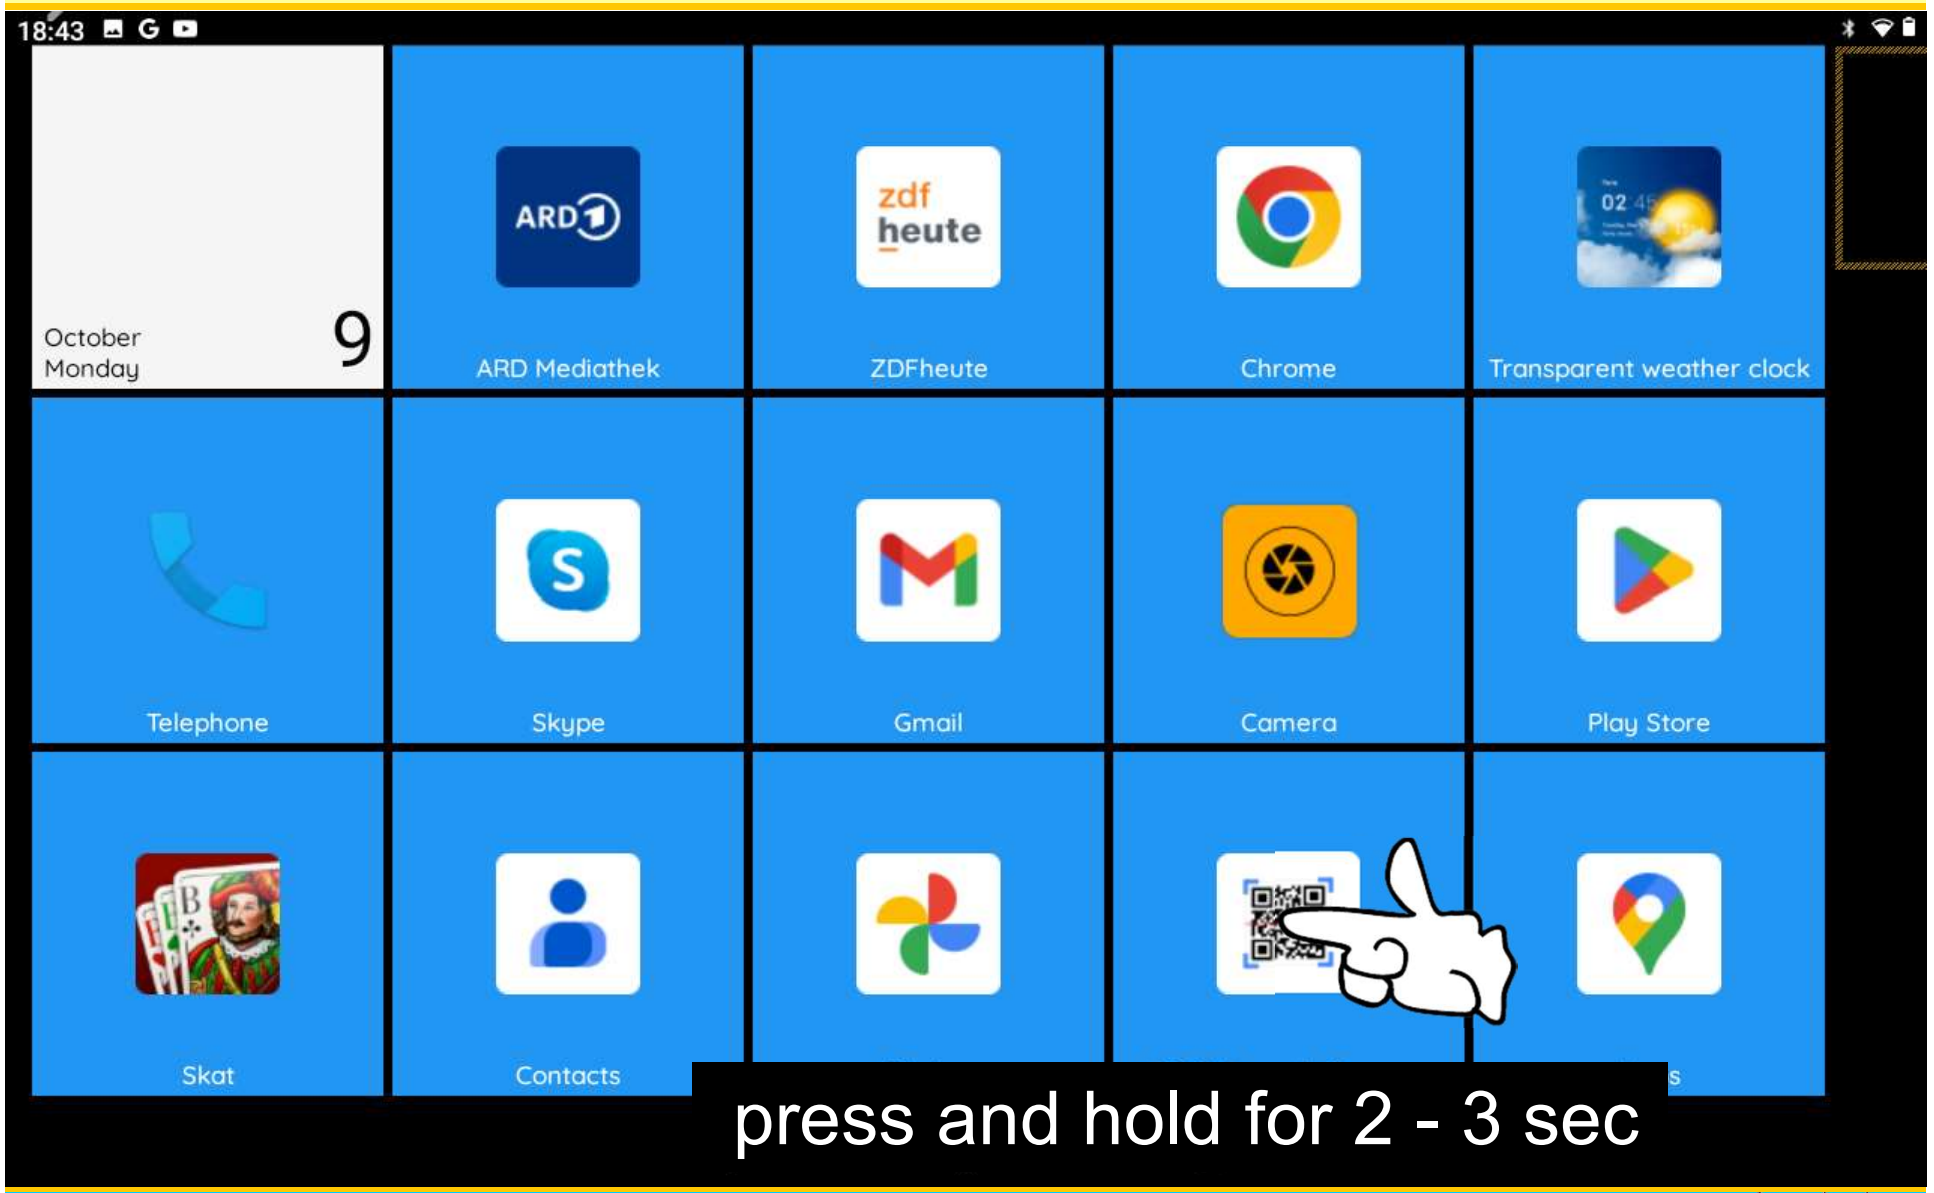

Let us connect you

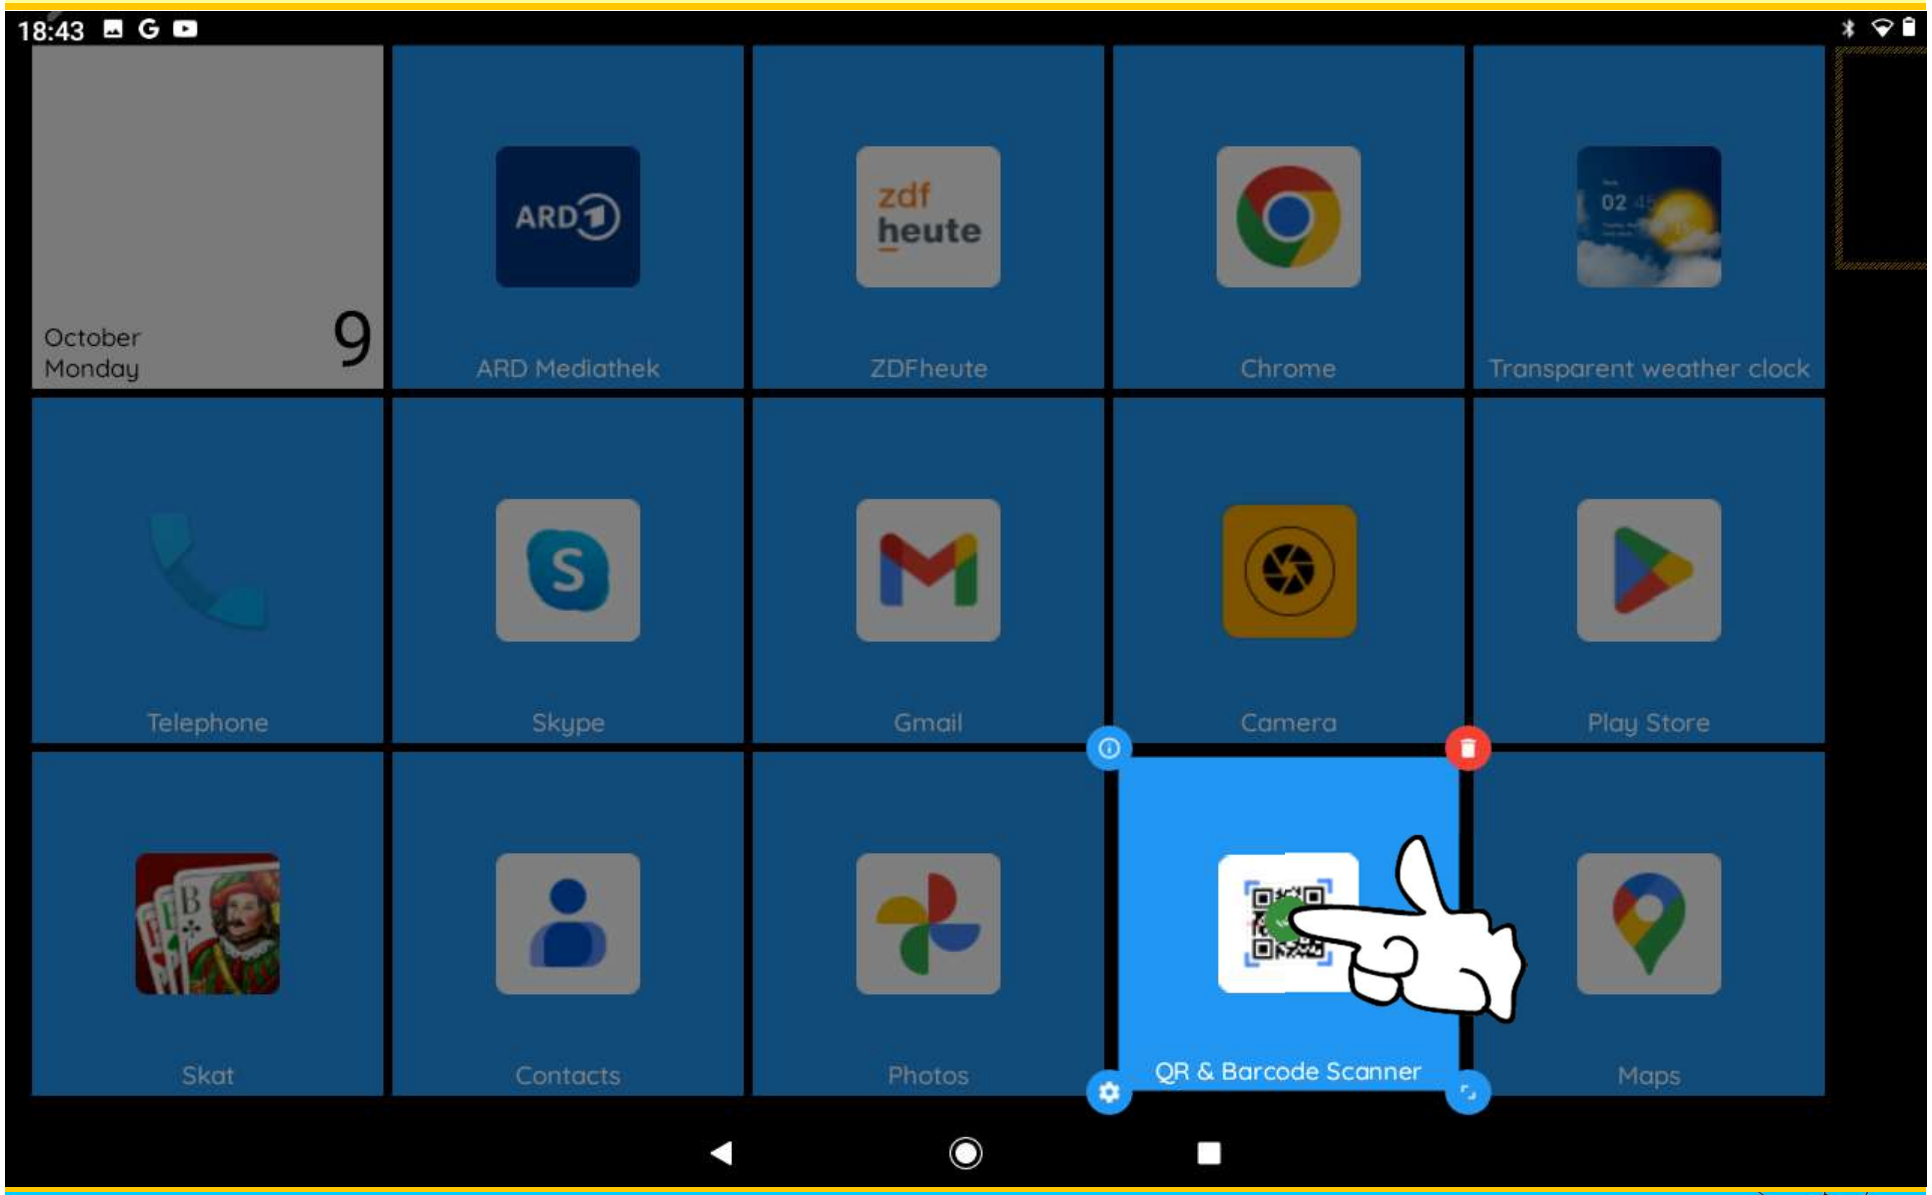

Let us connect you

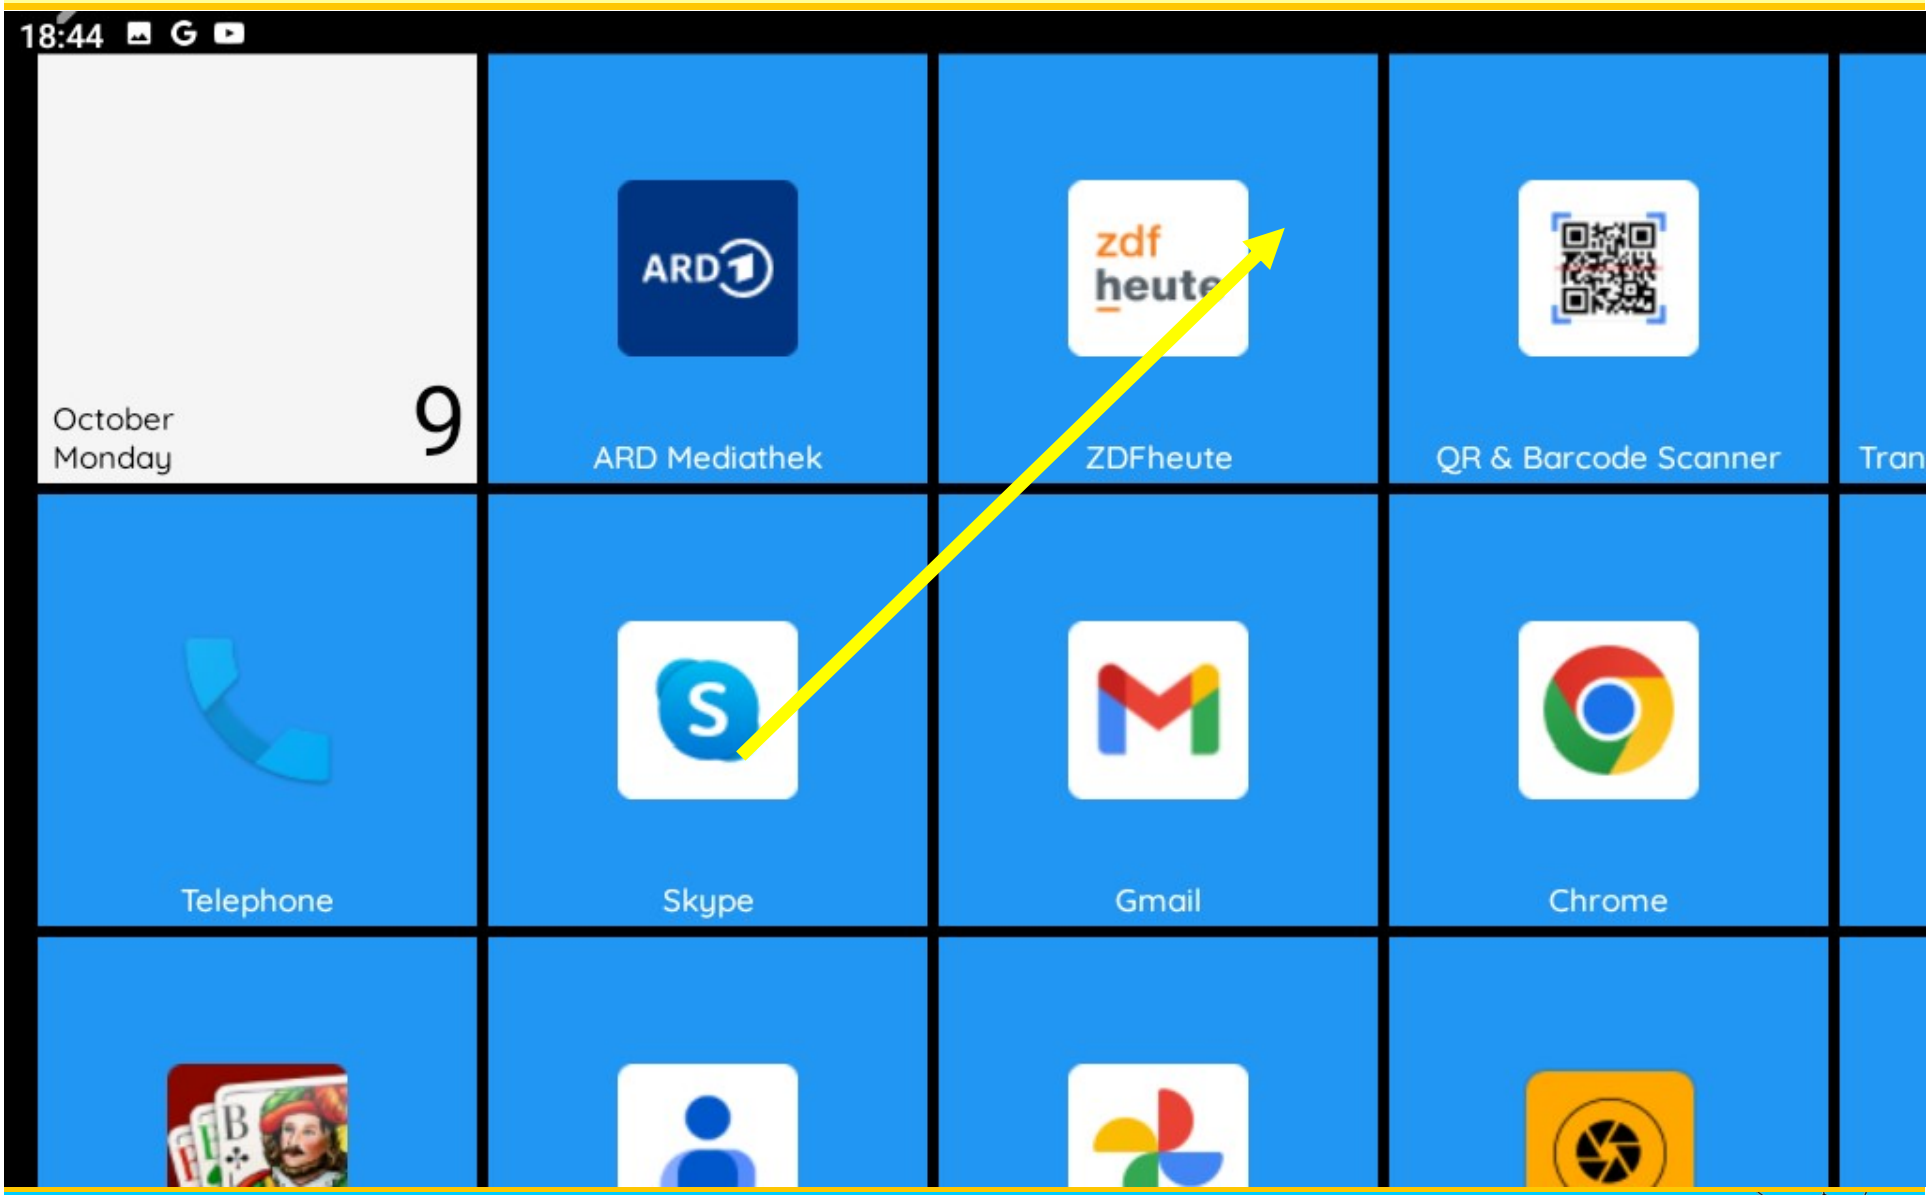

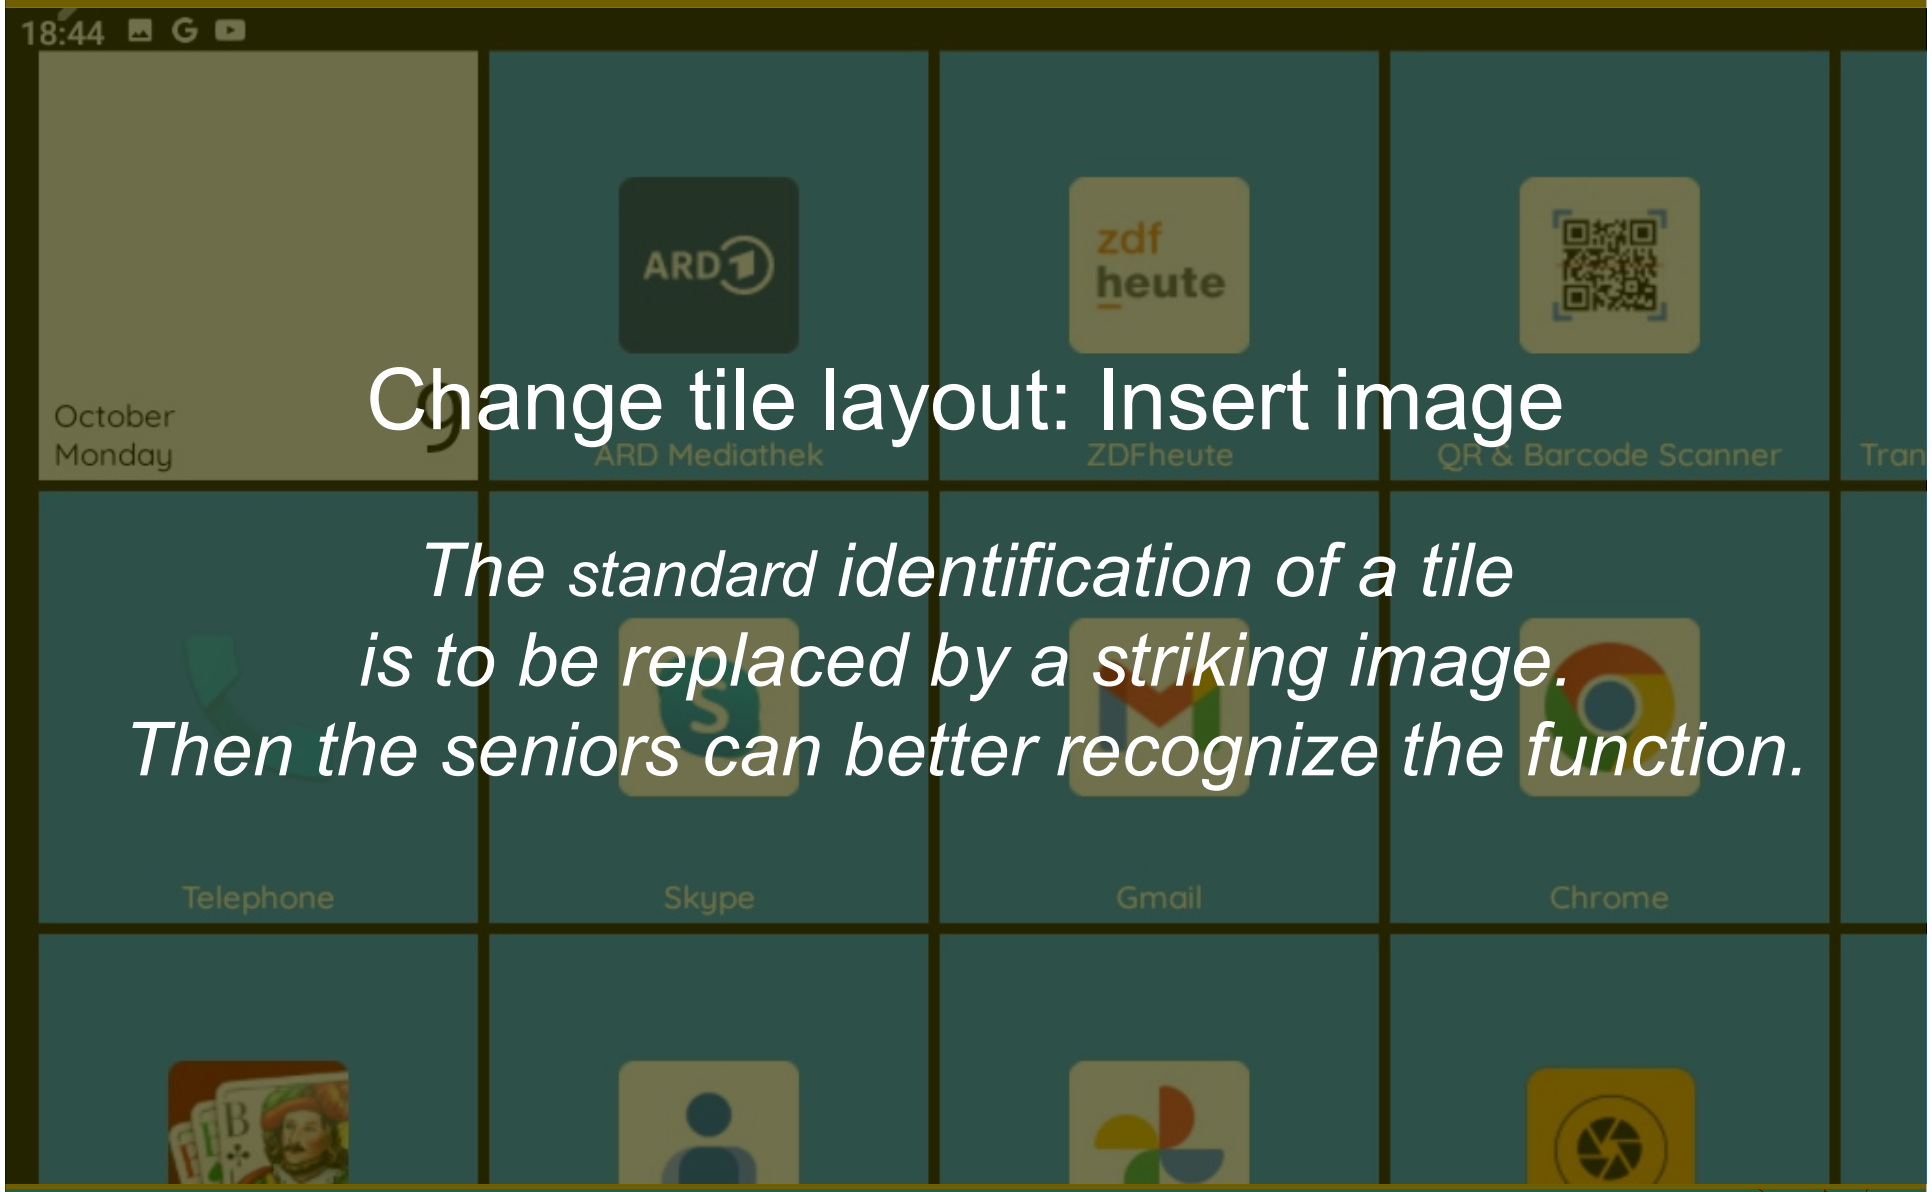

Change tile layout: Insert image

The standard identification of a tile
is to be replaced by a striking image.
Then the seniors can better recognize the function.

Let us connect you

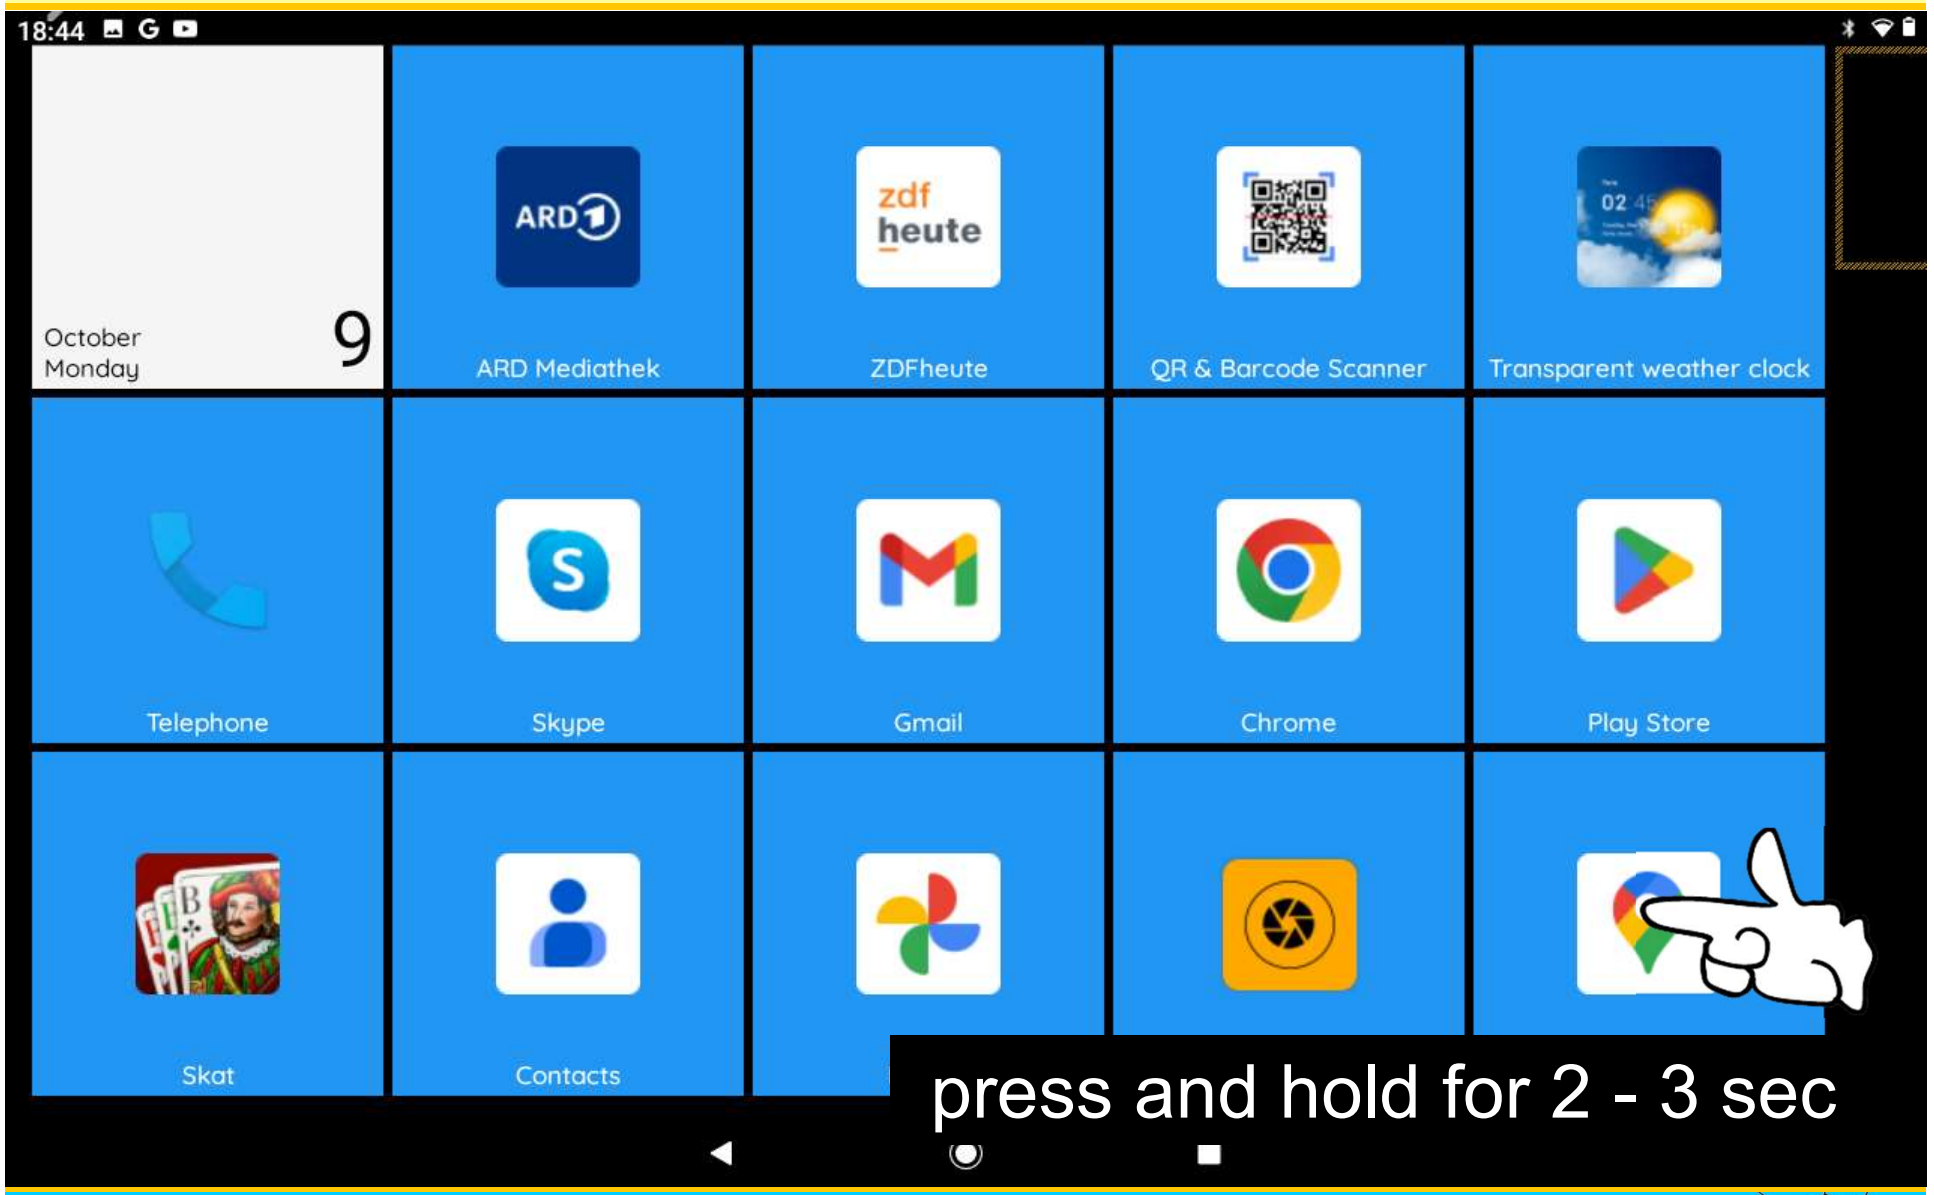

Let us connect you

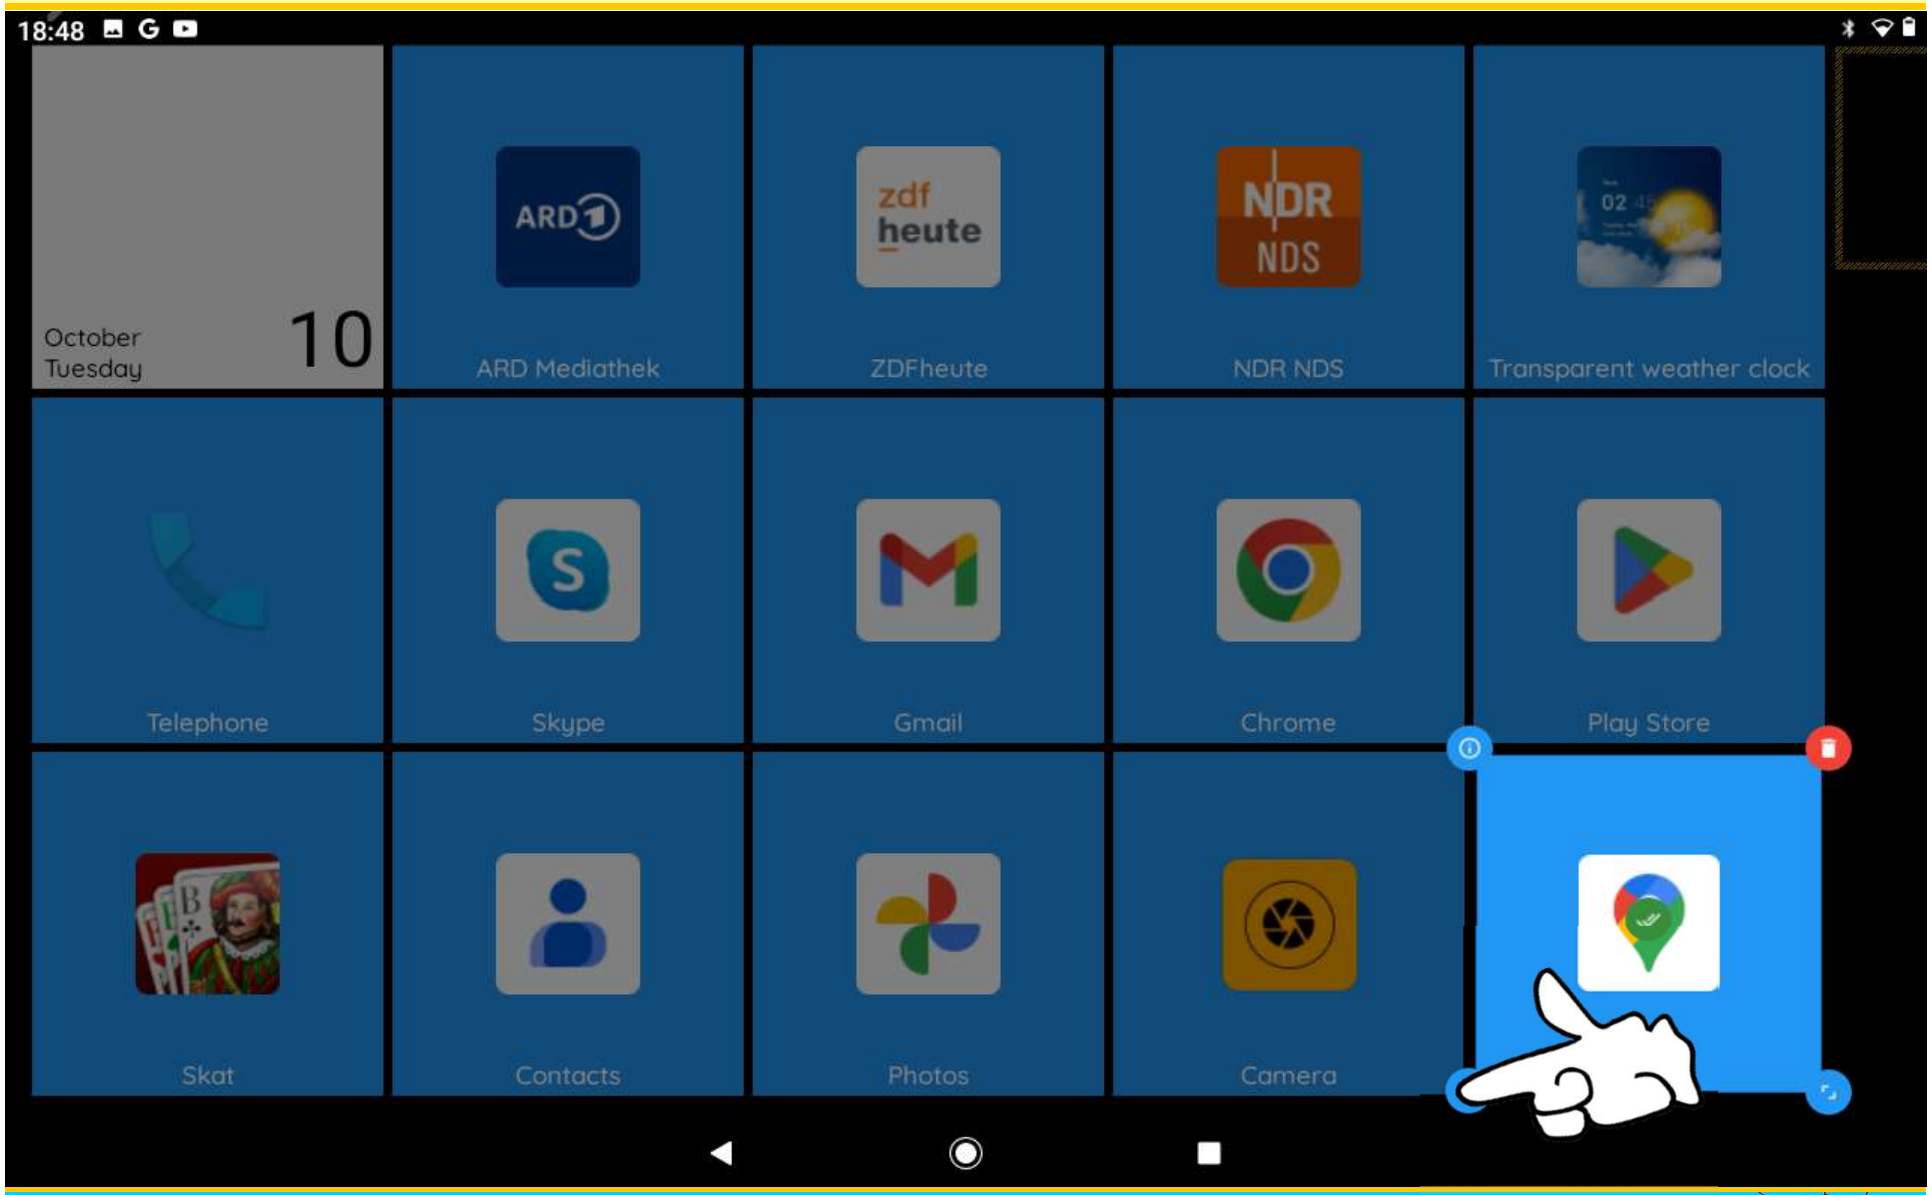

Let us connect you

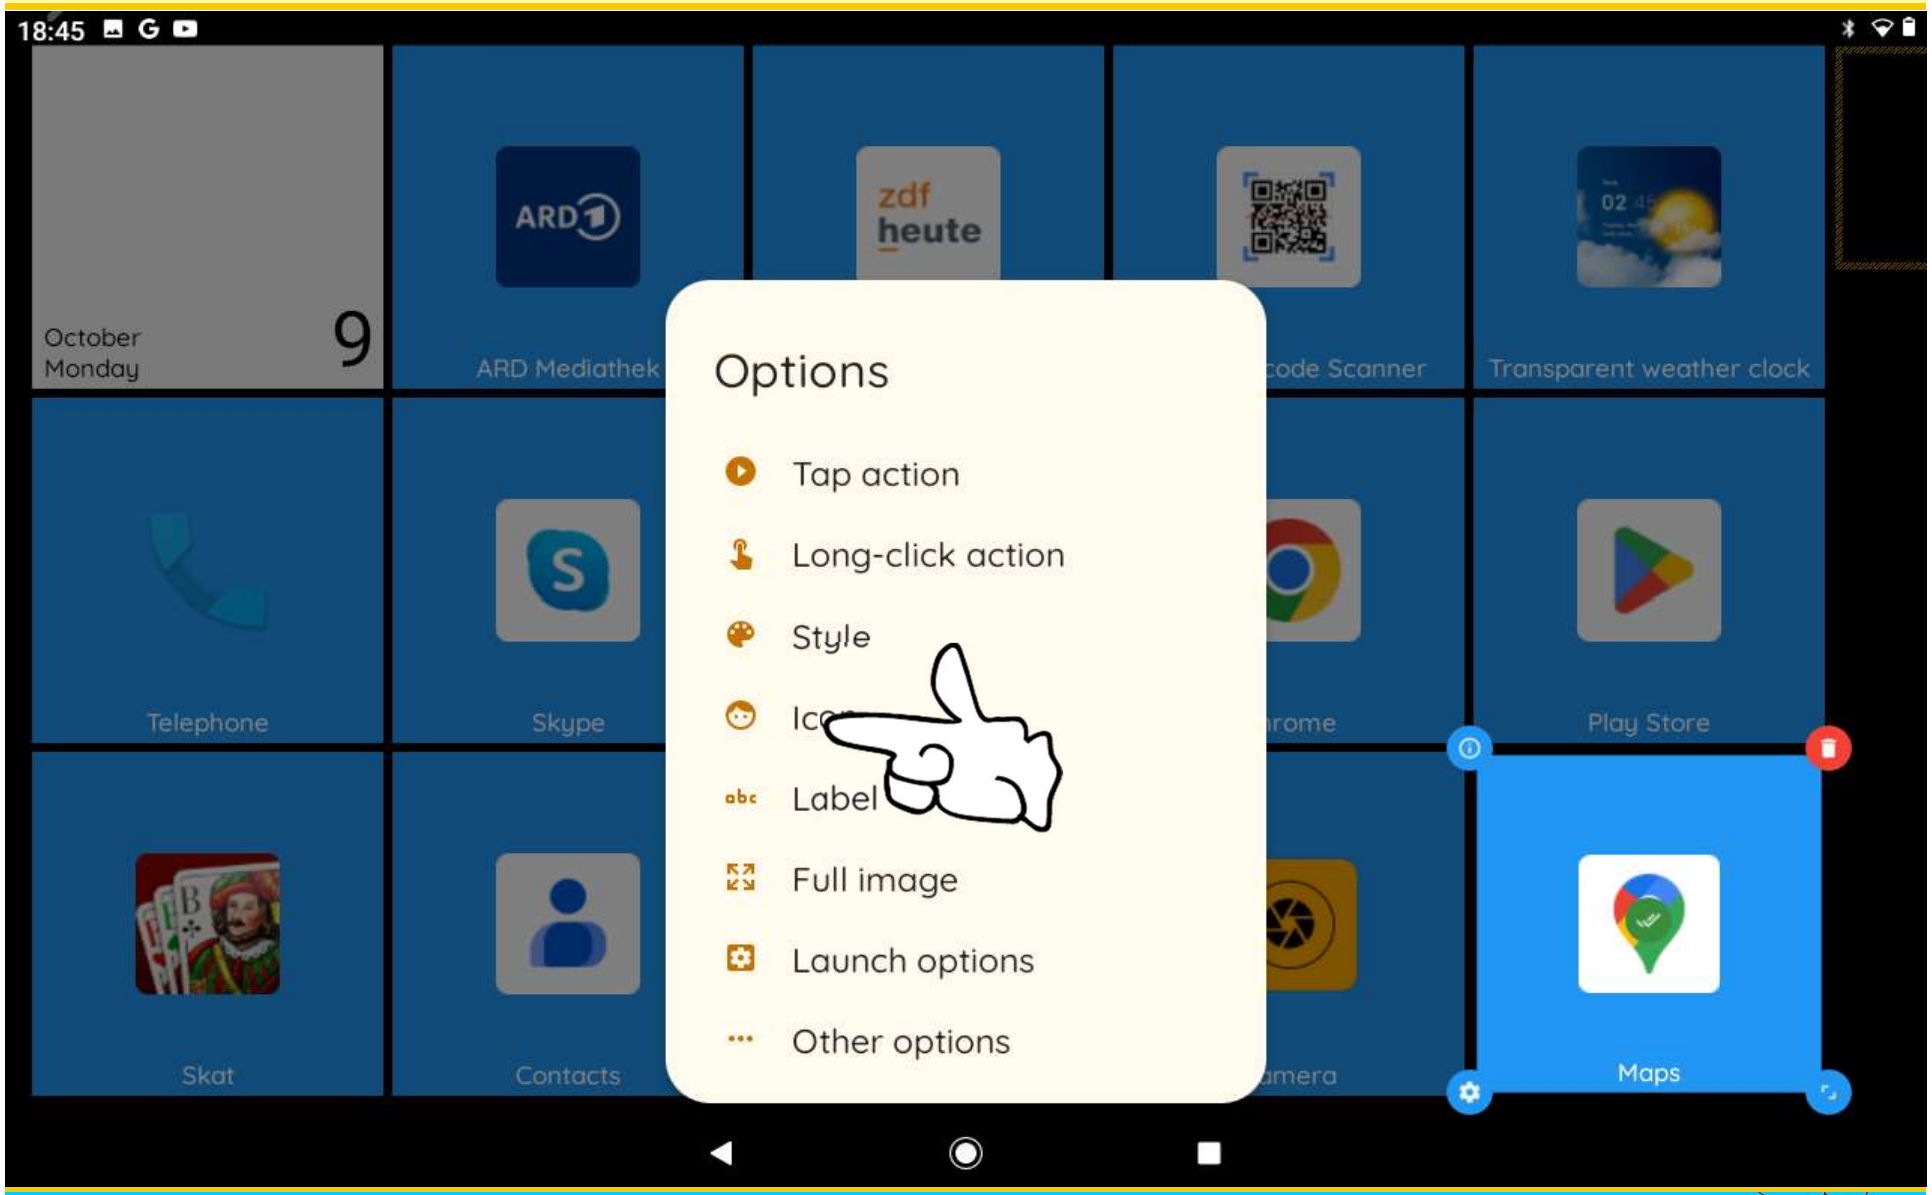

Let us connect you

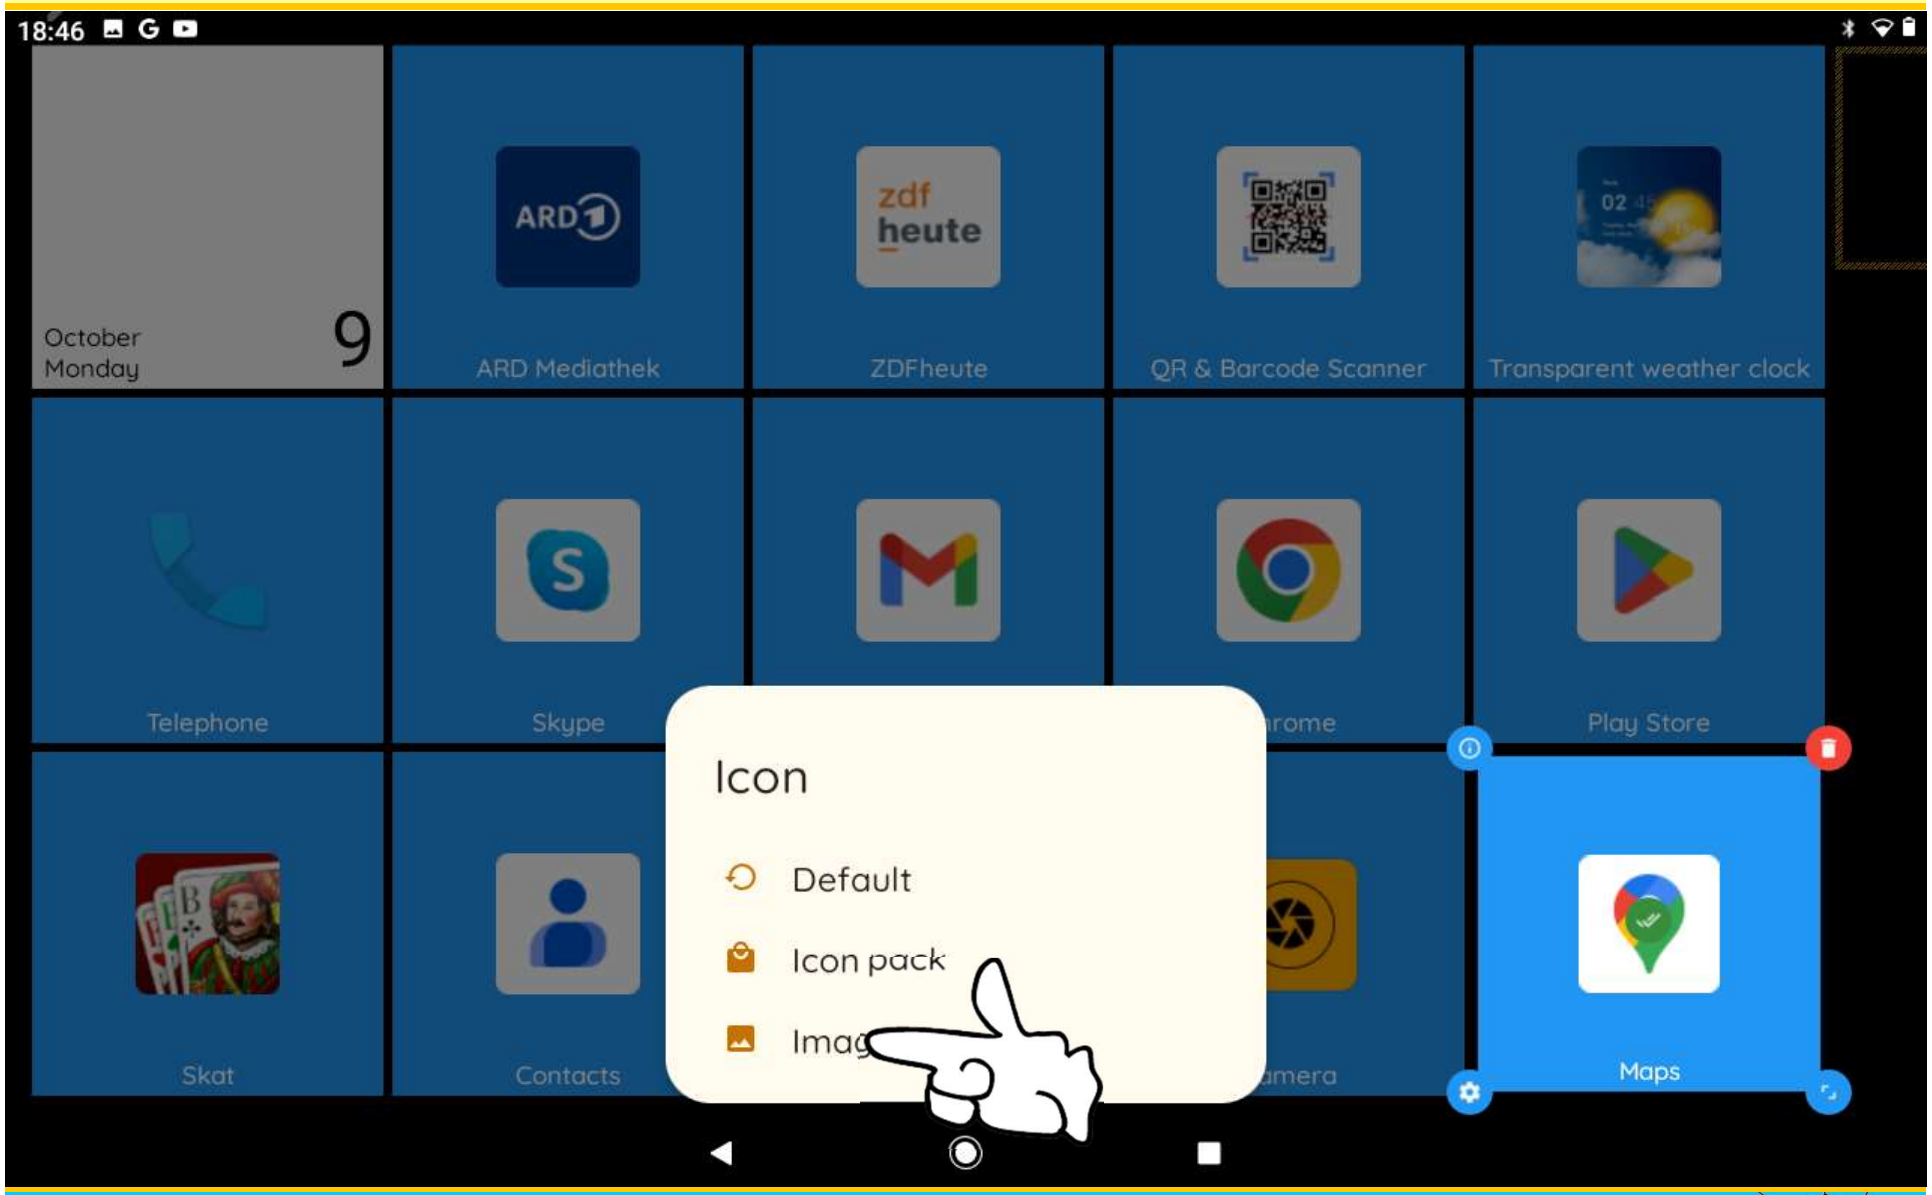

Let us connect you

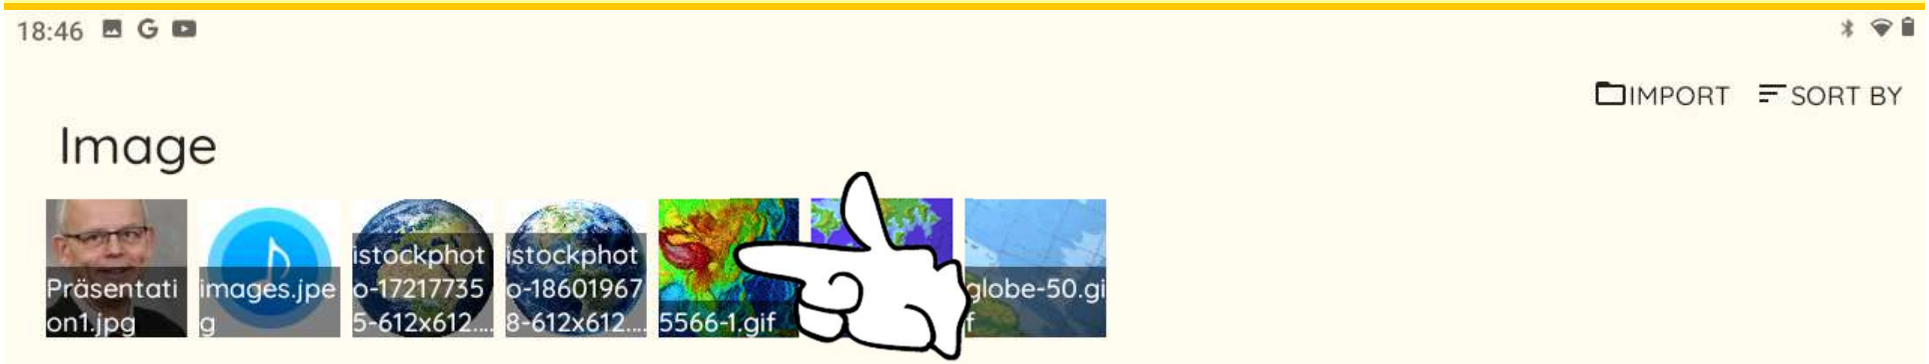

An image can now be selected.
It has to be available on the tablet.

Save desired images for the tiles
on the tablet beforehand, e.g.
- from the Internet (google),
- send by e-mail as an attachment,
- transfer with memory card.

Let us connect you

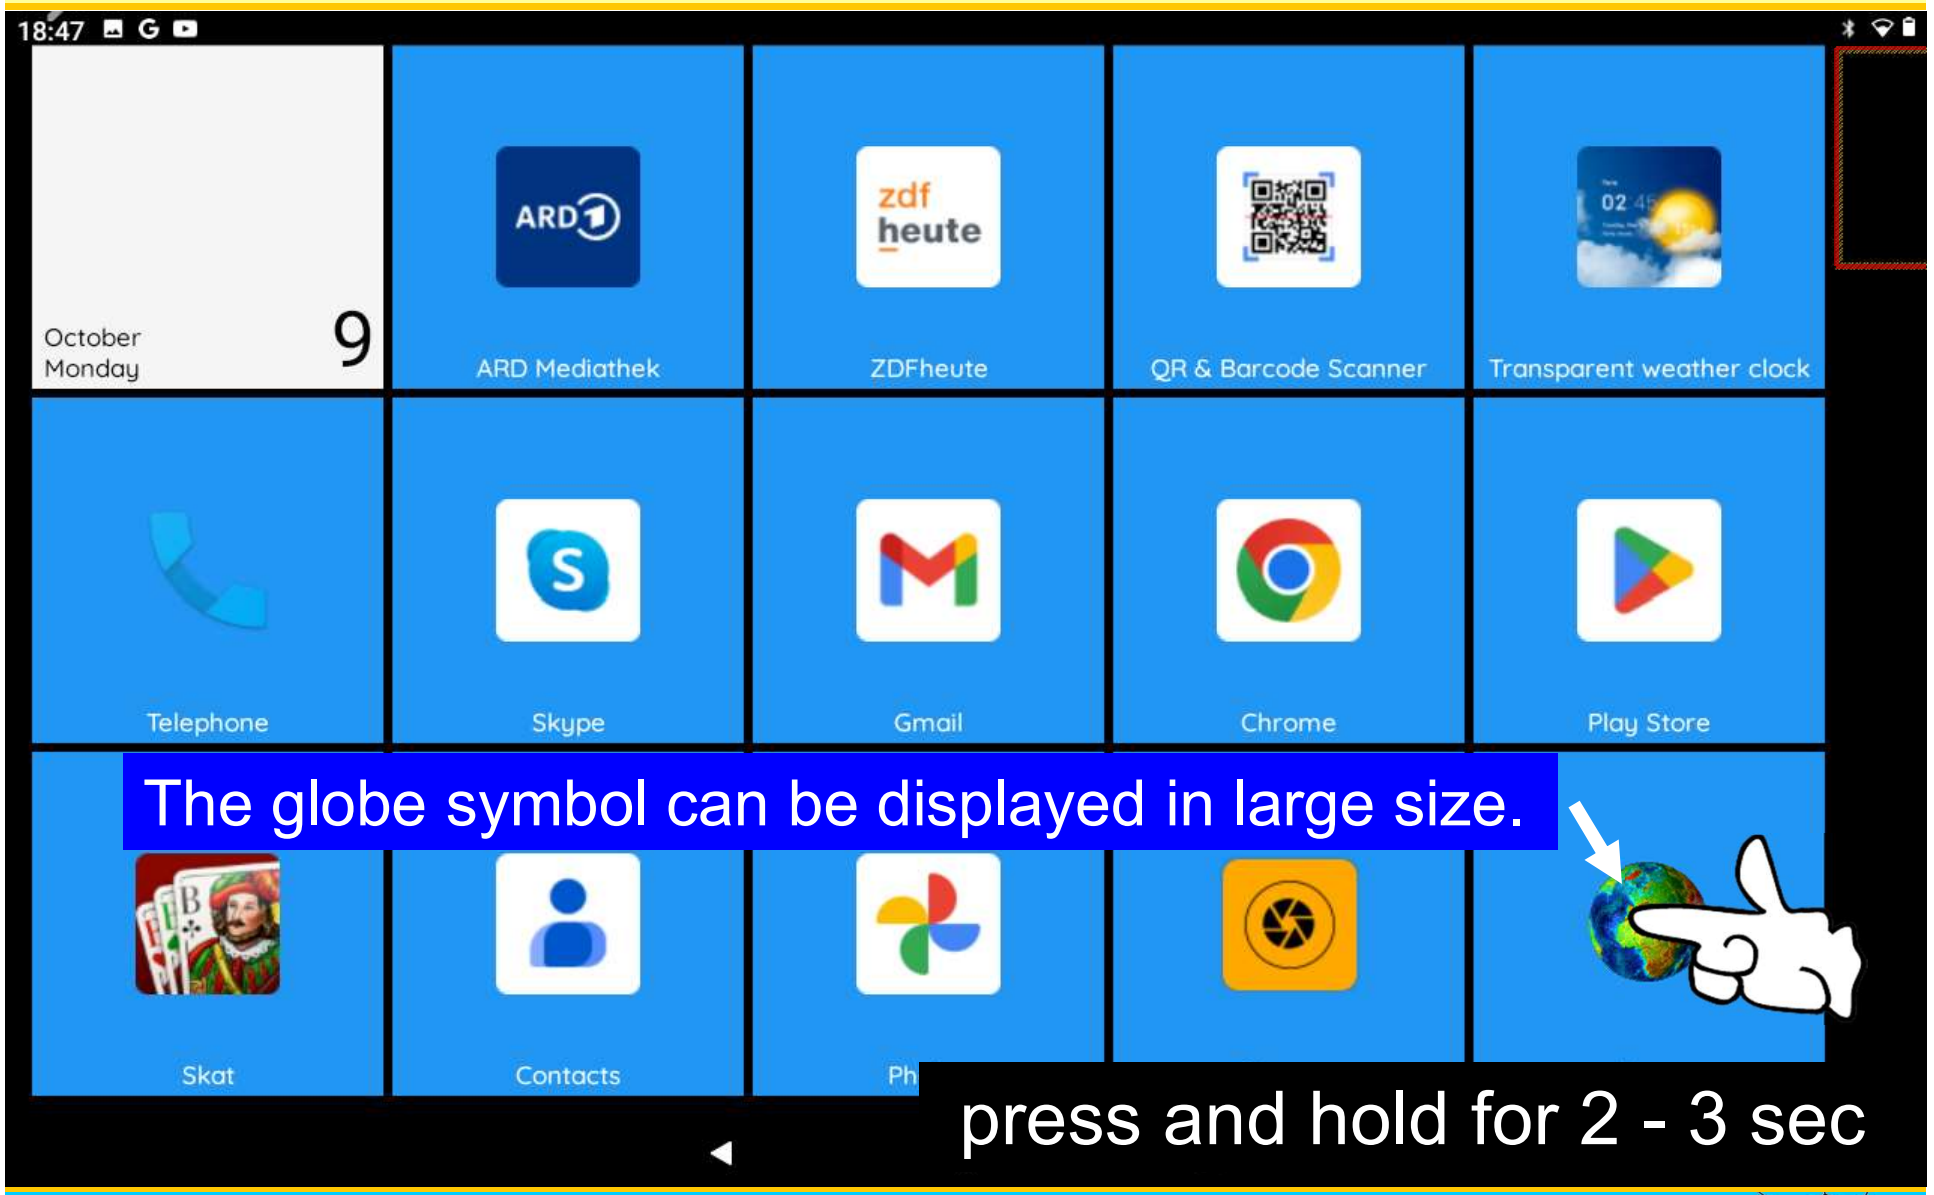

Let us connect you

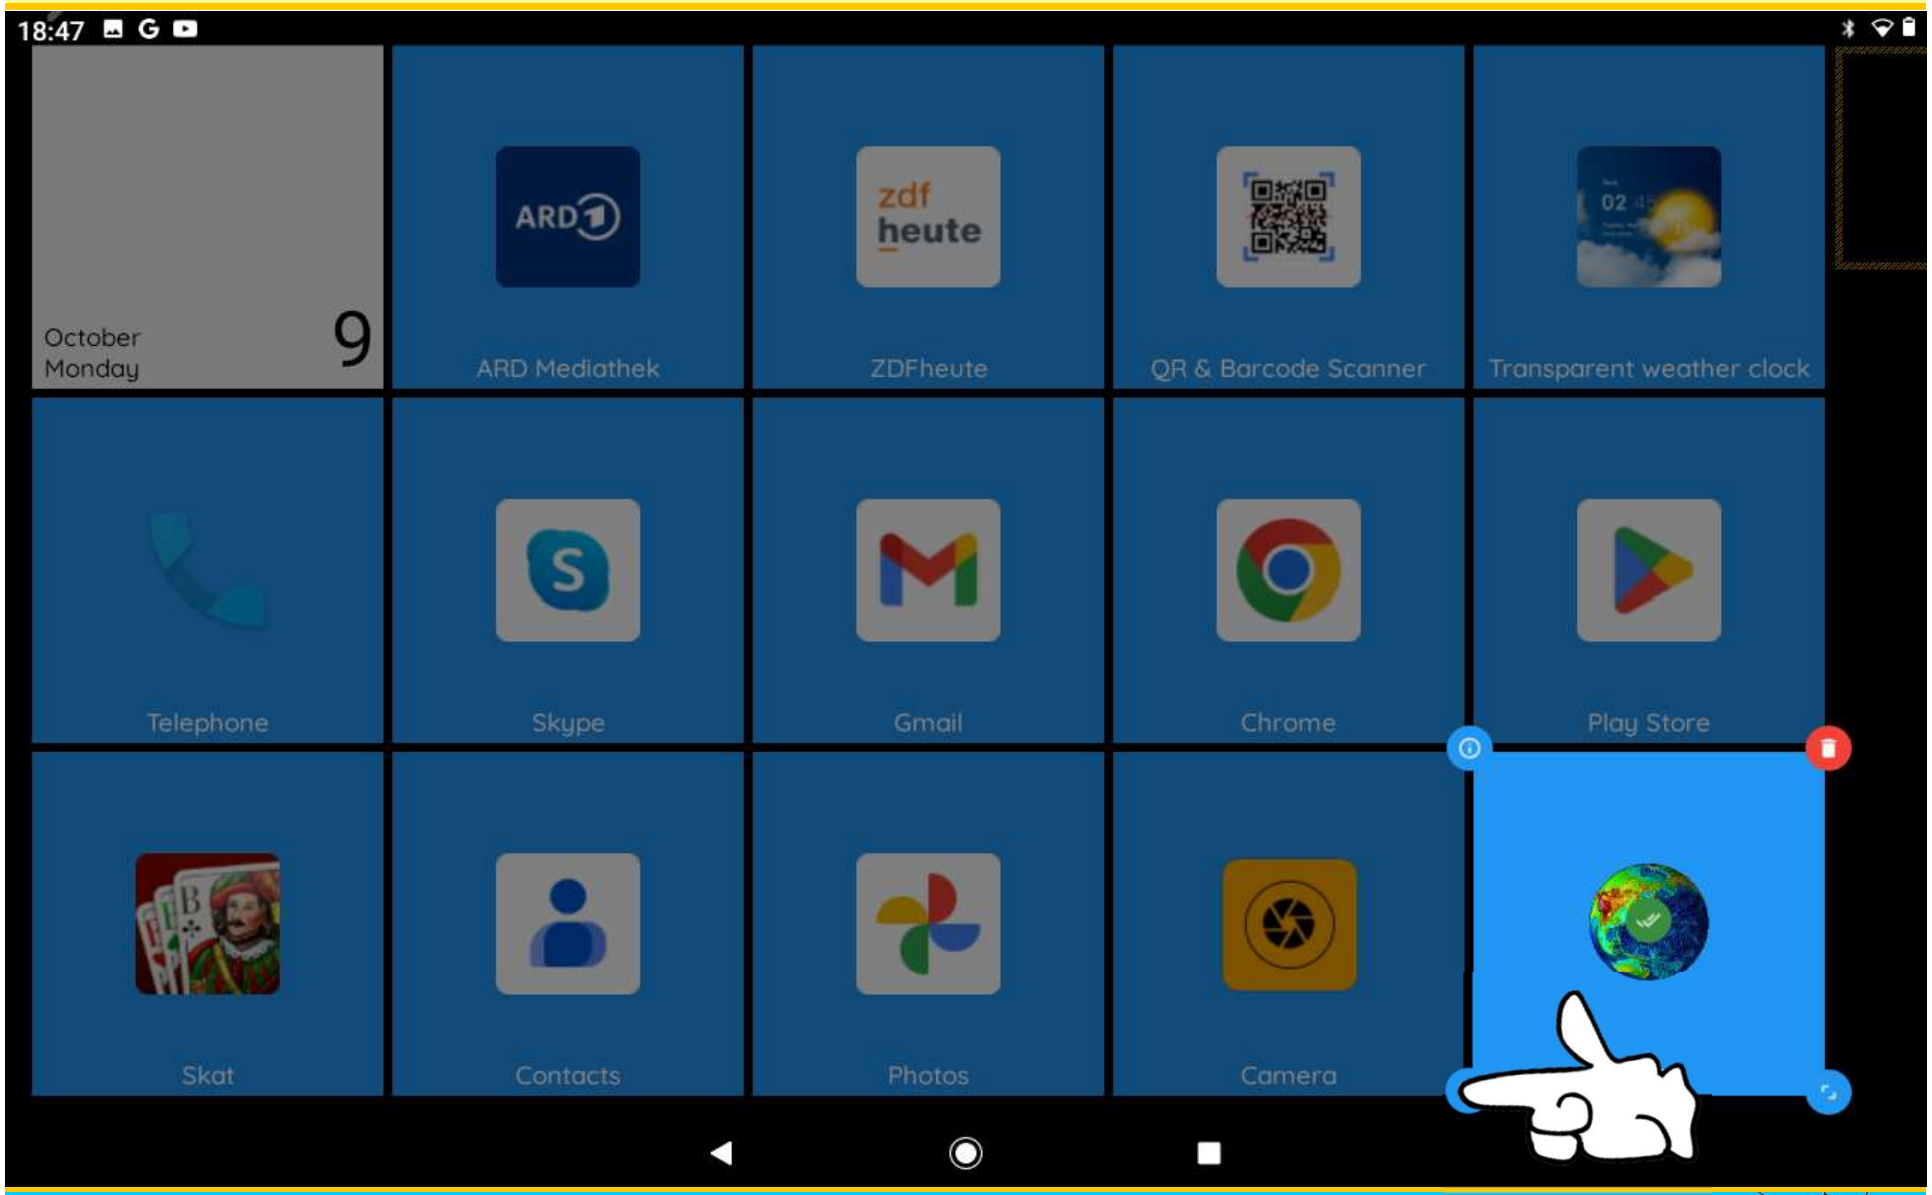

Let us connect you

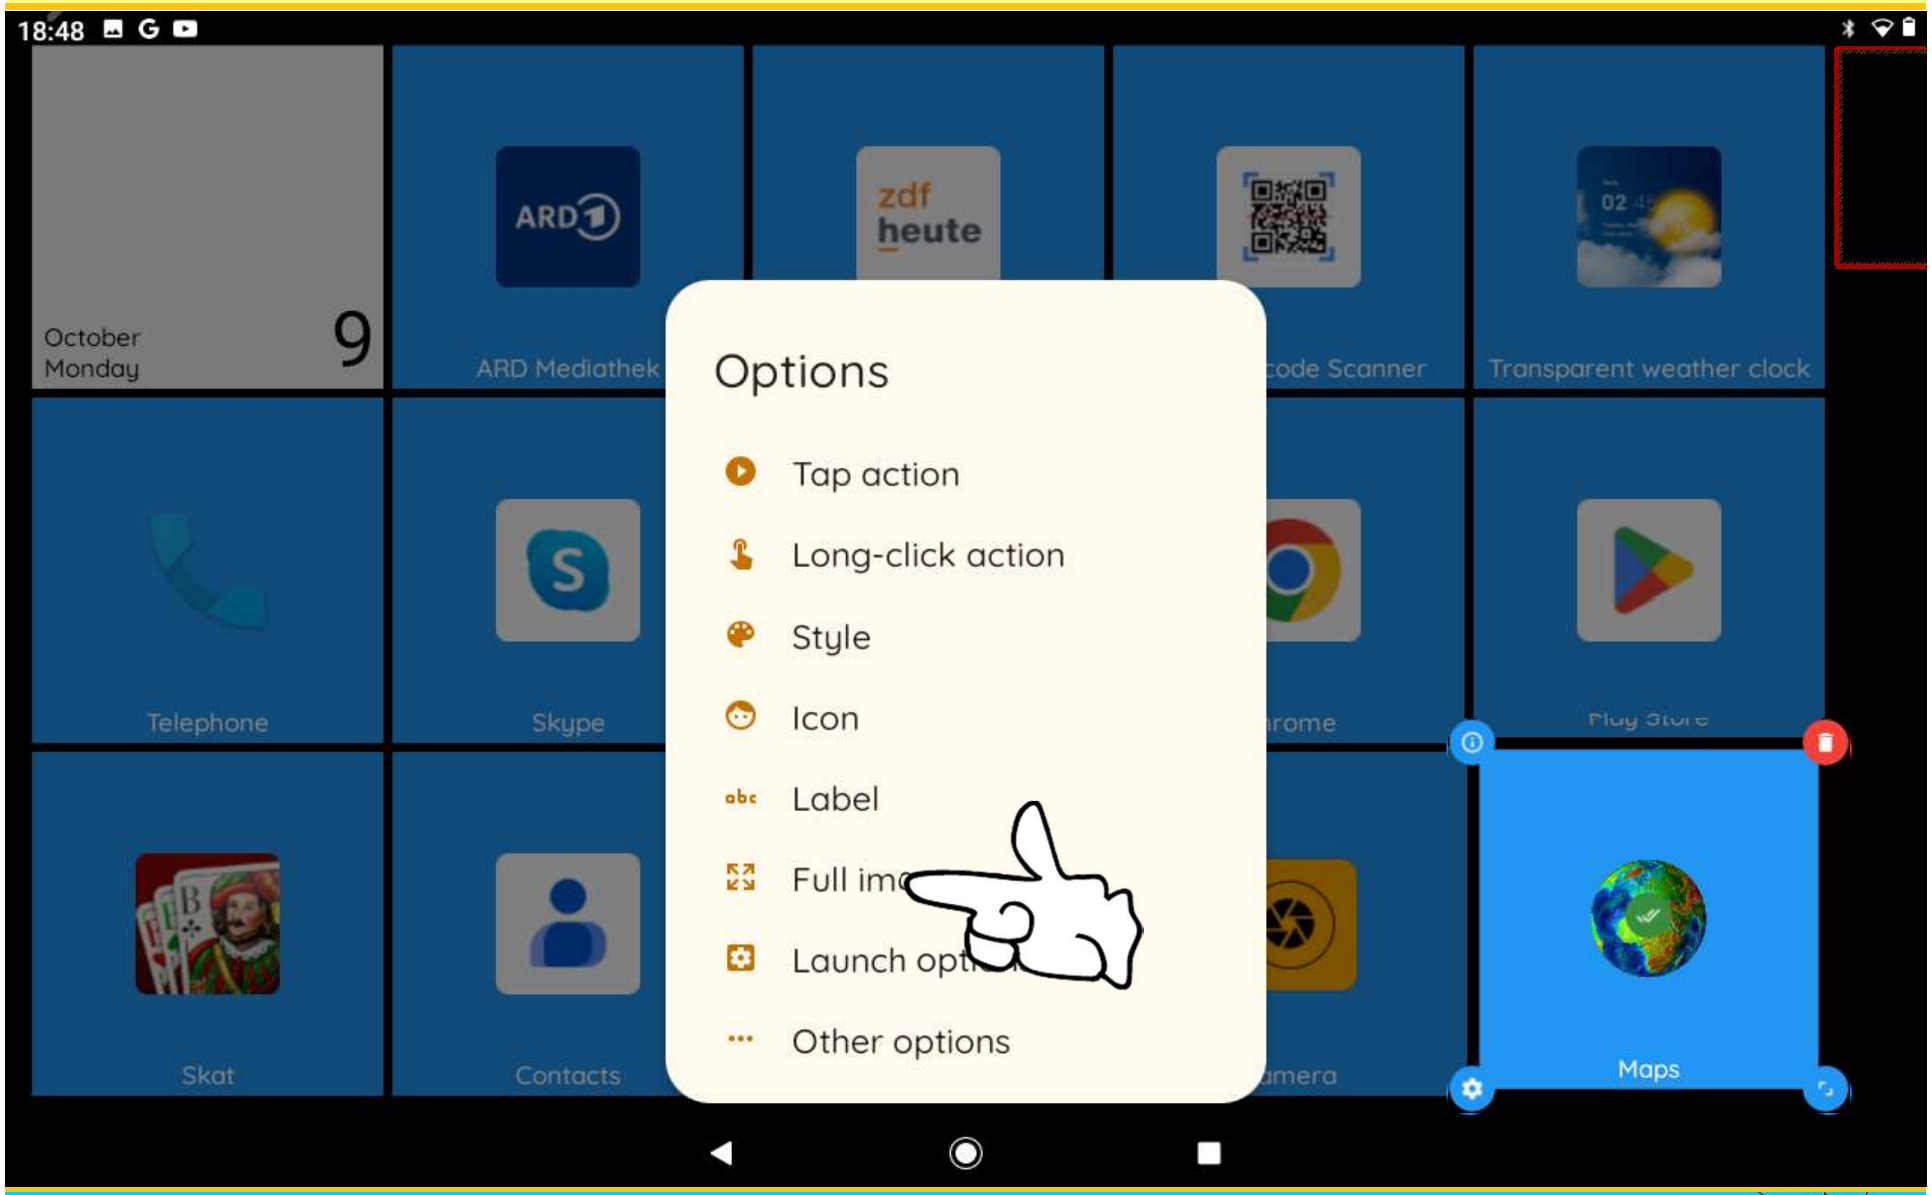

Changing the icon size for "Globe"

Let us connect you

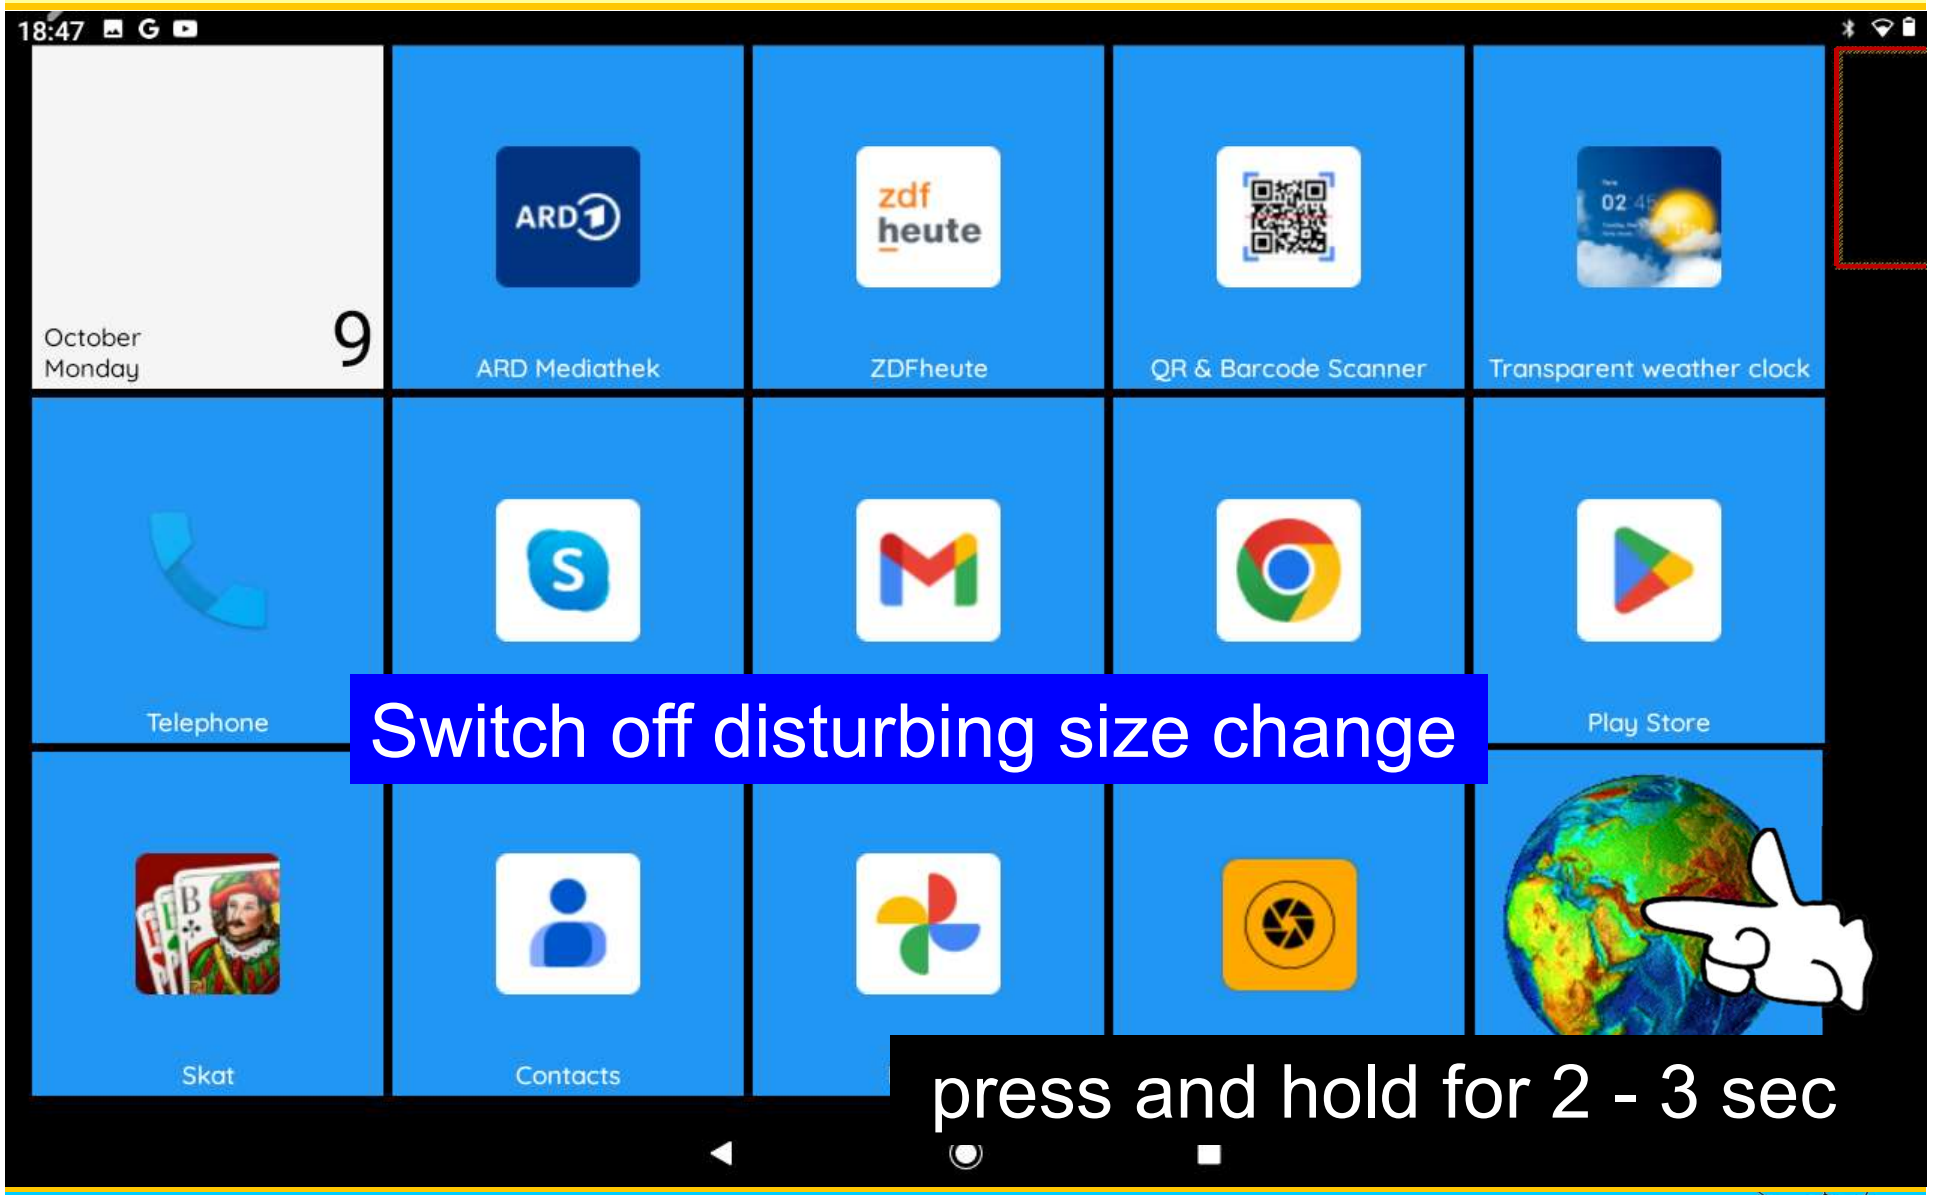

Let us connect you

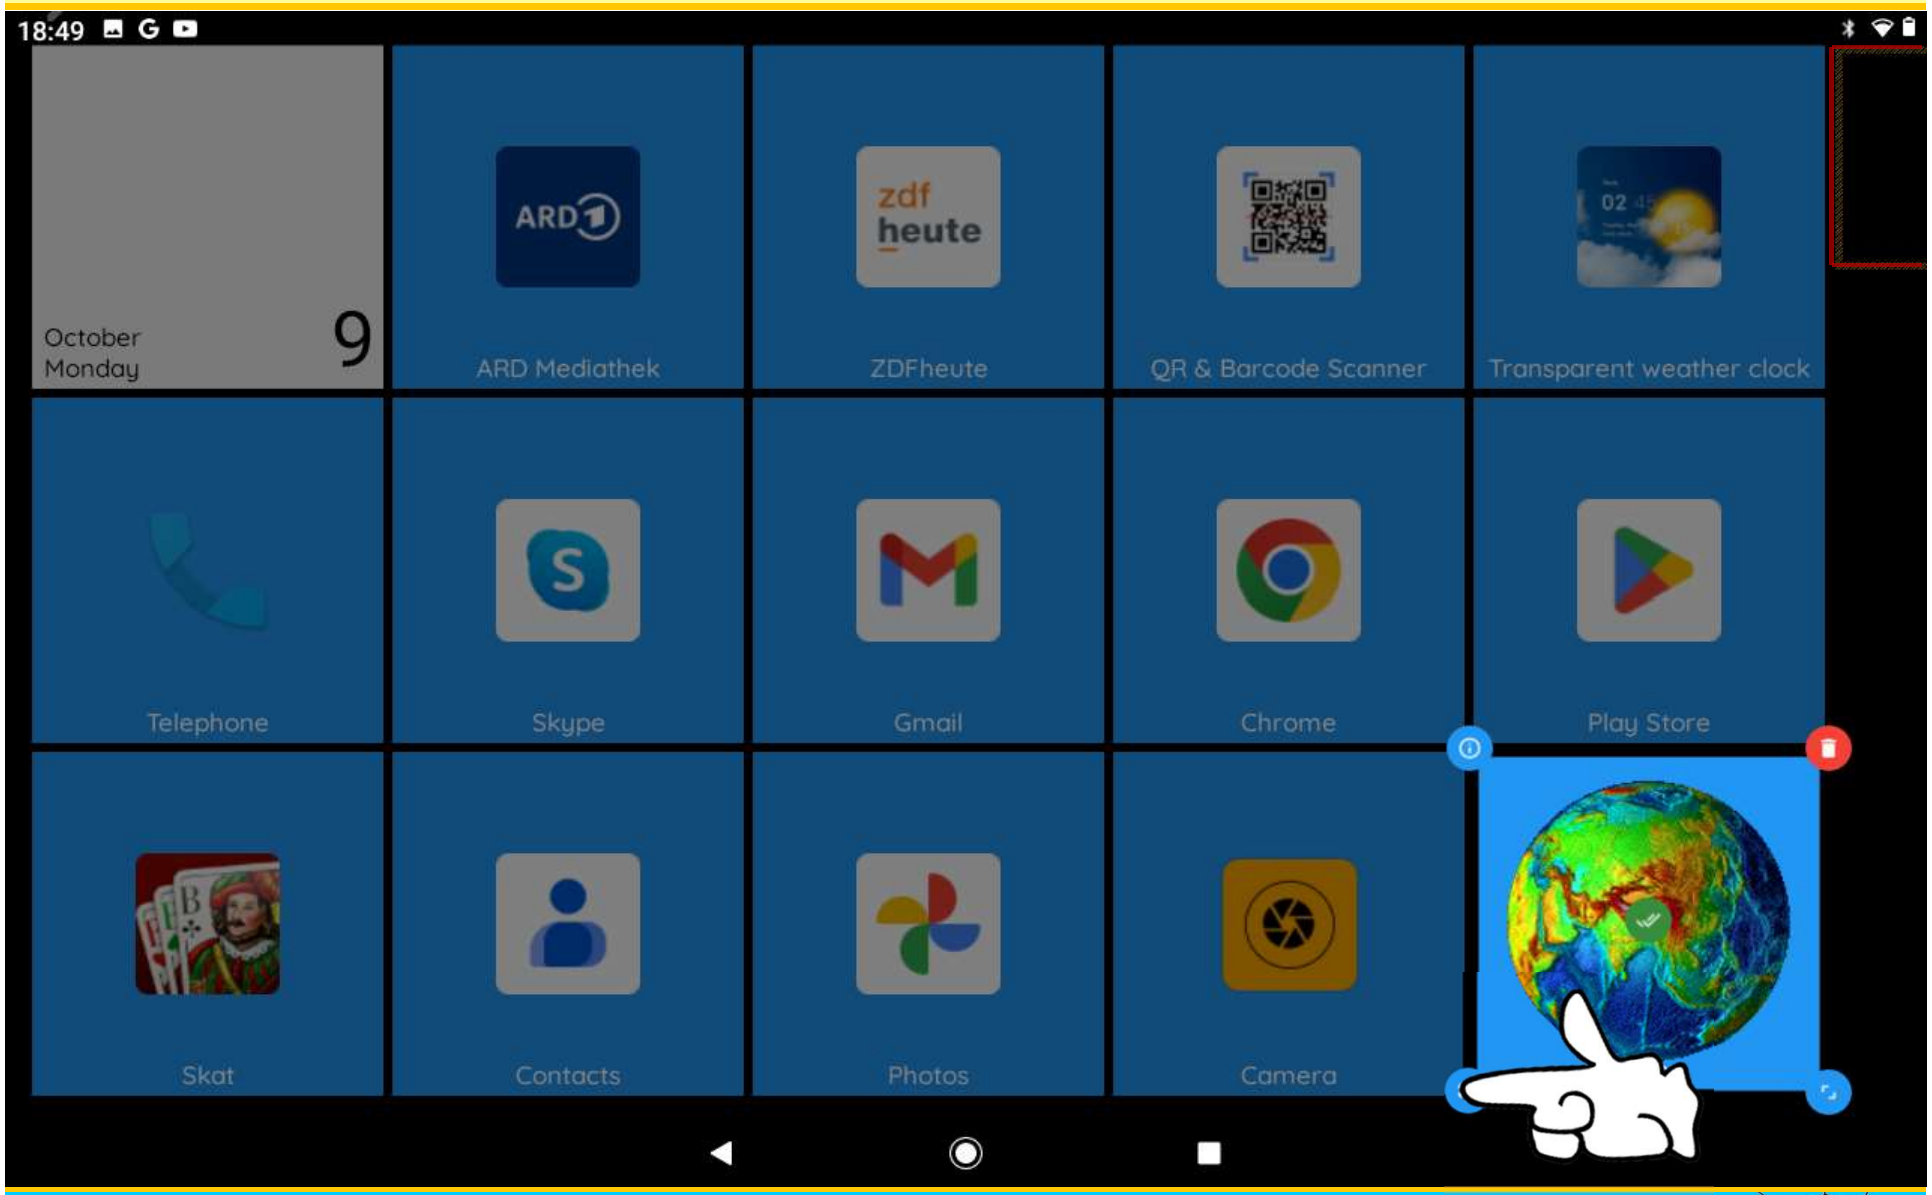

Let us connect you

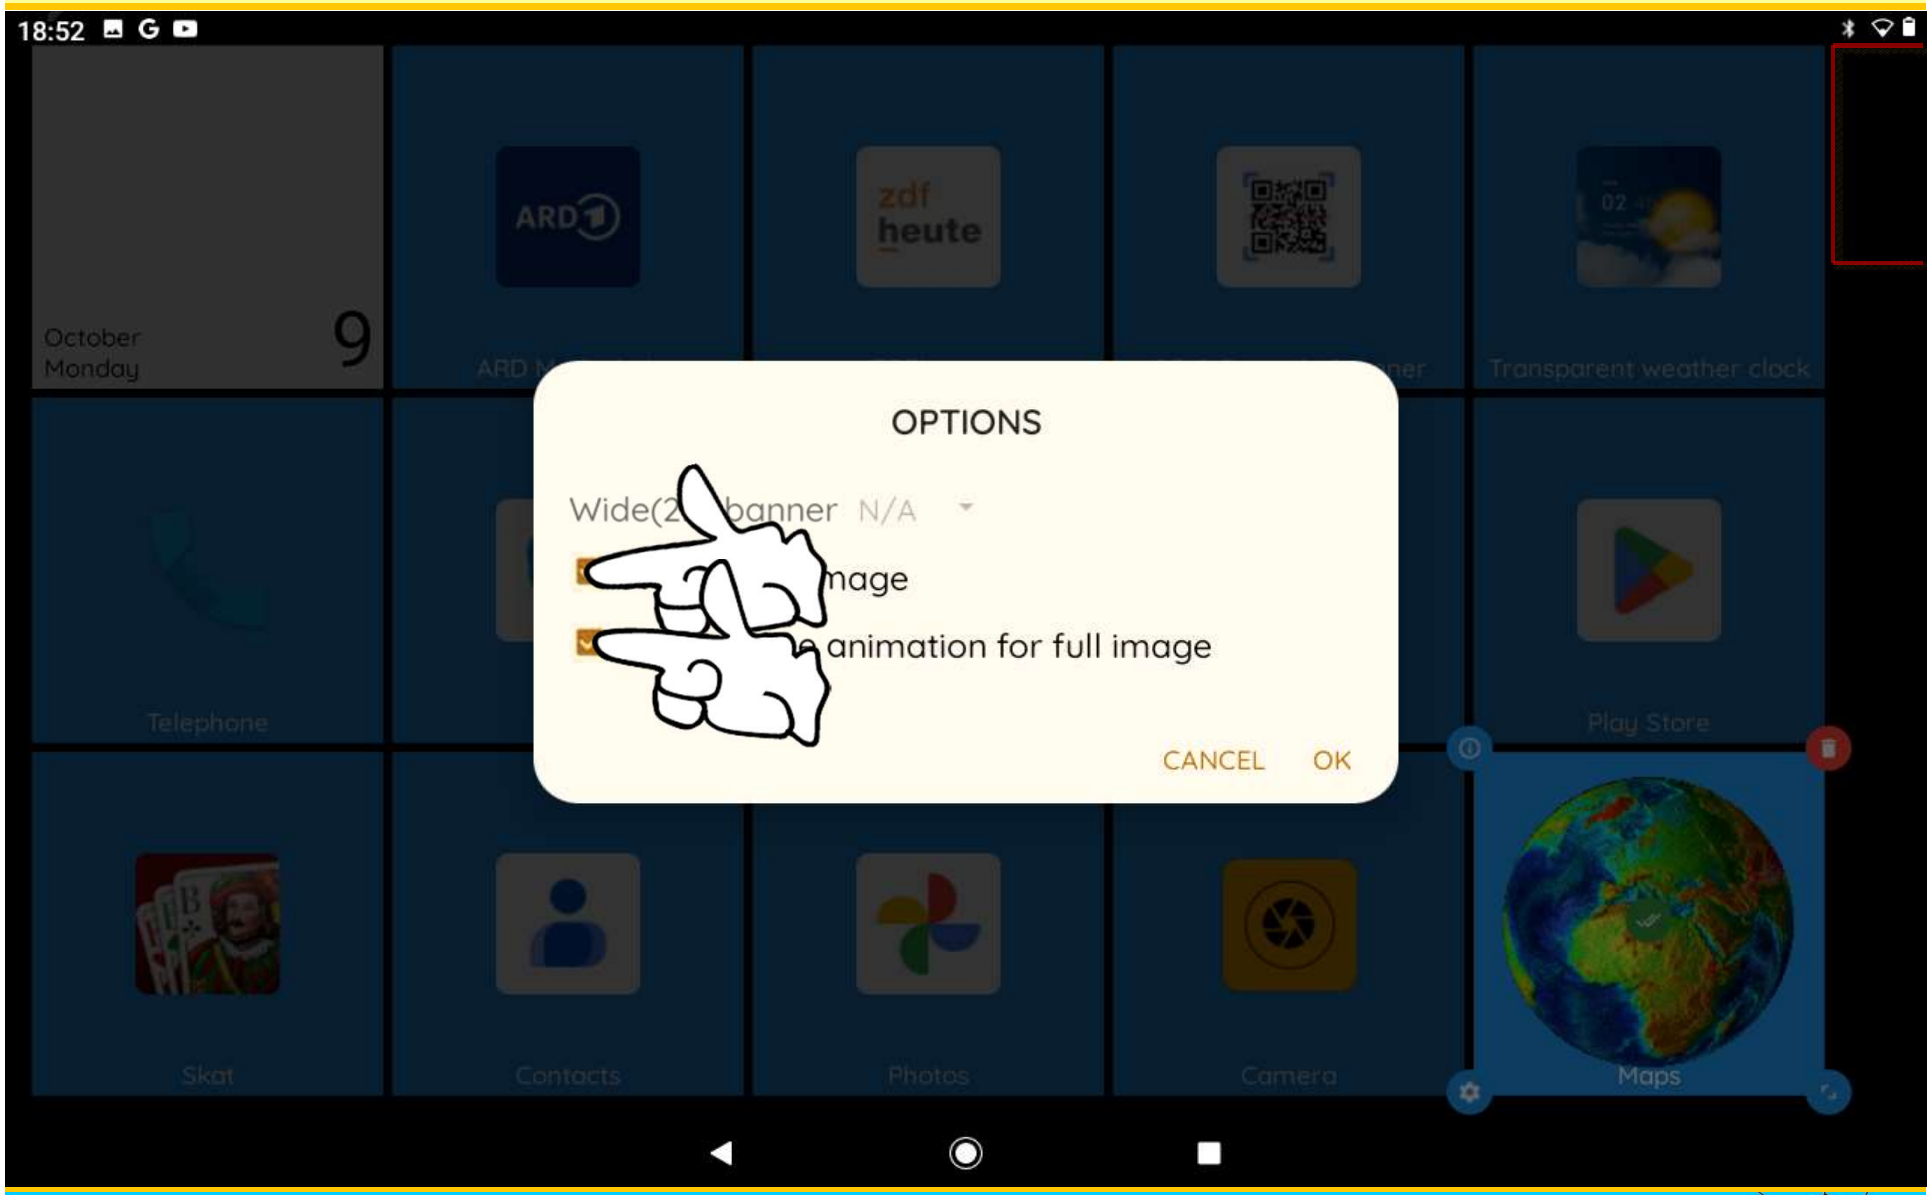

Let us connect you

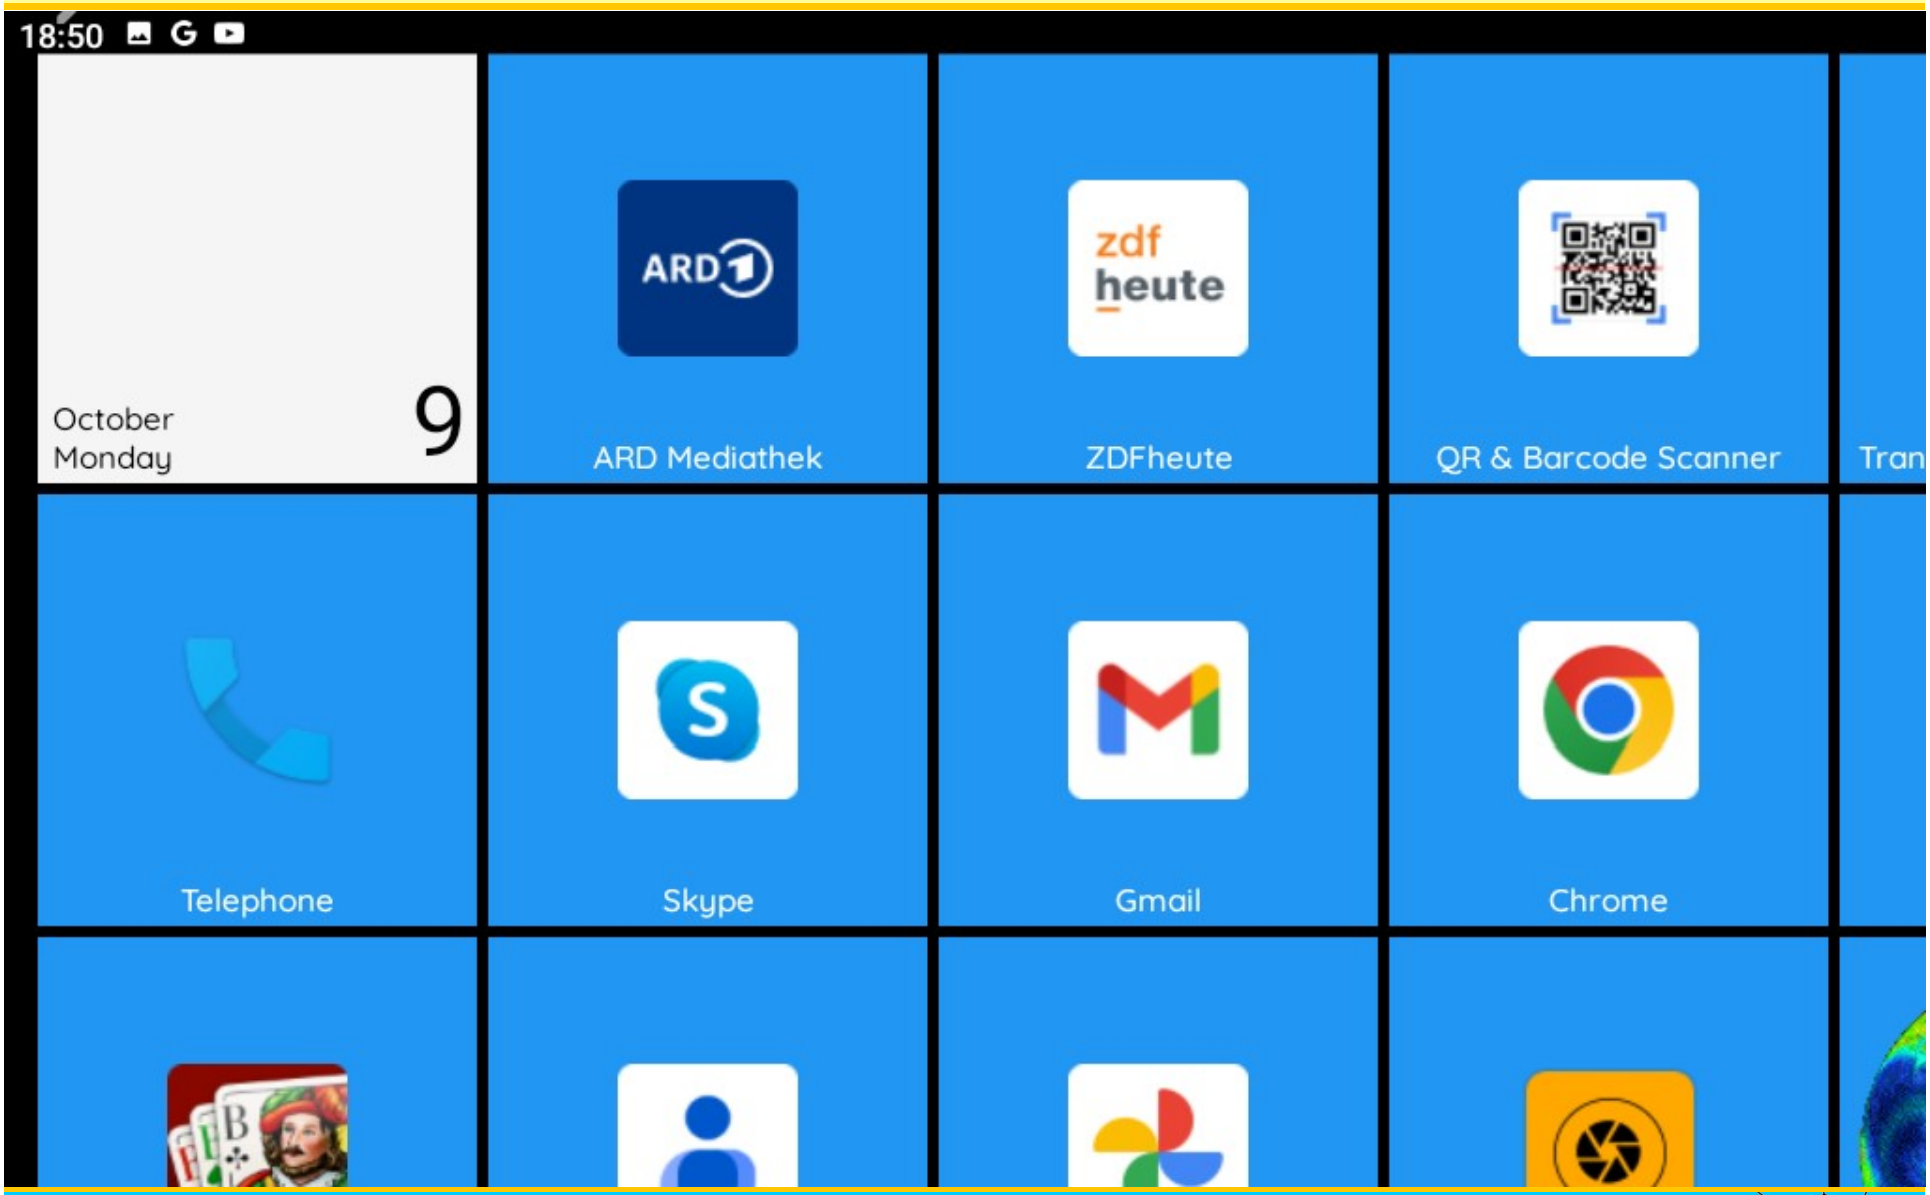

Let us connect you

Done for today

Lock User Interface

Lock

The tile screen should be locked after setup to avoid accidental changes (further programmes, size of the tiles). To do this, carry out the following operating steps:

1. Tap the tile screen at a free spot and drag it to the left.
2. Press and hold the plus sign in the black tile with the red border until the settings menu panel appears.
   (If you press briefly, the menu panel "Add" appears. Correction: Tap briefly on a blank area of the screen or on "1 step back").
3. Select "Launcher settings" in the menu panel.
4. On the 'Launcher settings' panel, tap 'Edit lock' or the corresponding status box in the right-hand column. (The status box turns black and gets a tick).
5. Press the "Home" button: The screen appears without a plus tile.

Let us connect you

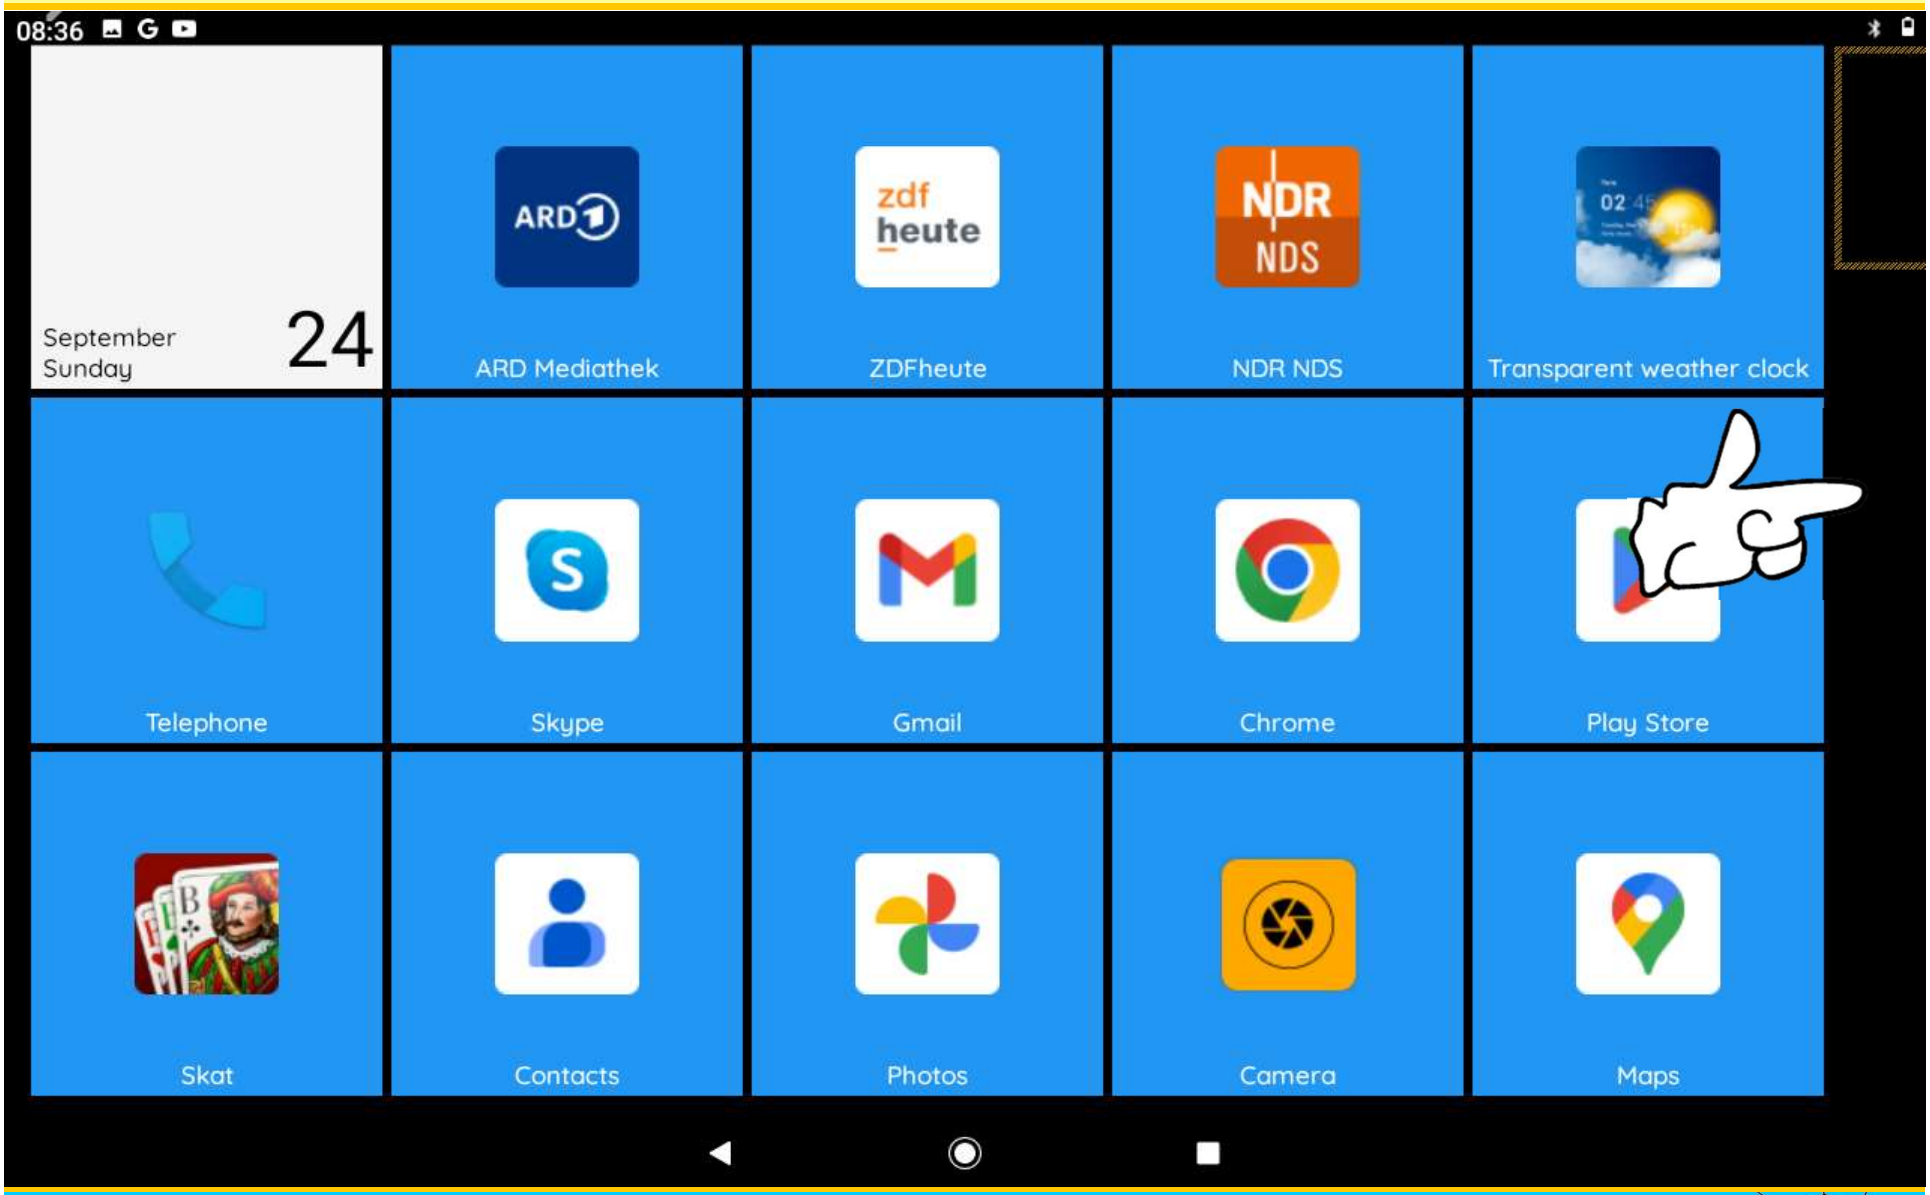

Let us connect you

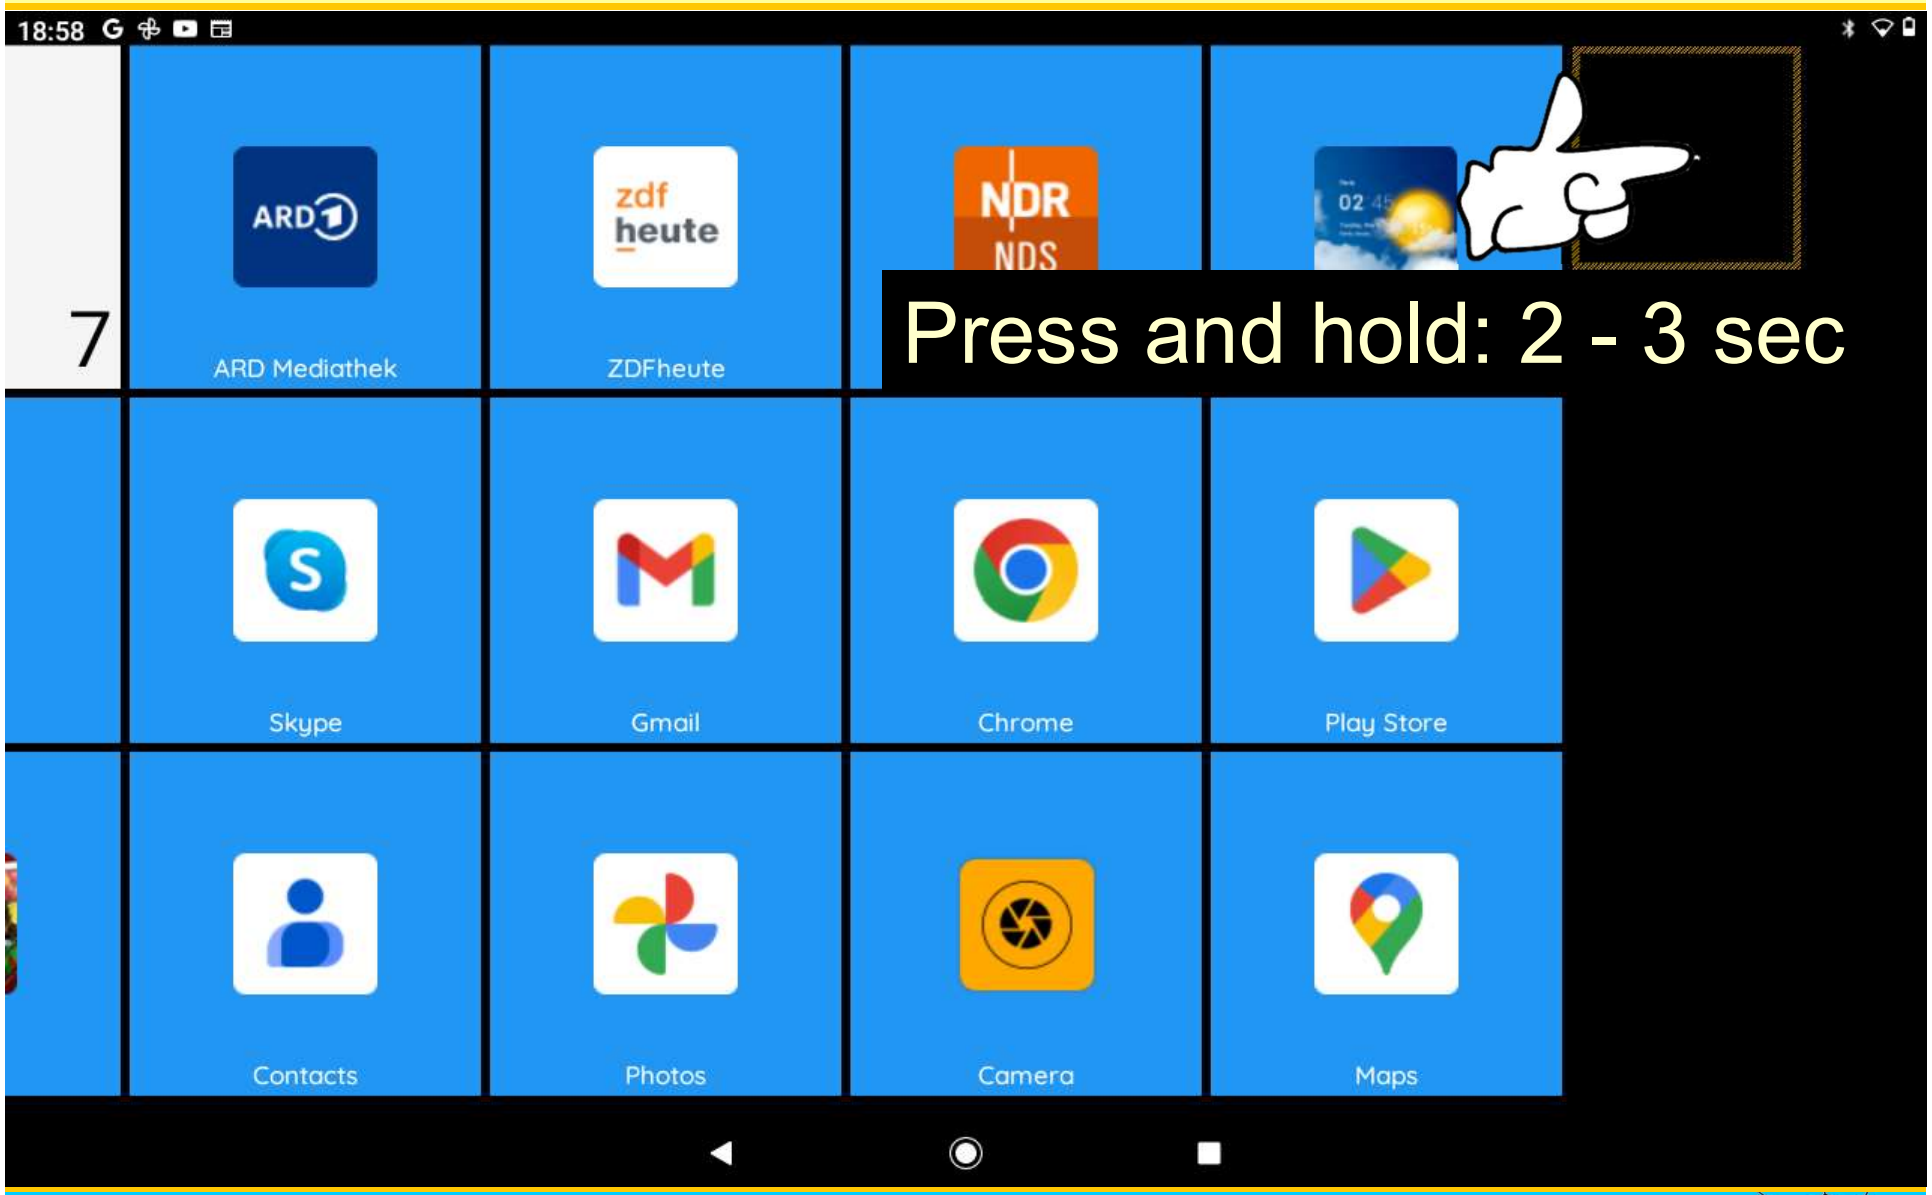

Let us connect you

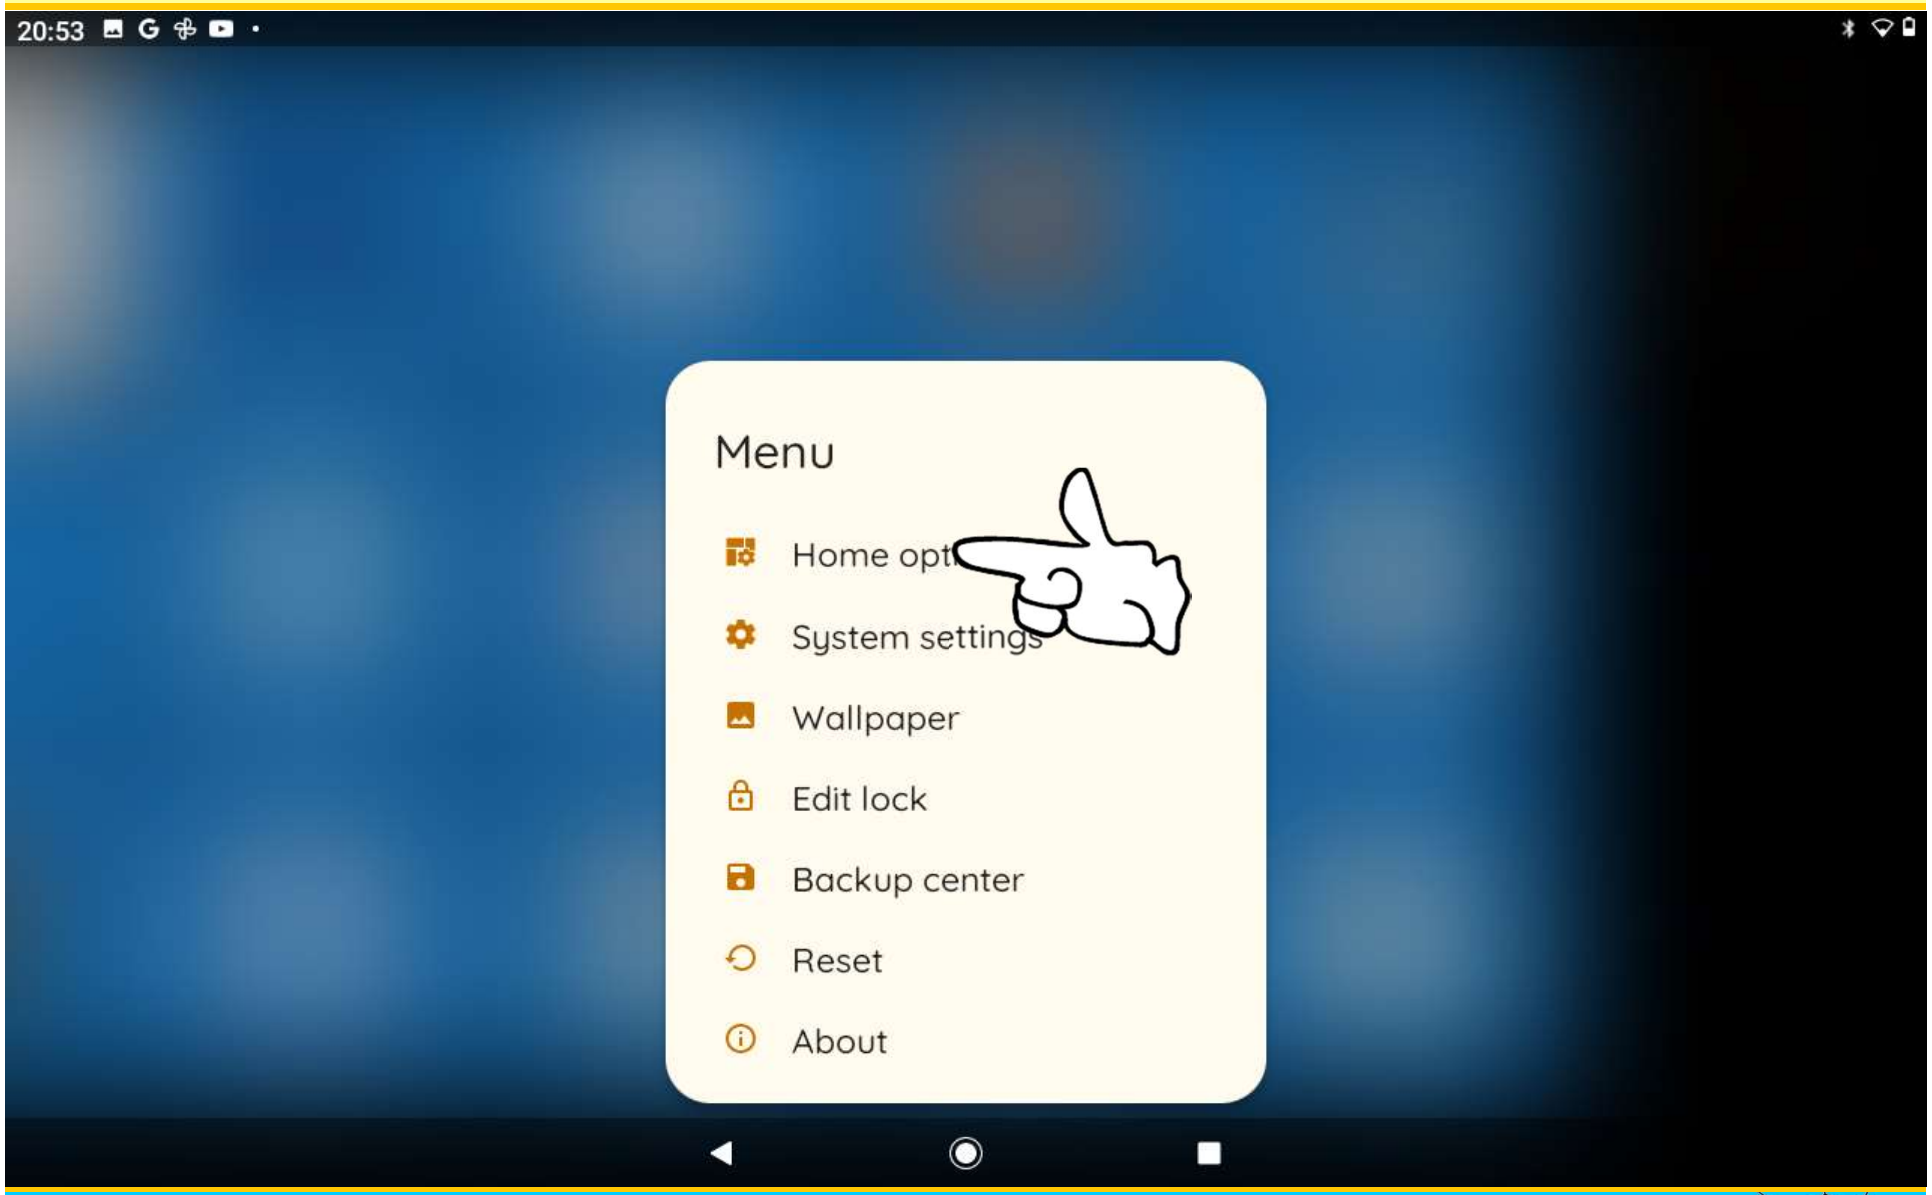

Let us connect you

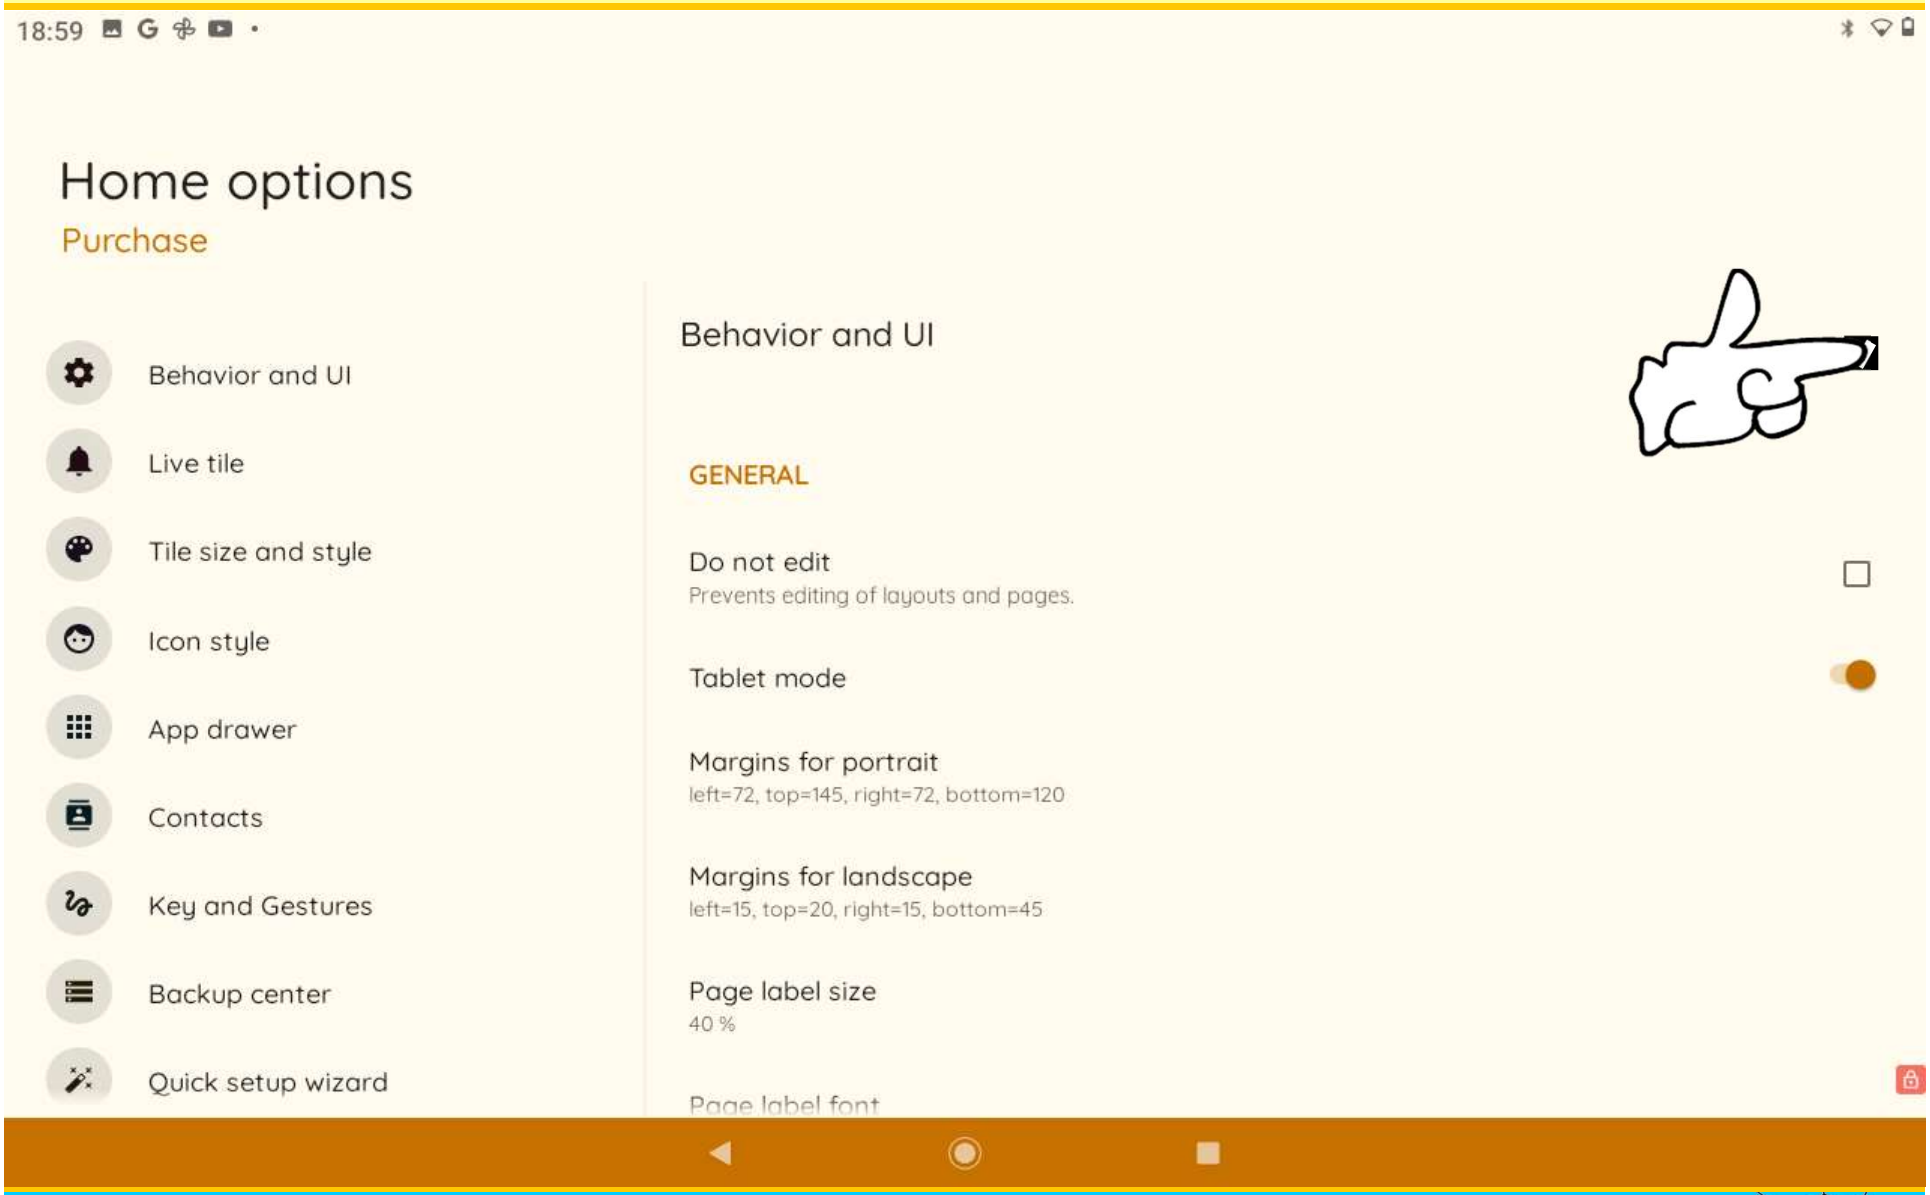

Let us connect you

Helmuth Zander
Dr. Werner Jüptner
11.10.2023

Return to the work screen

Let us connect you

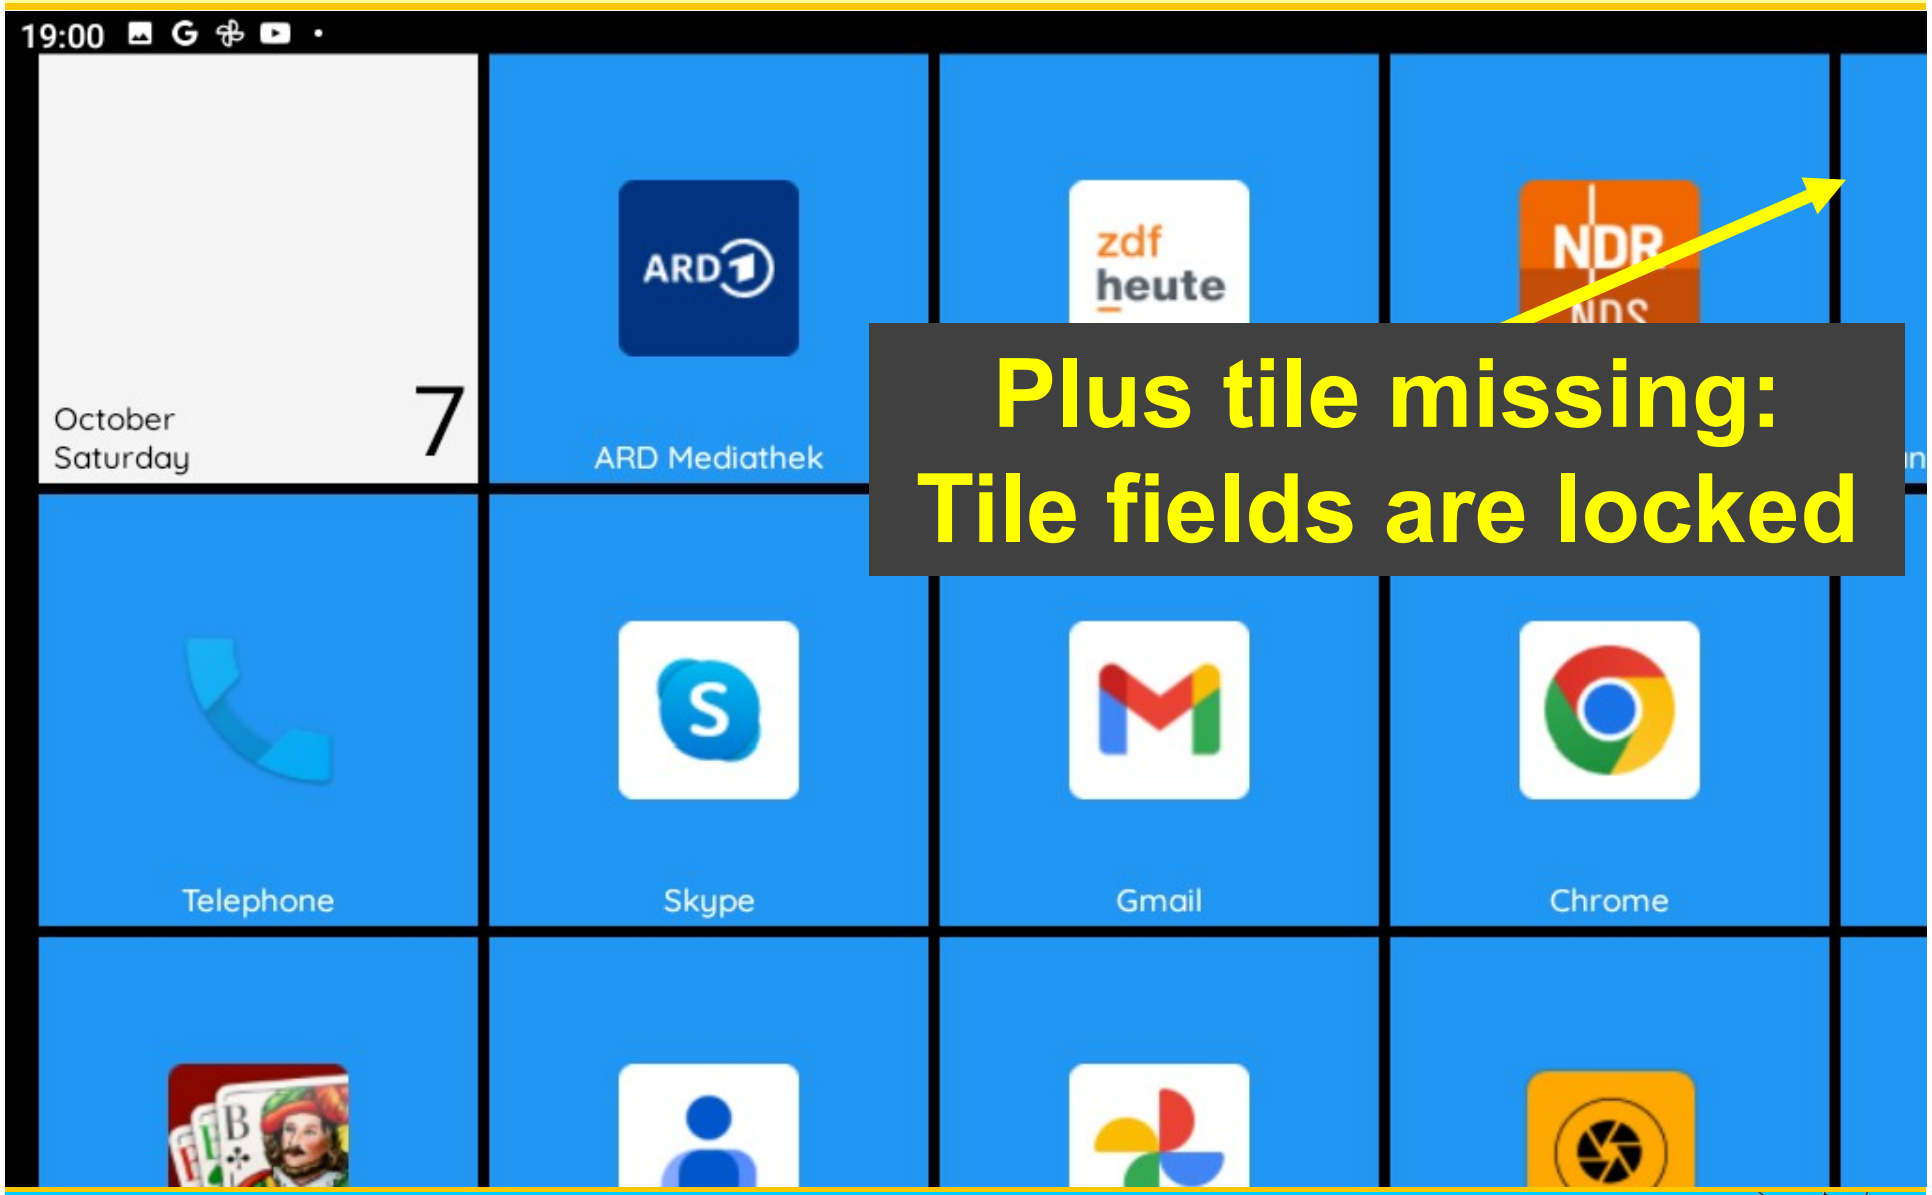

Let us connect you

Done for today

Remove User Edit Lock

Unlock

The work screen - tile interface - will be locked after the set-up. This means that no more changes (further programmes, size of the tiles, shortcuts) can be made. If changes are still desired, the screen must be unlocked as follows:

1. Drag the icons on the upper edge downwards until the cogwheel is visible.
2. In the settings list, select "Settings“, press "Apps and notifications" in the settings list.
3. Press 'Default apps' in the new list.
4. Select "Start App" in the new list.
5. Select "Quickstep / Square Home": Select "Quickstep".
6. The start screen appears: drag upwards.
7. Select "Launcher settings".
8. Delete "Edit lock" in the right-hand list.
9. Select "Step back" in the bottom line.
10. Select "Settings" (= cogwheel).
11. Select "Apps and notifications.
12. Select "Standard Apps.
13. Select "Start App"
14. Select "Quickstep / Square Home": select "Square Home"

Let us connect you

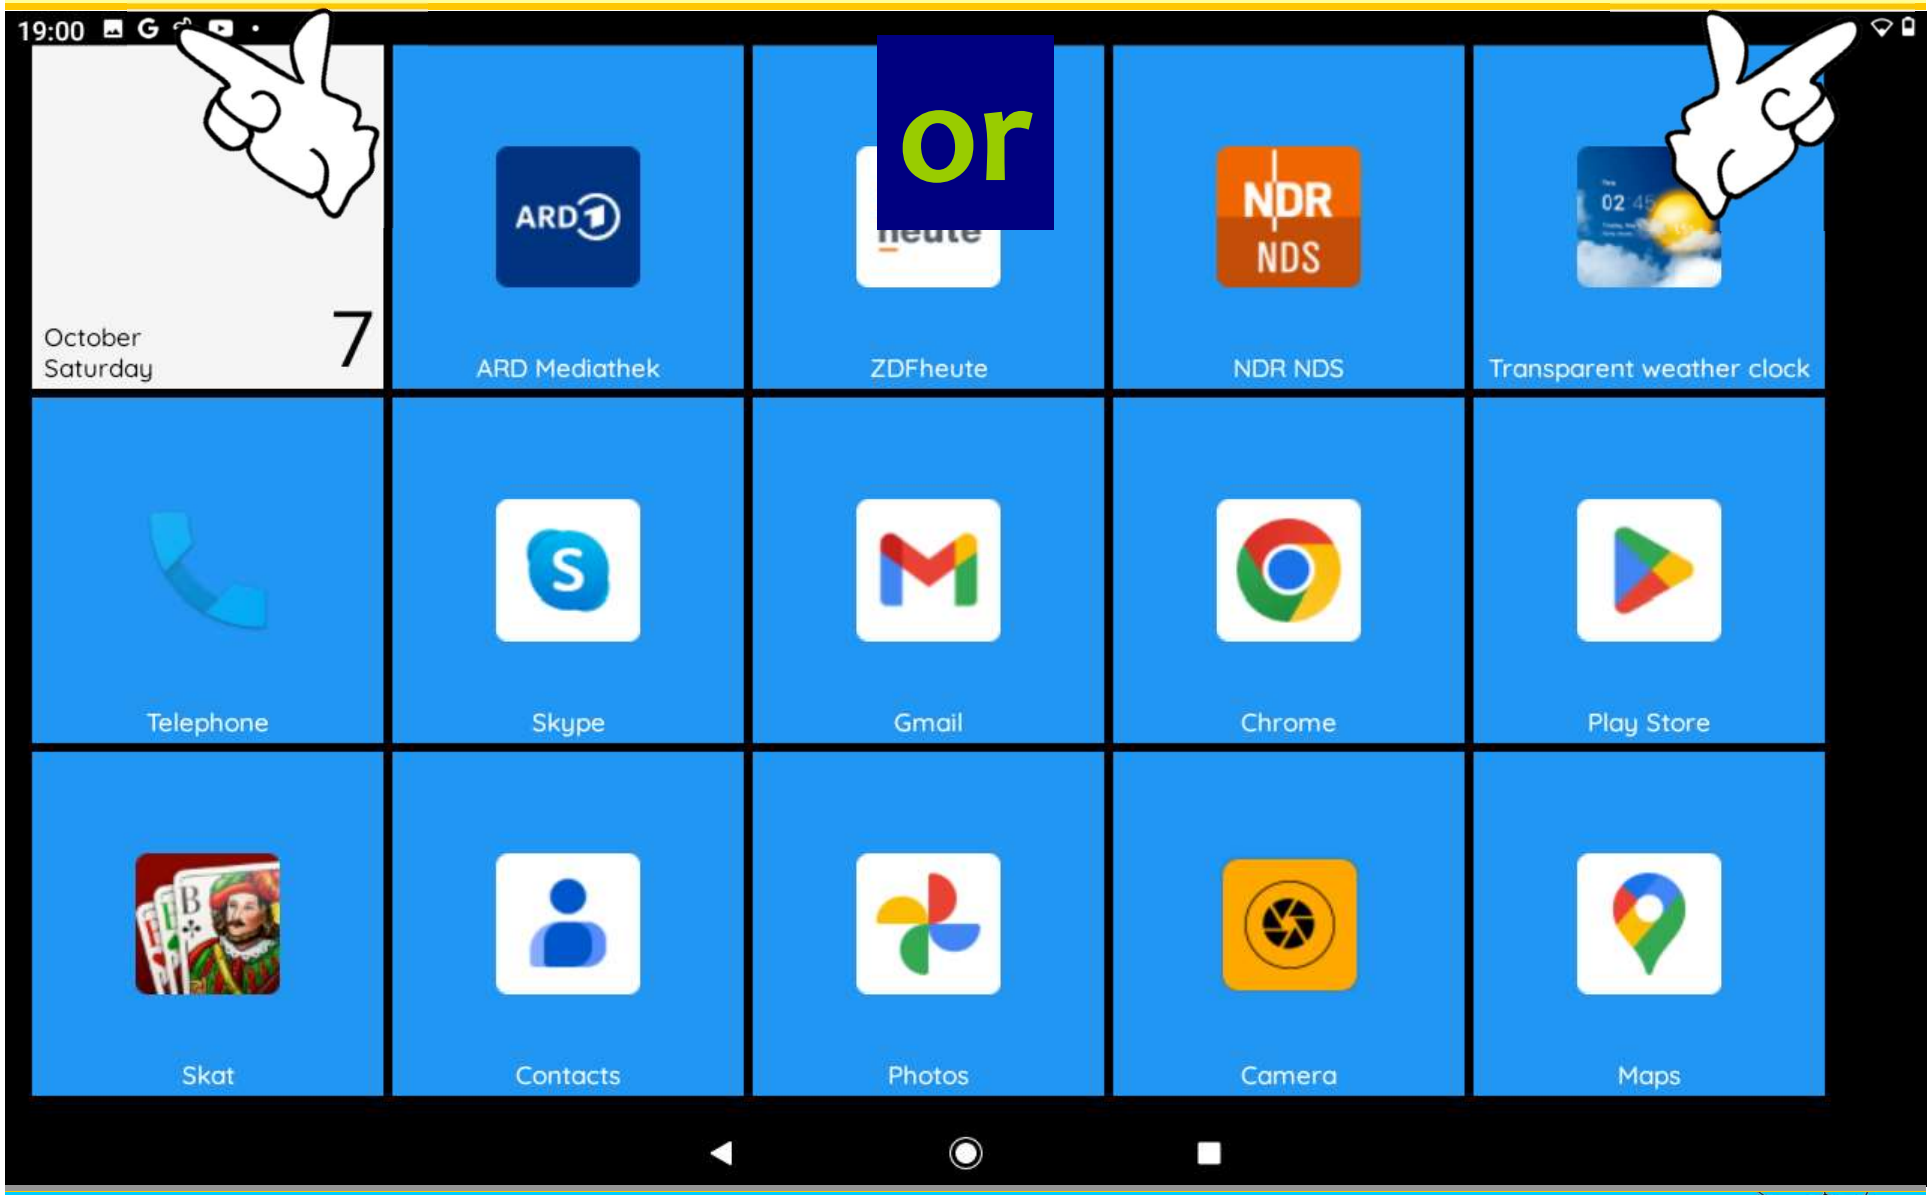

Let us connect you

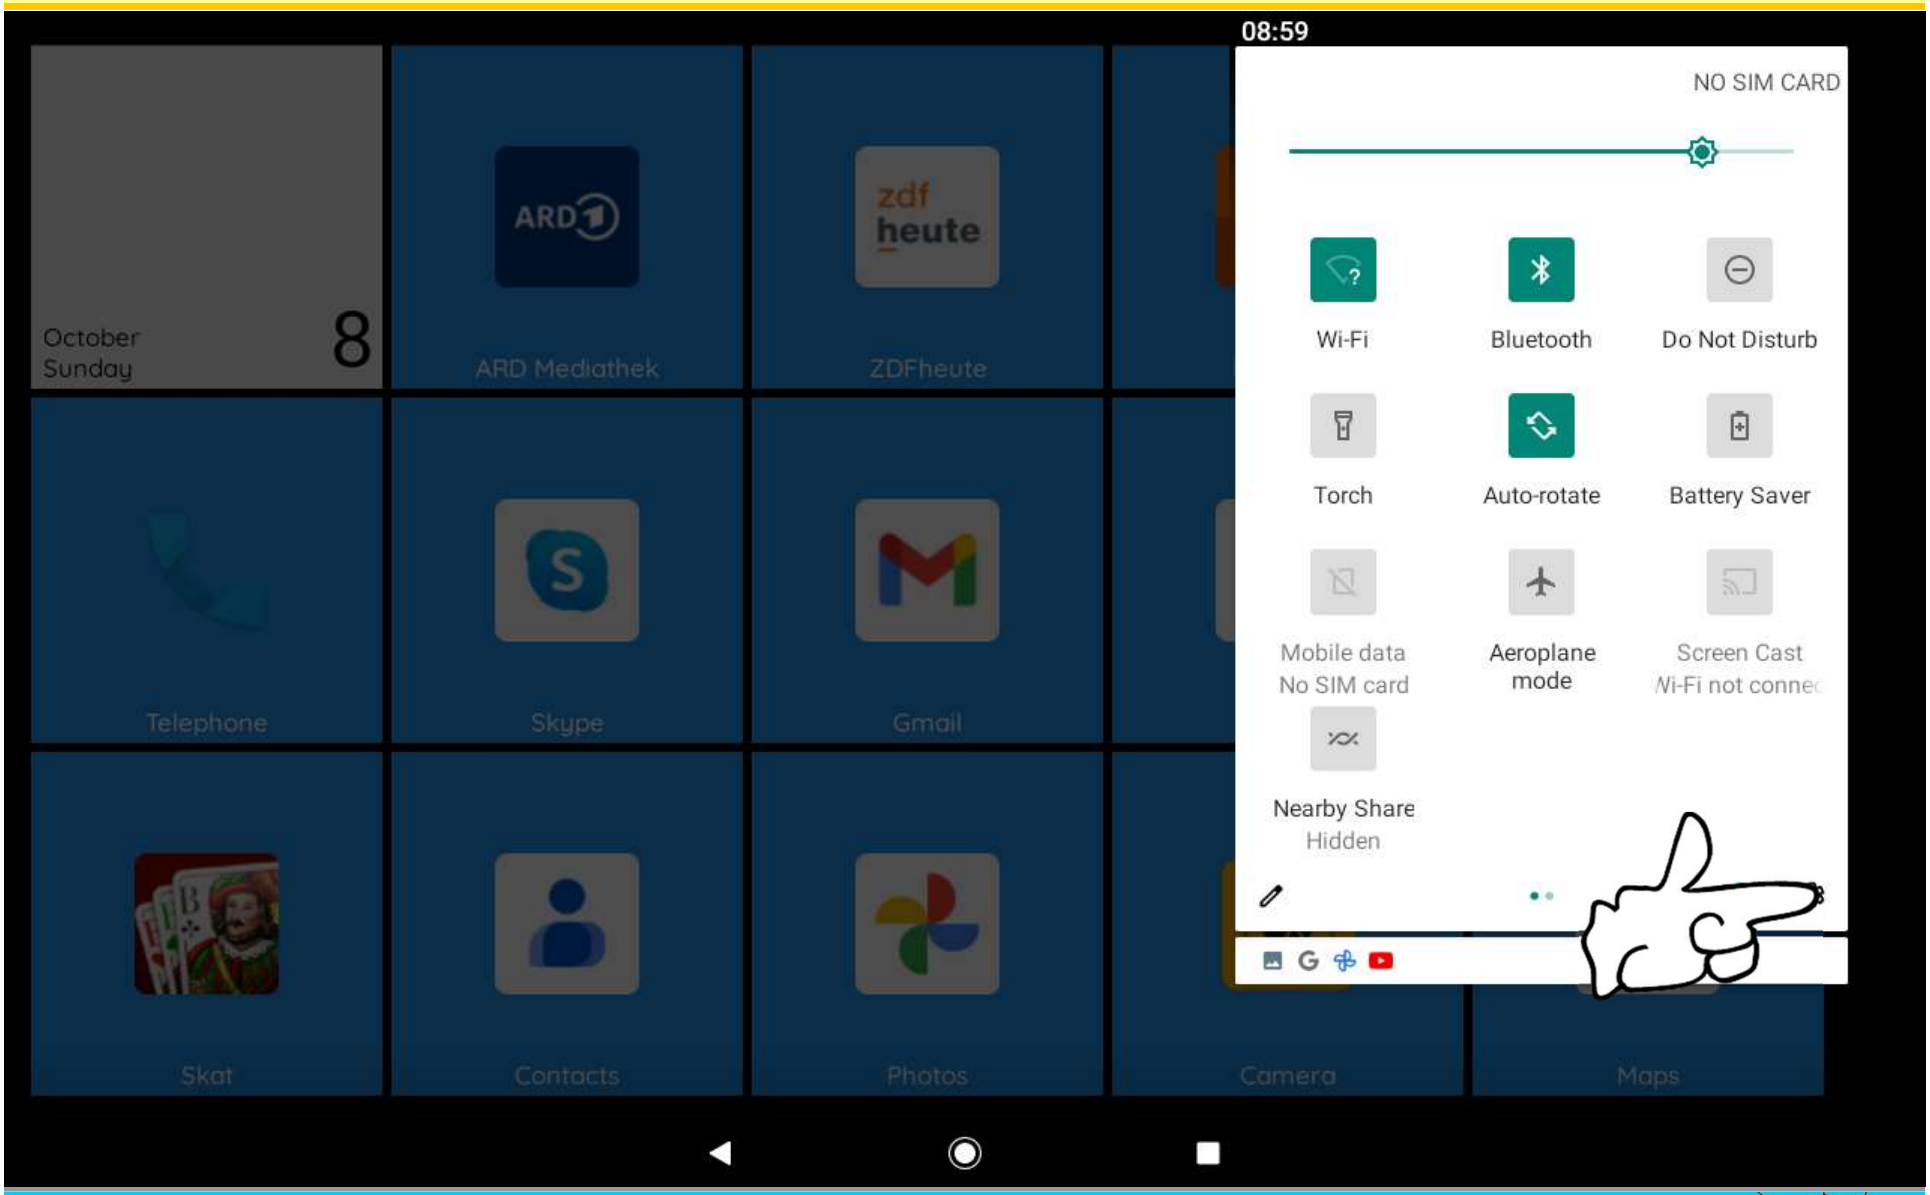

Let us connect you

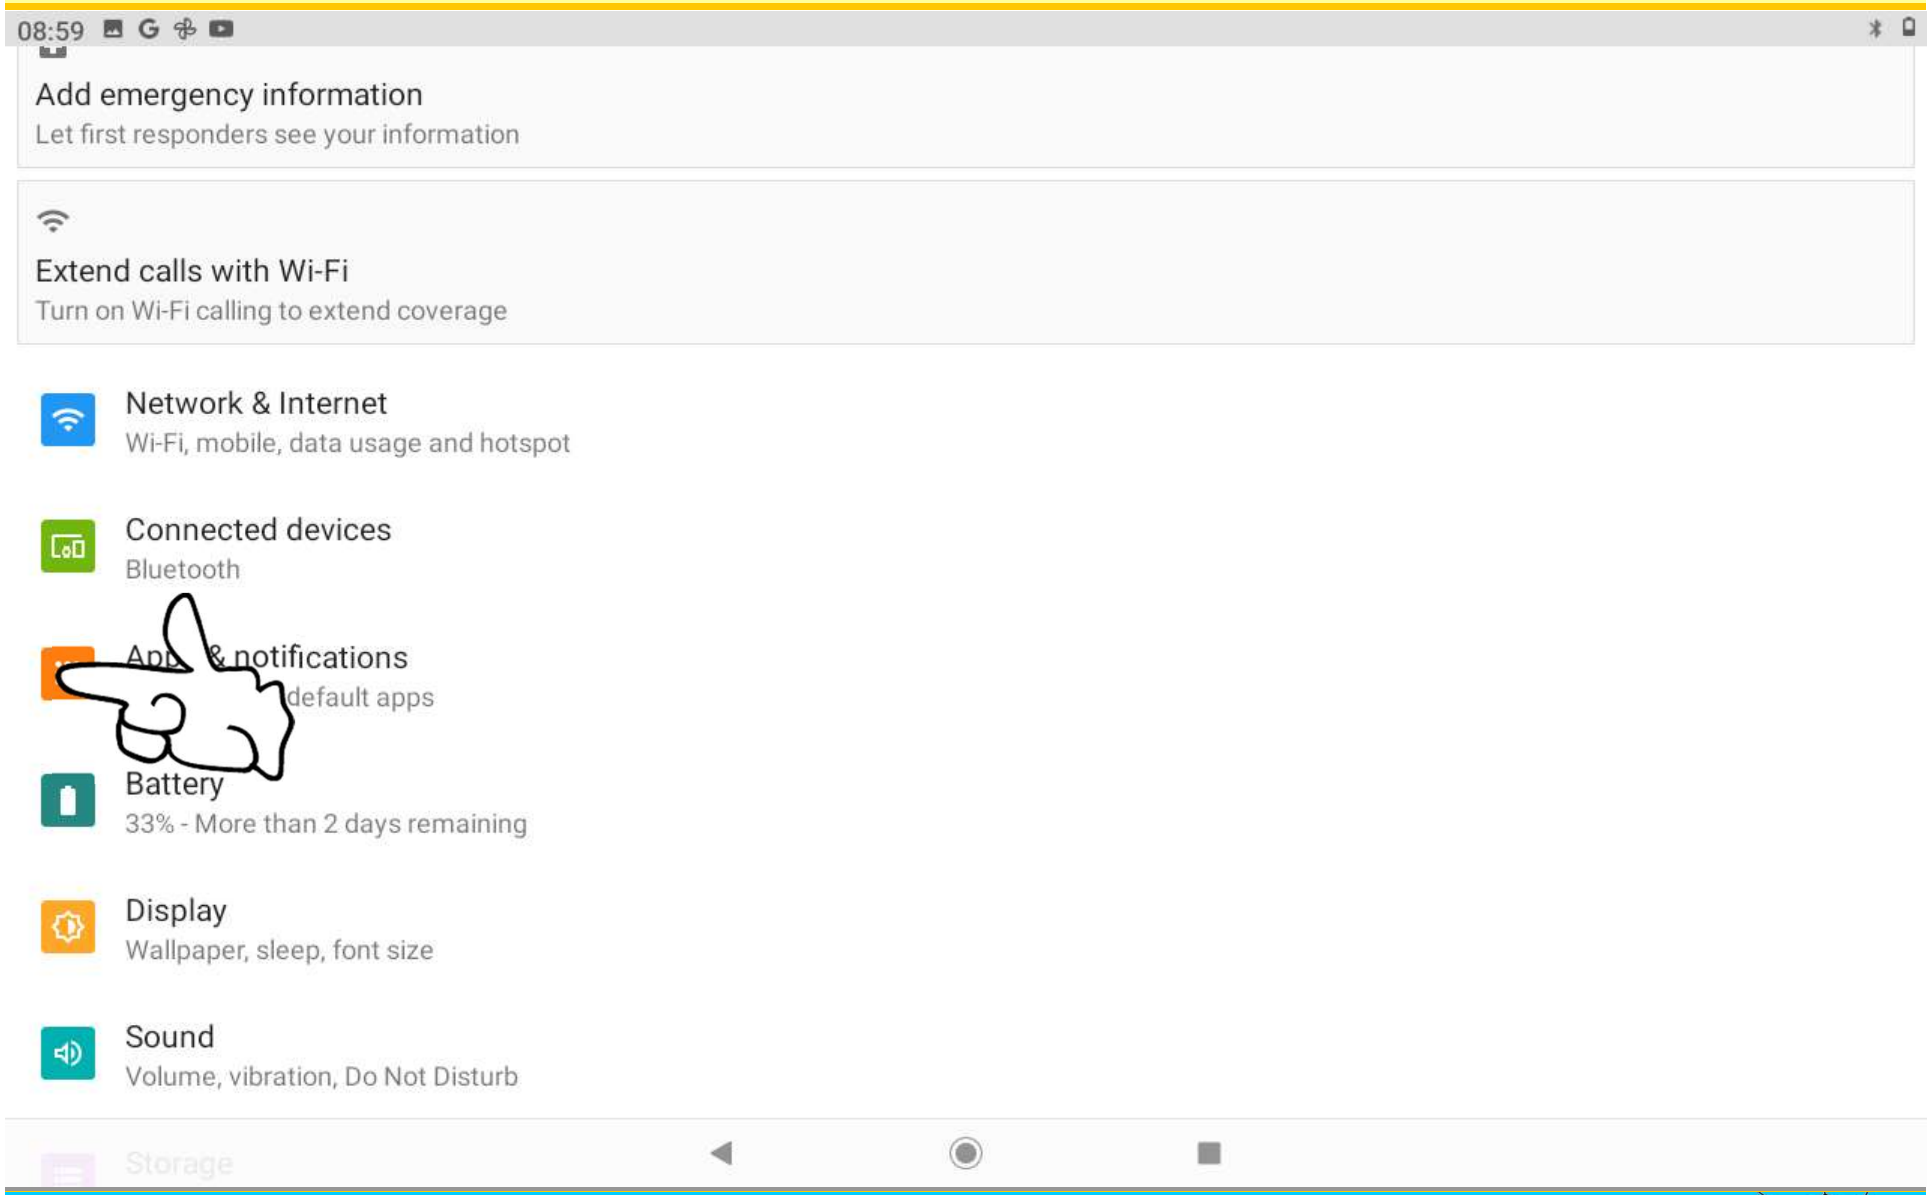

Let us connect you

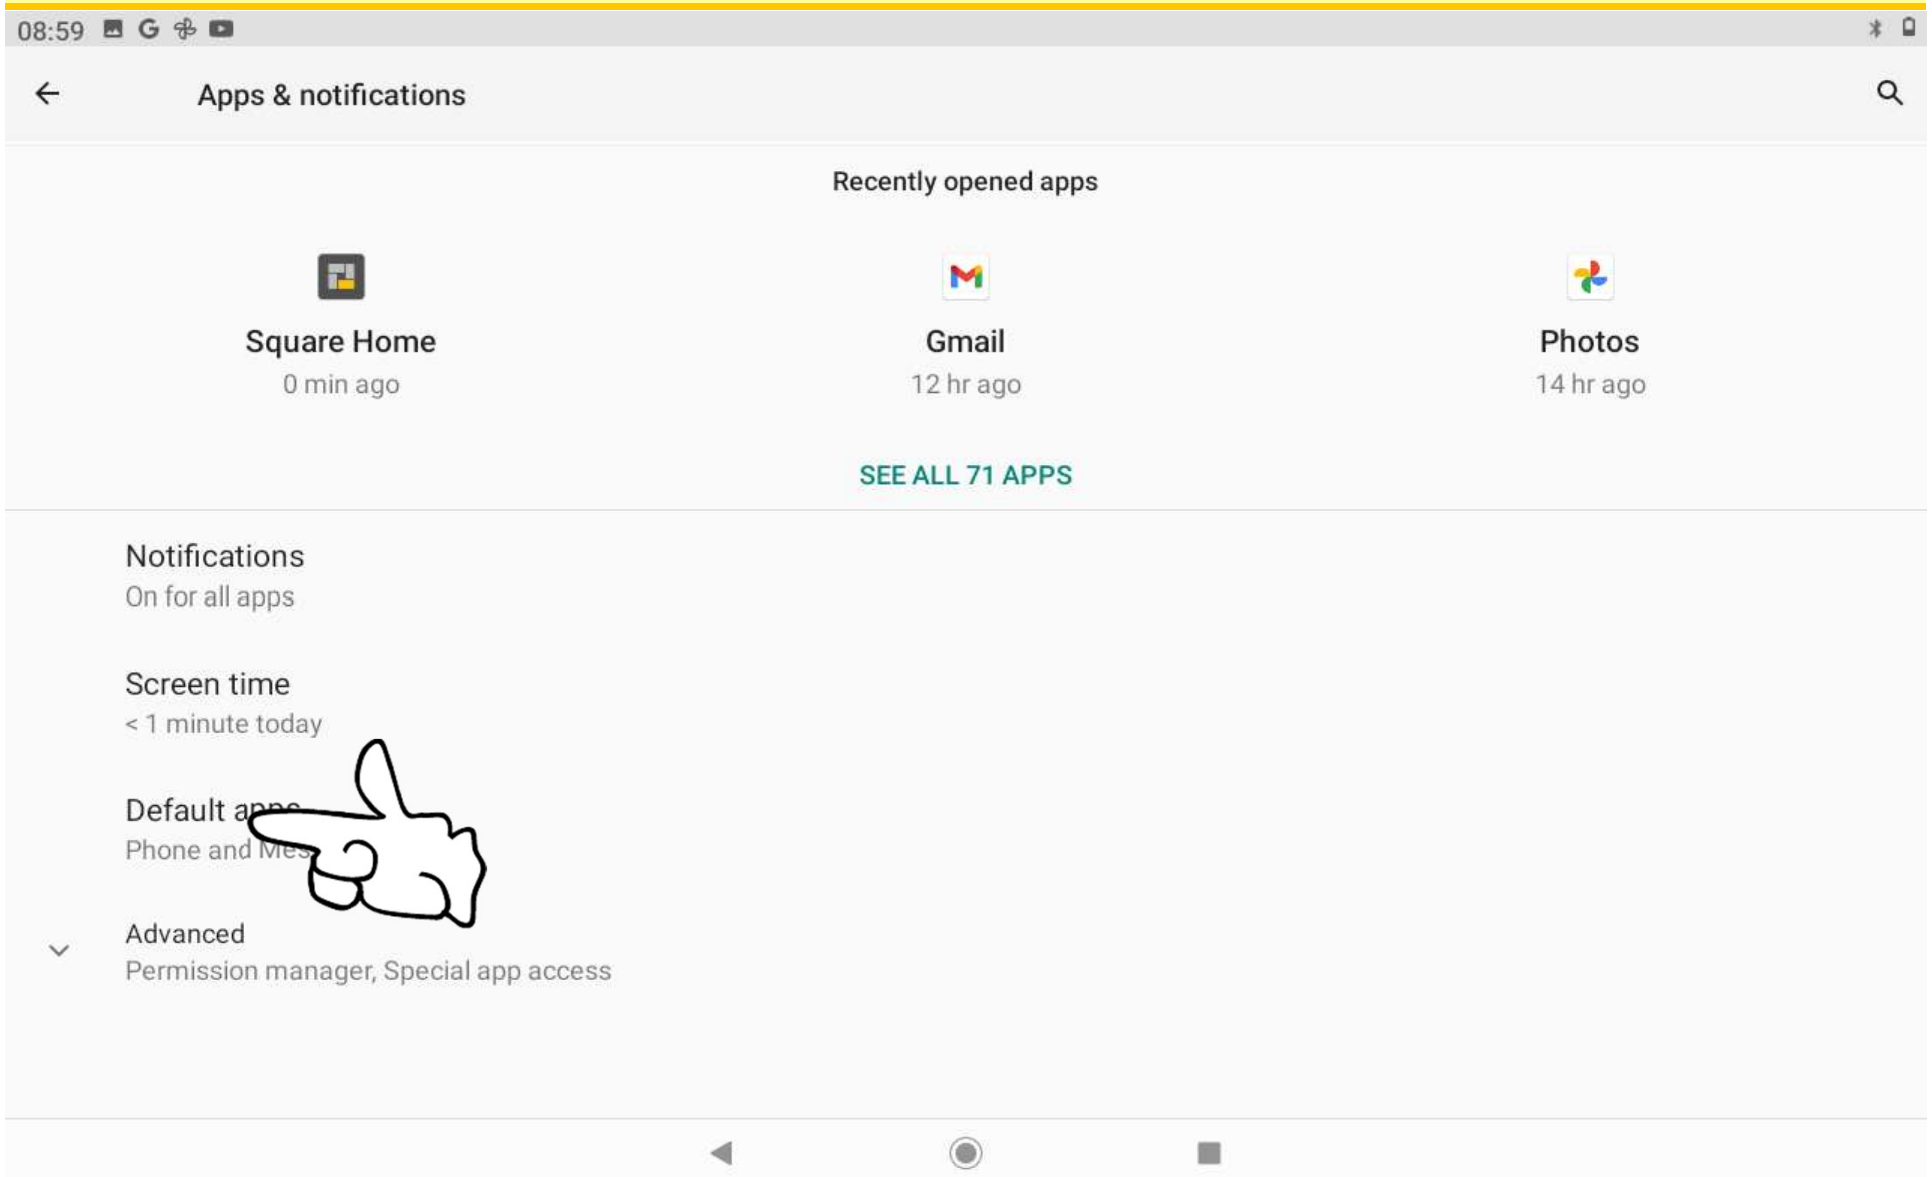

Let us connect you

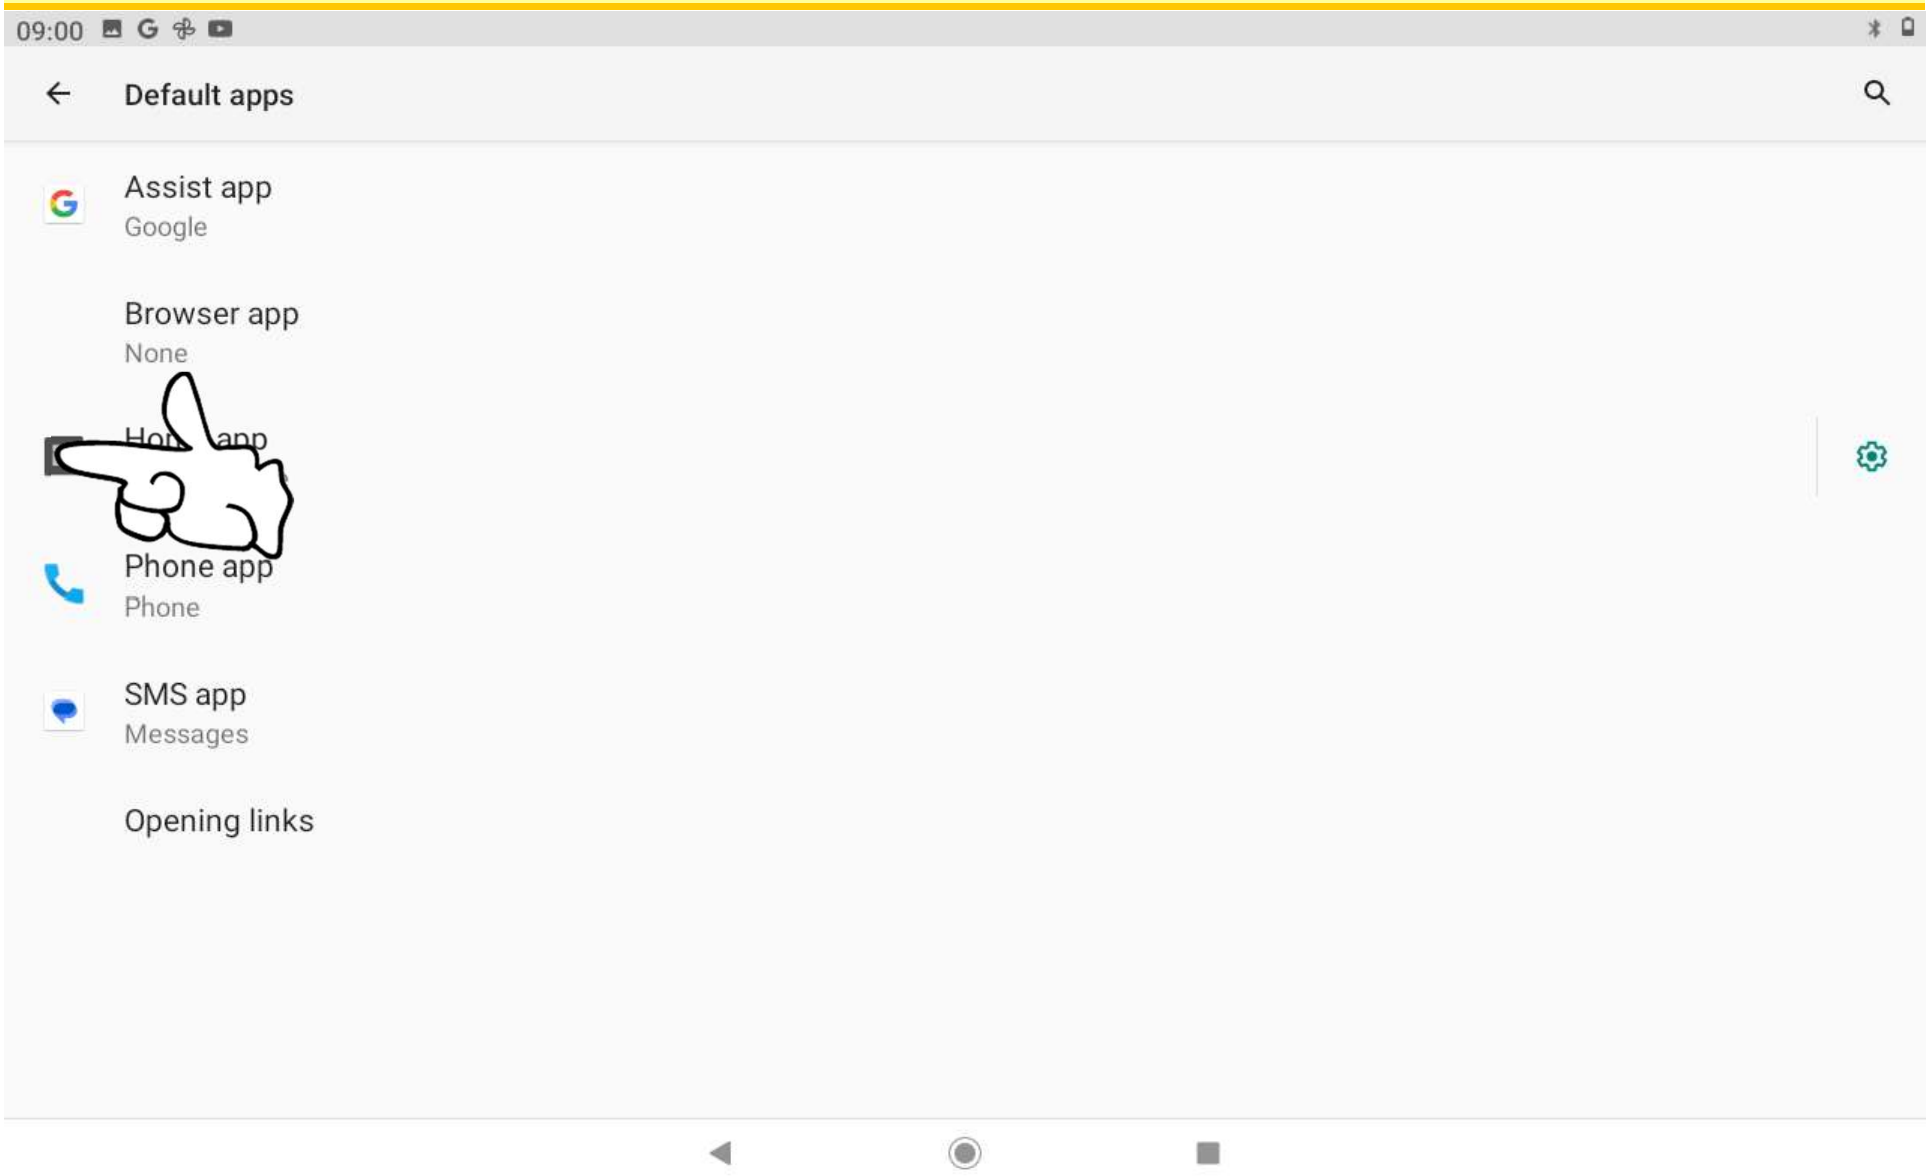

Let us connect you

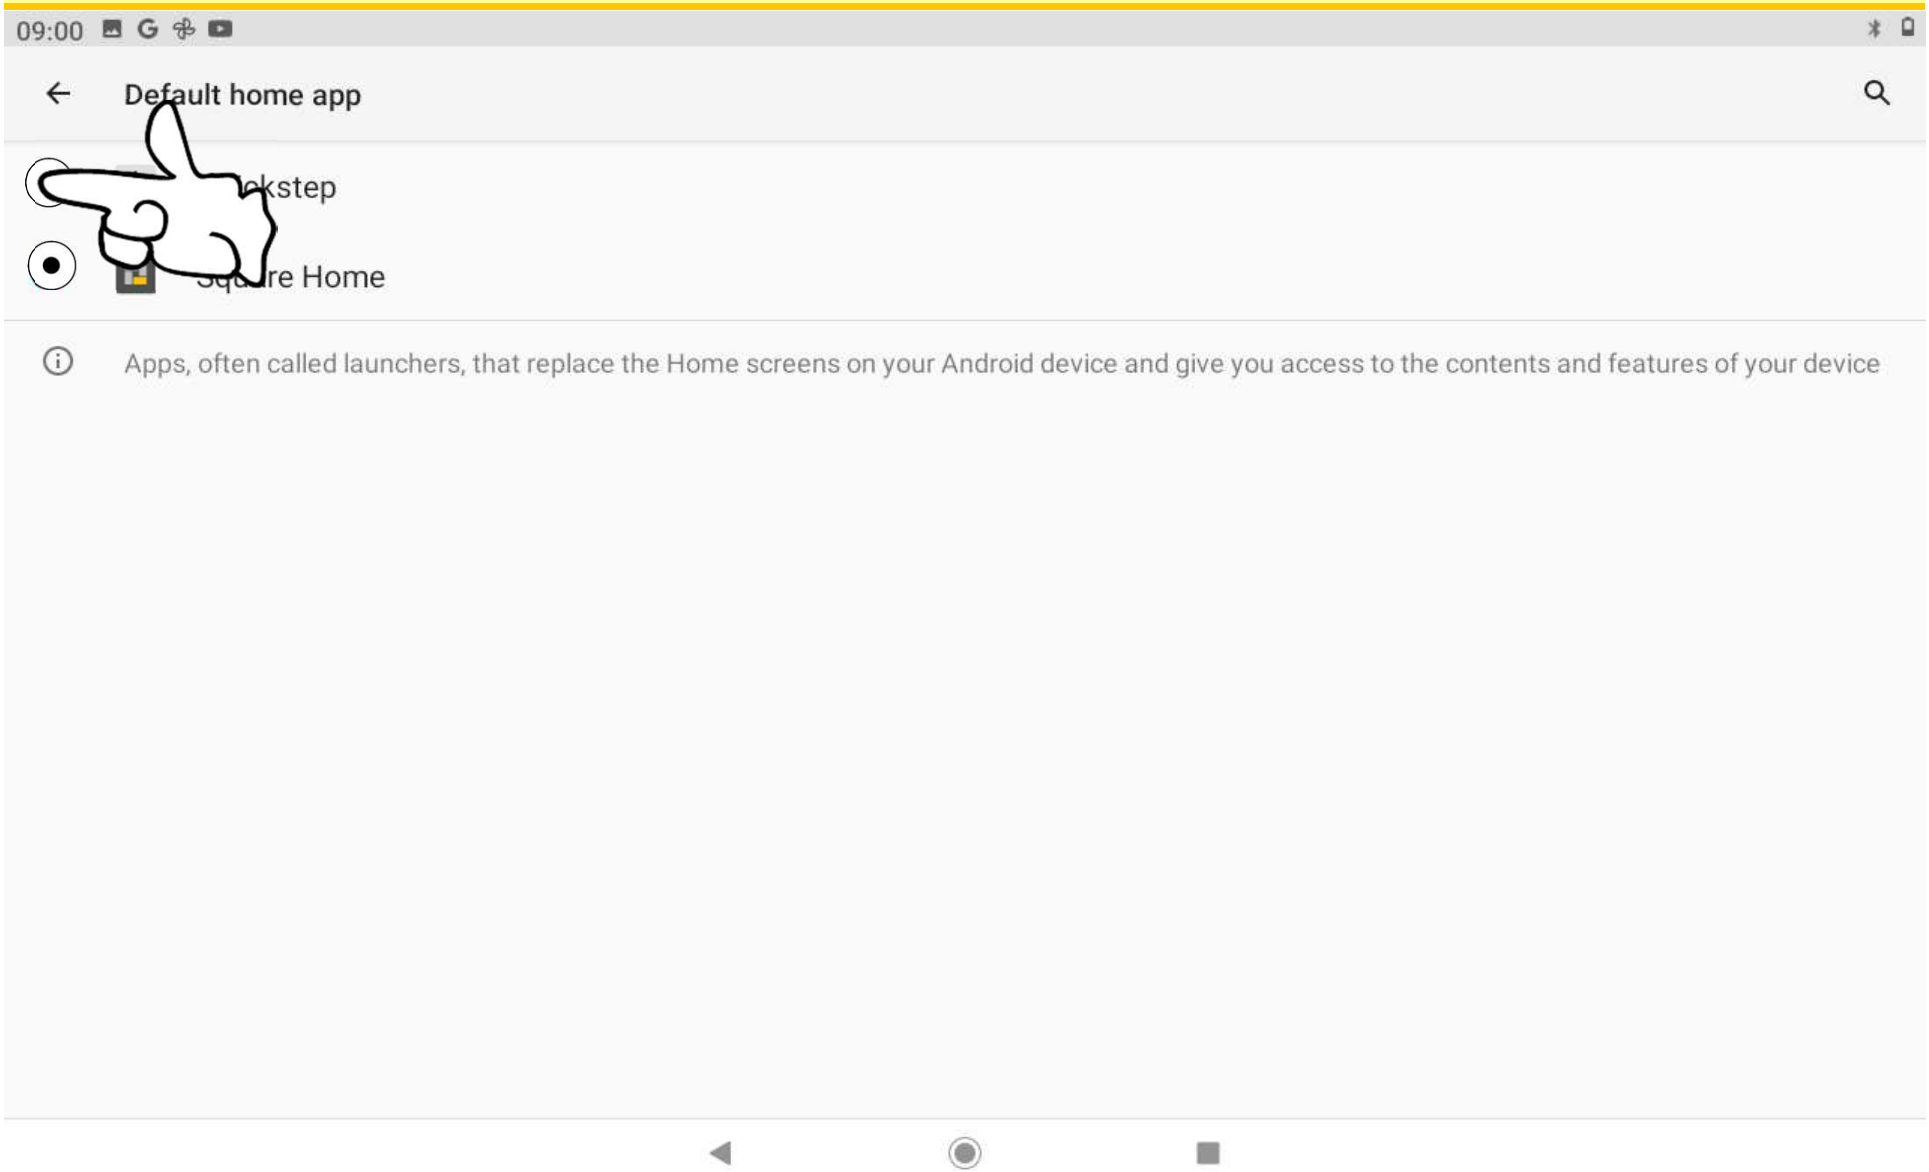

Let us connect you

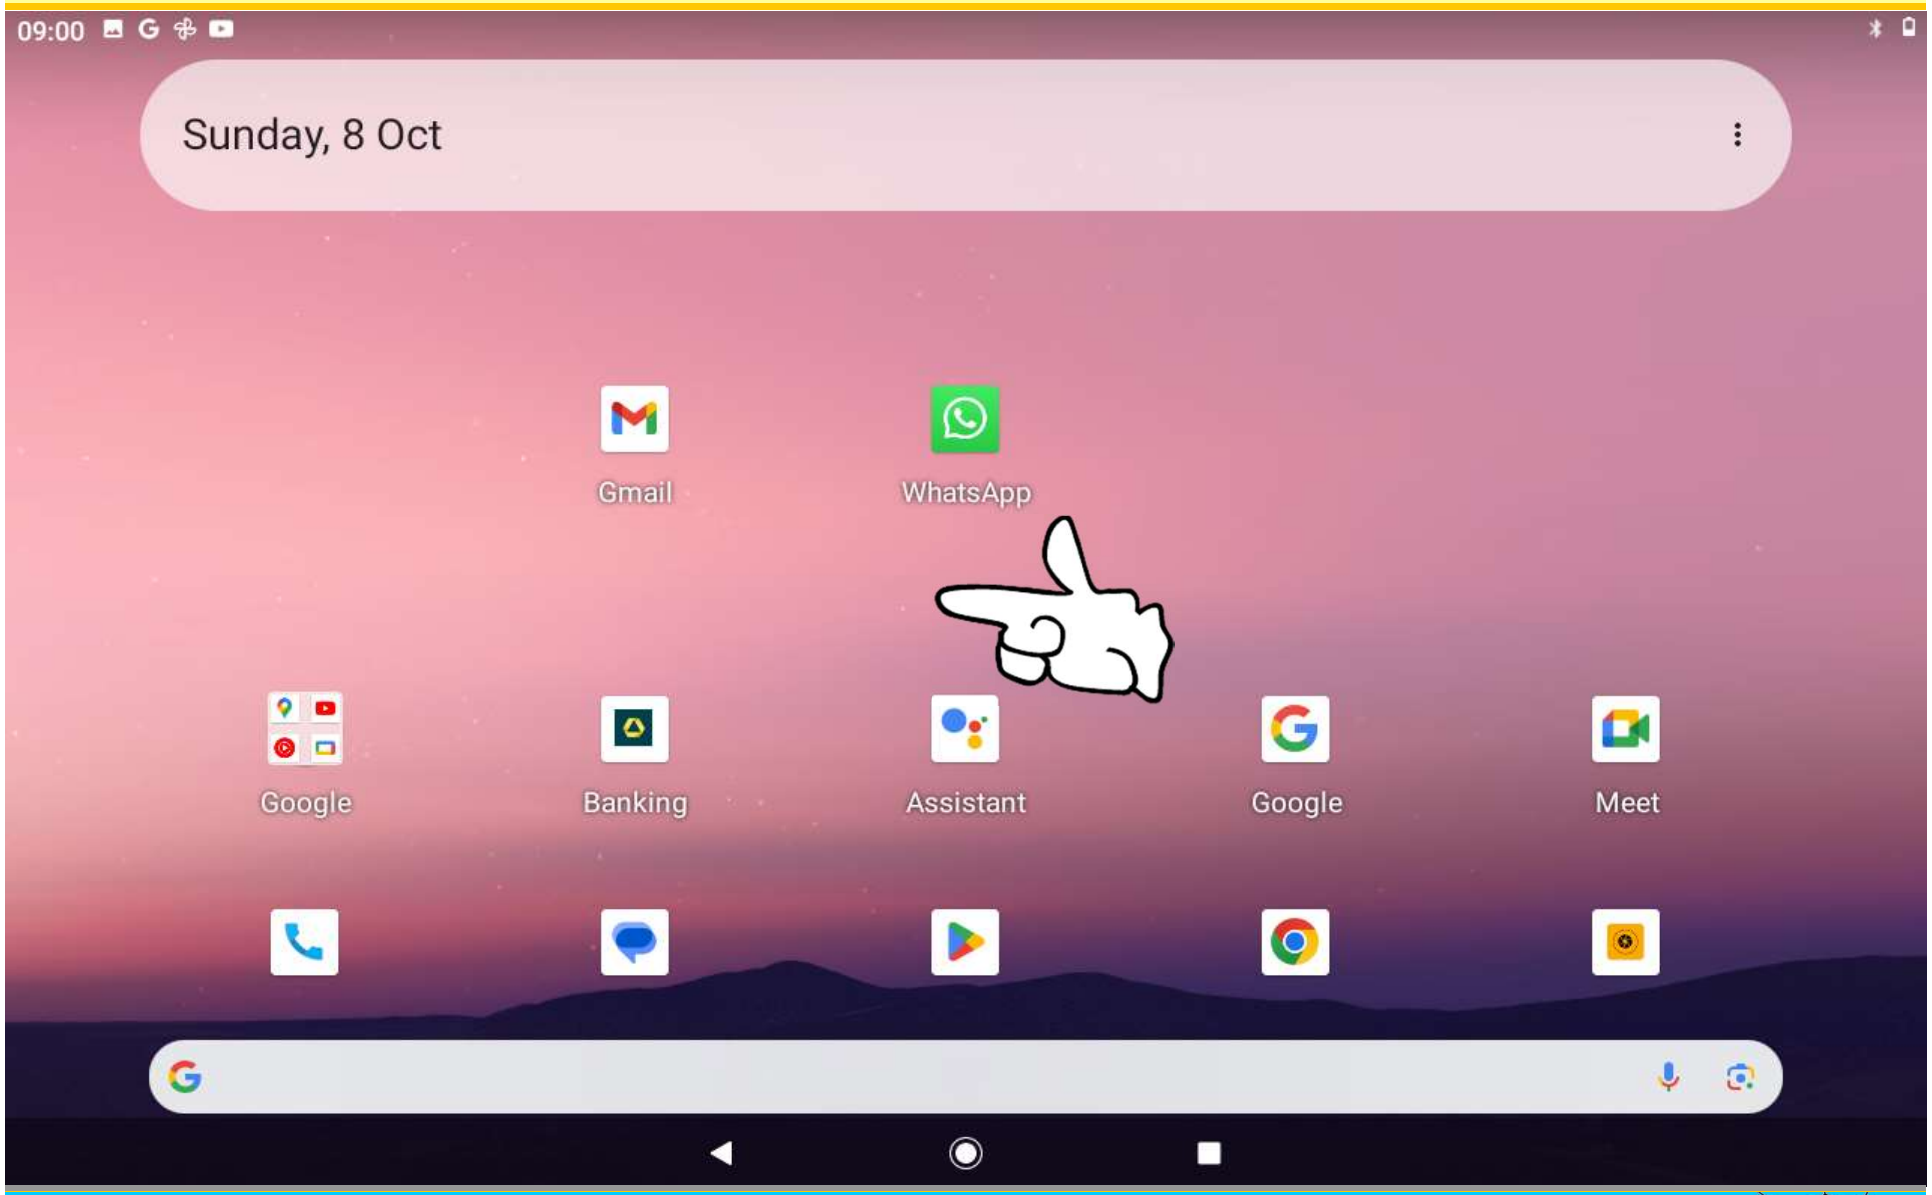

Let us connect you

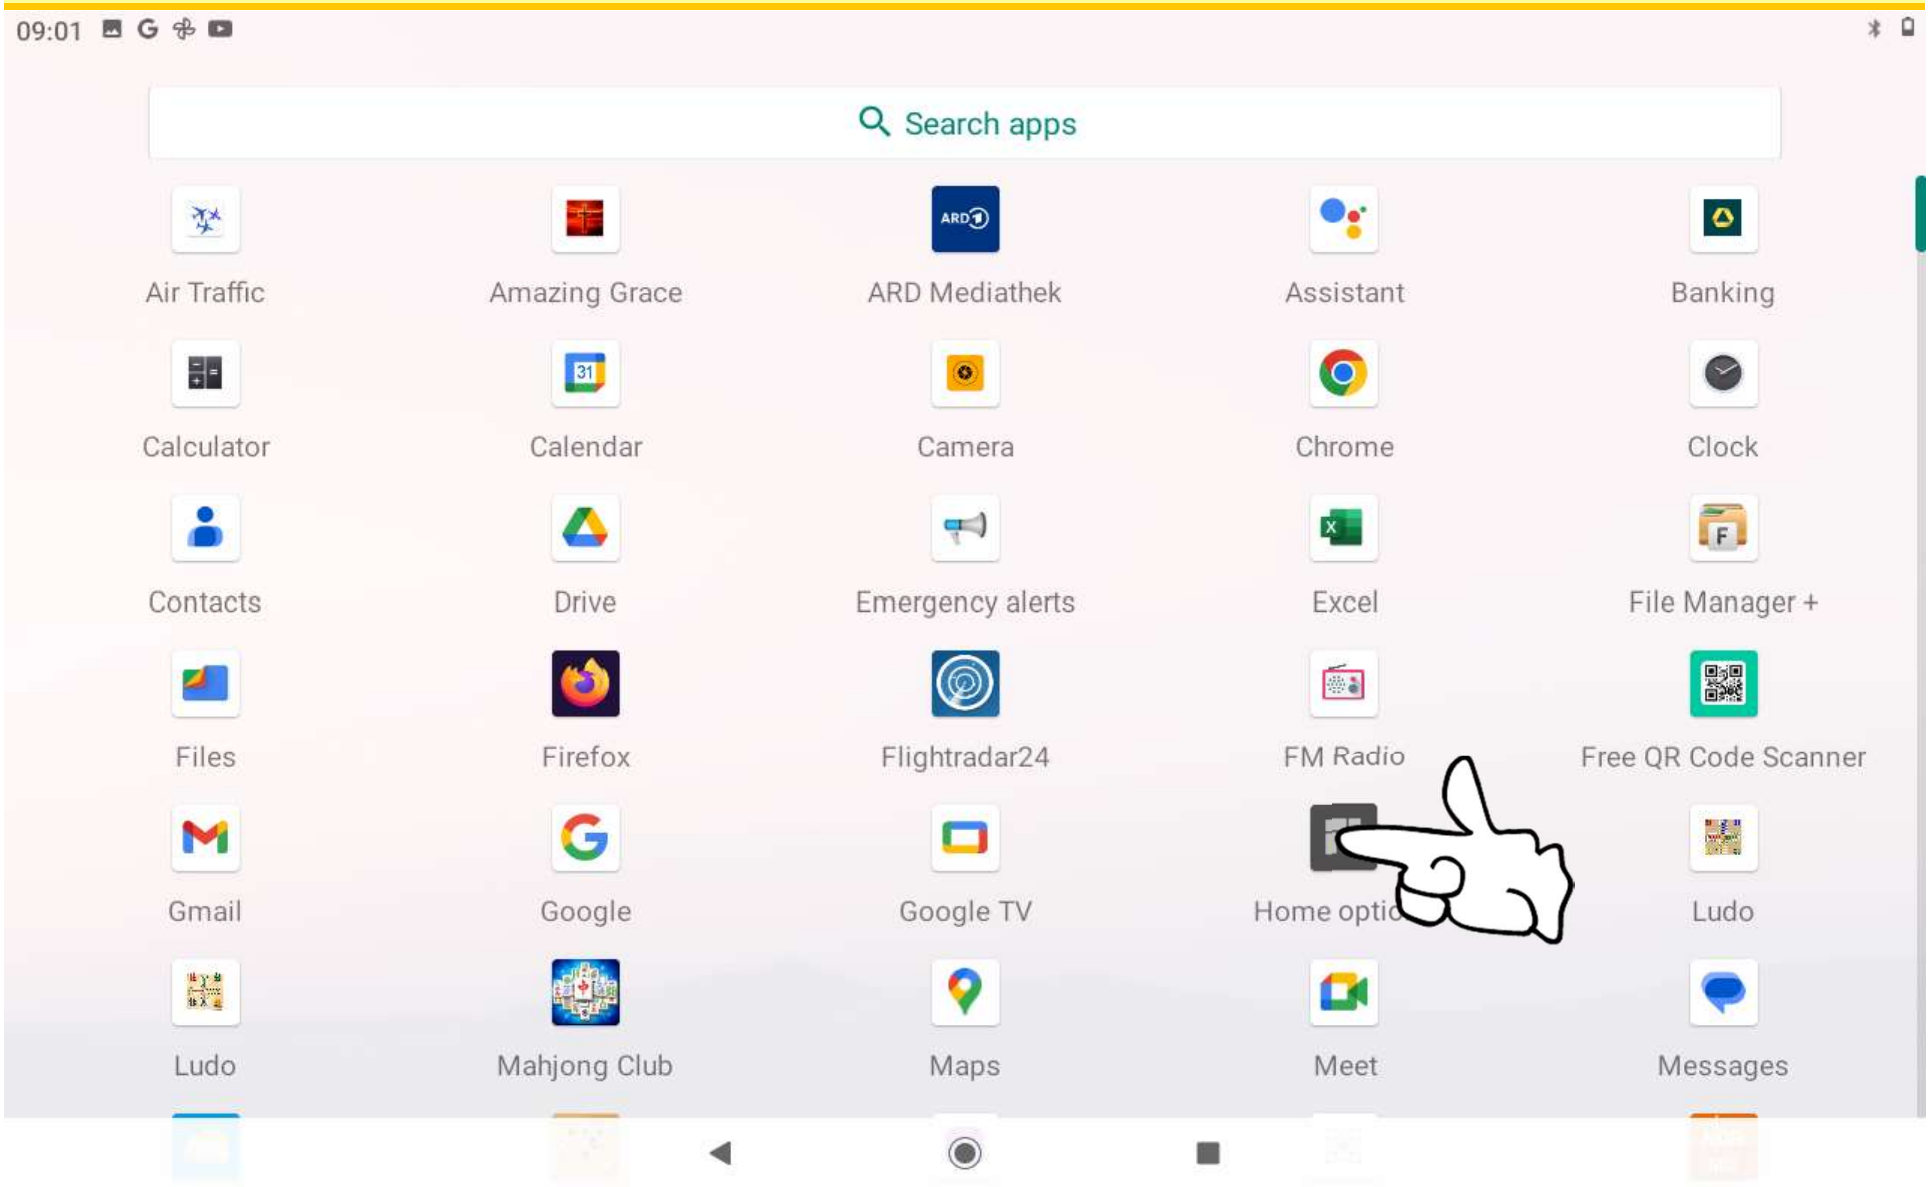

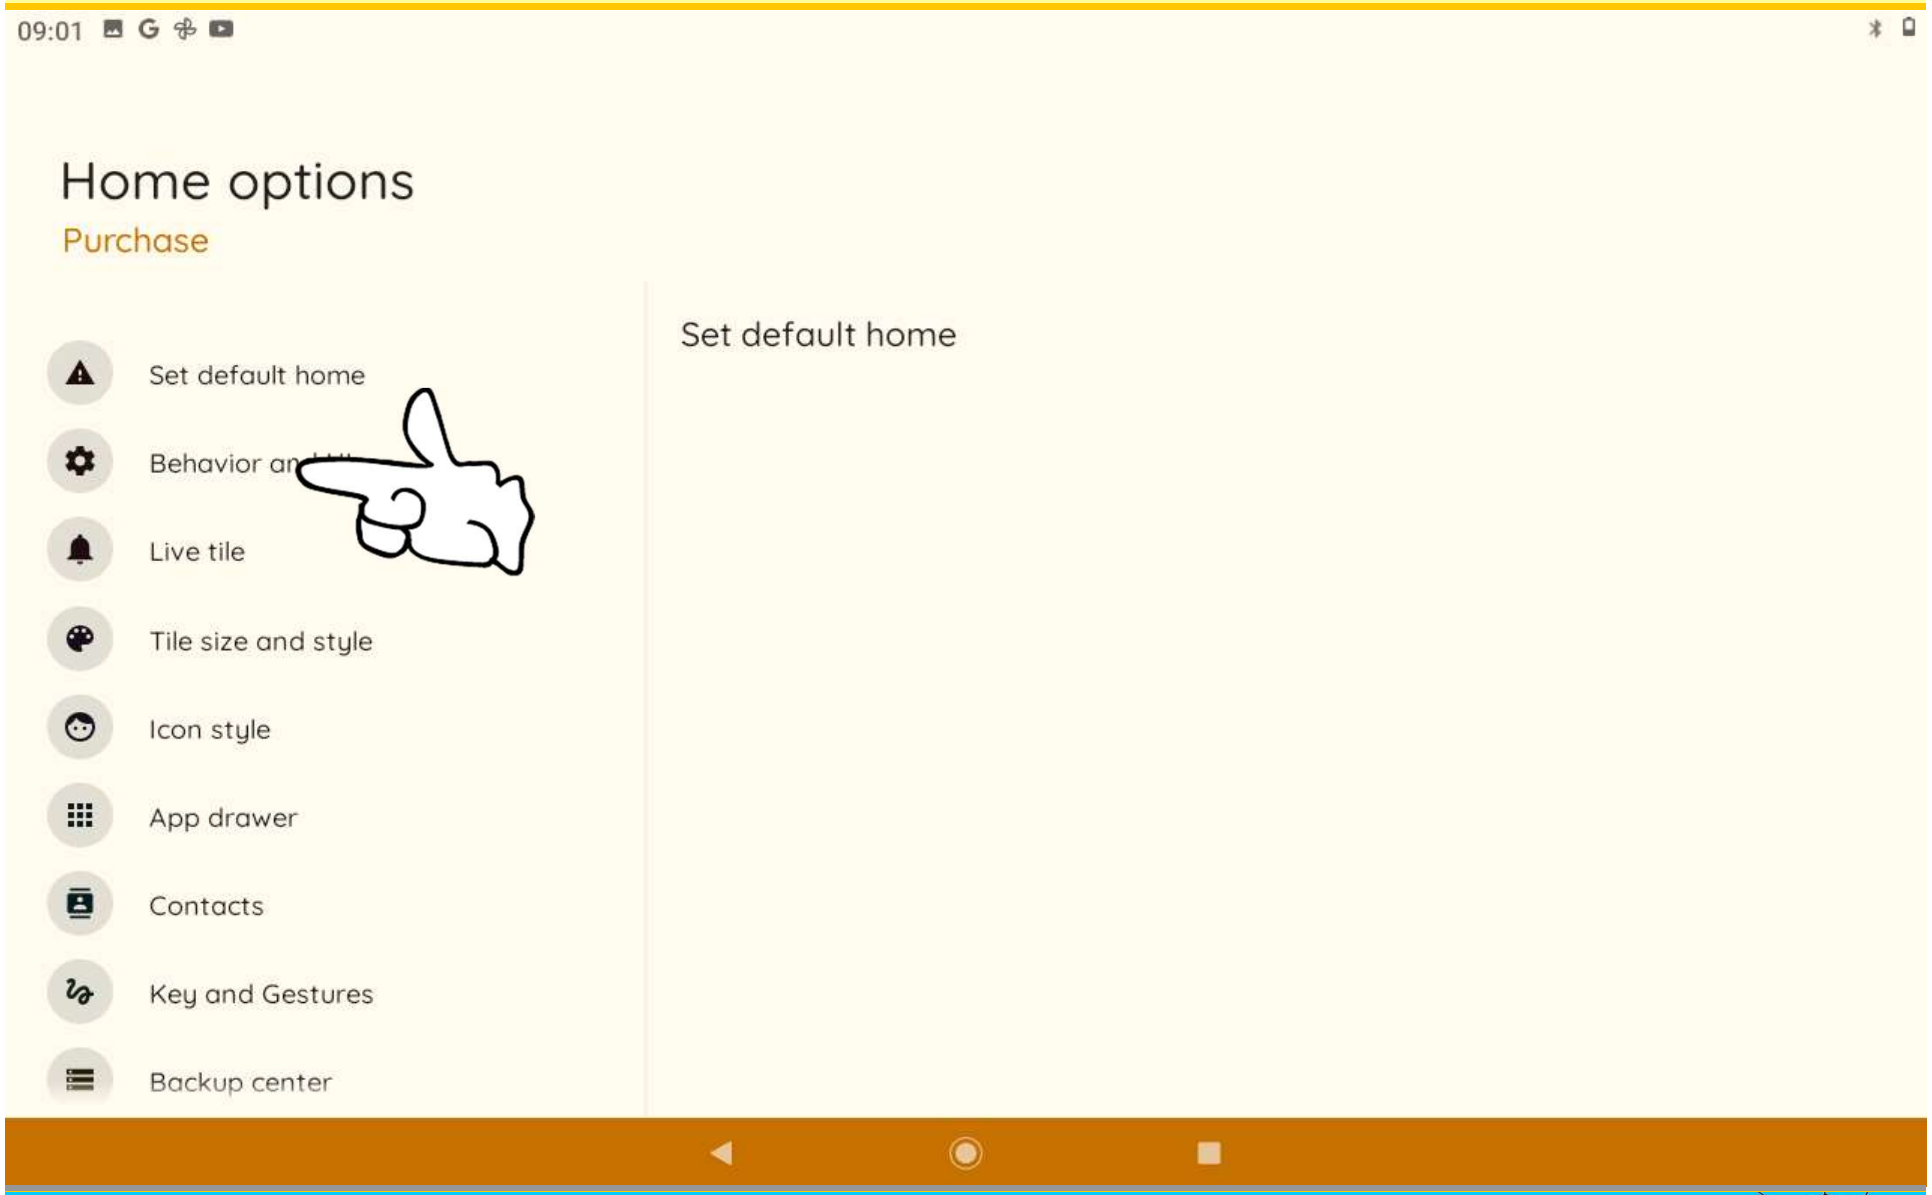
09:01
Home options
Purchase
Set default home
Set default home
Behavior an
Live tile
Tile size and style
Icon style
App drawer
Contacts
Key and Gestures
Backup center

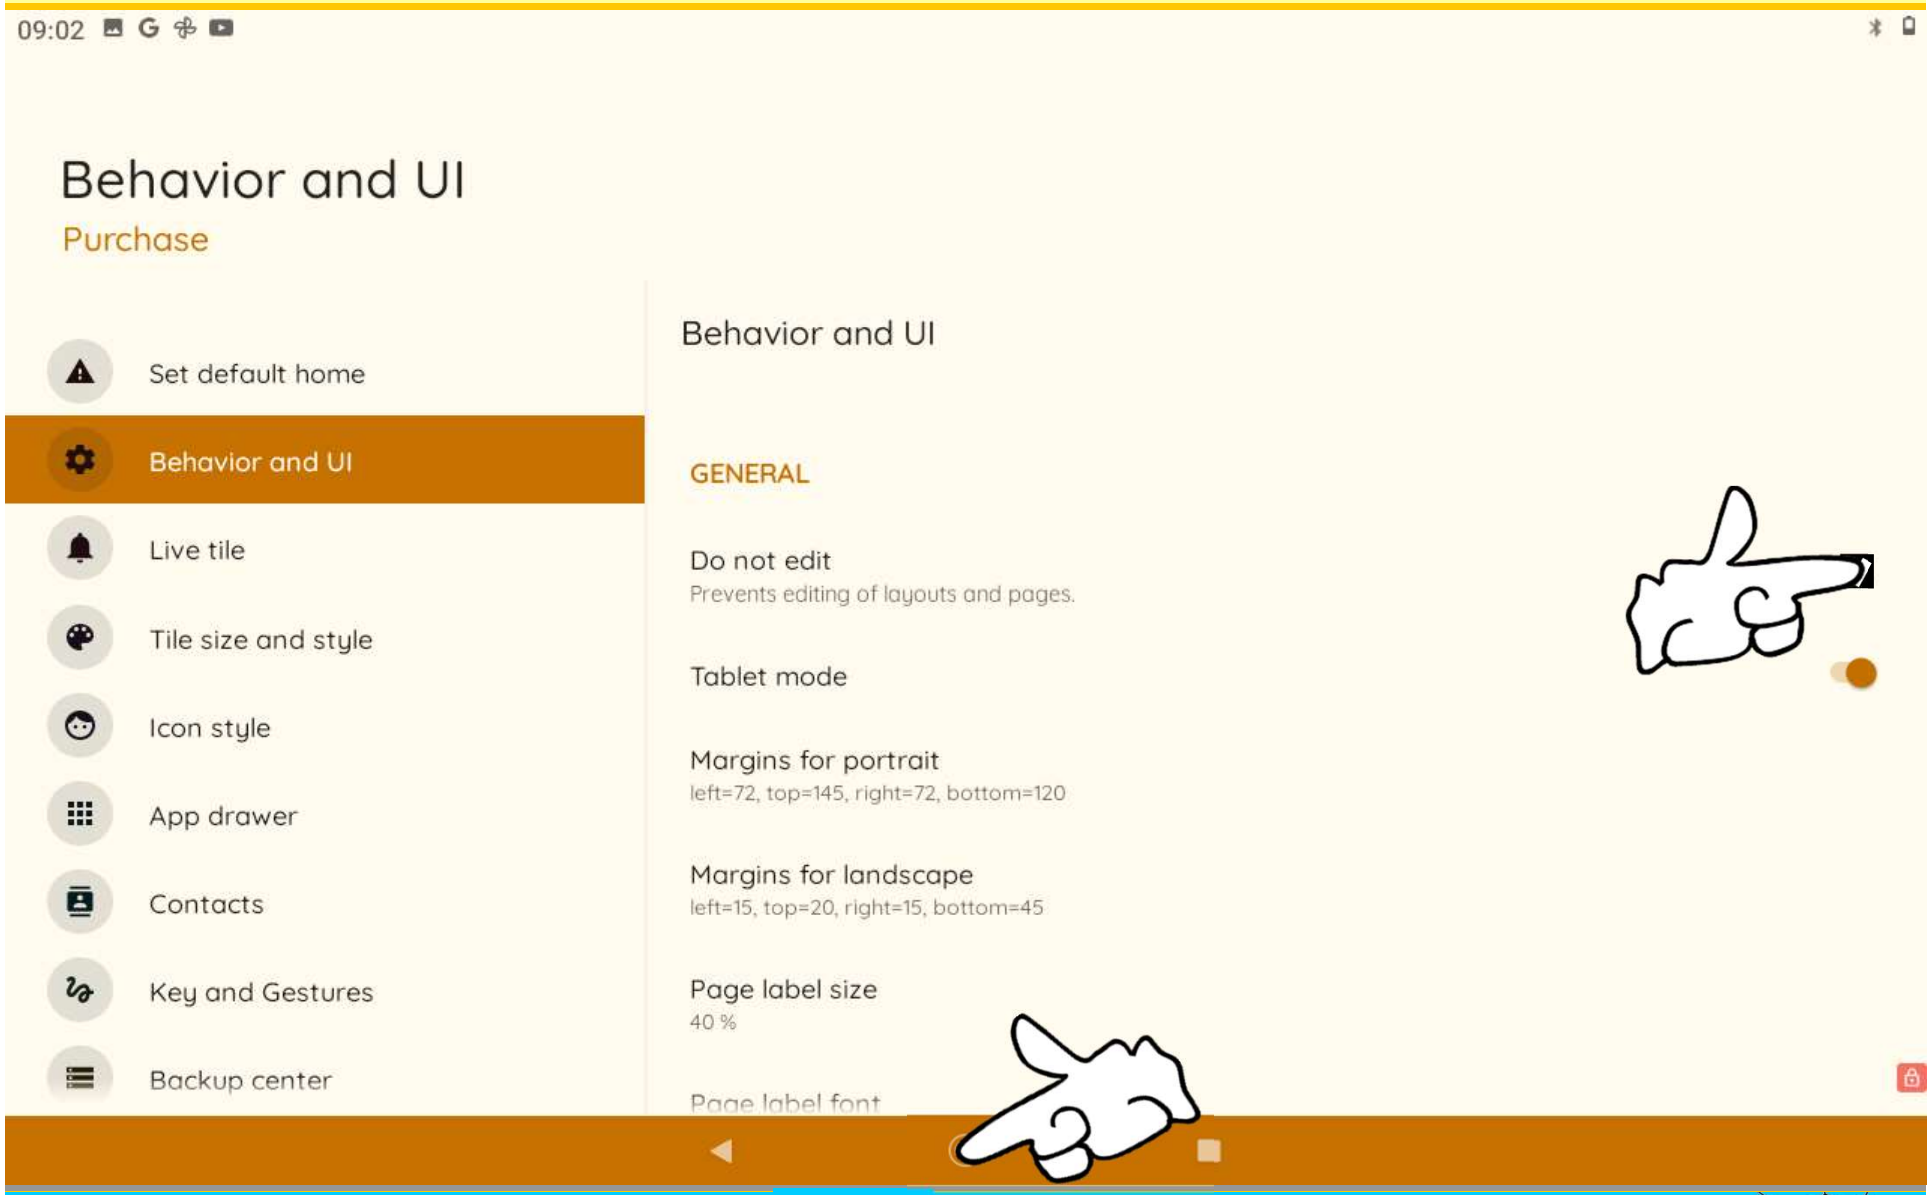
09:02
Behavior and UI
Purchase
Set default home
Behavior and UI
Live tile
Tile size and style
Icon style
App drawer
Contacts
Key and Gestures
Backup center
Behavior and UI
GENERAL
Do not edit
Prevents editing of layouts and pages.
Tablet mode
Margins for portrait
left=72, top=145, right=72, bottom=120
Margins for landscape
left=15, top=20, right=15, bottom=45
Page label size
40 %
Page label font

Let us connect you

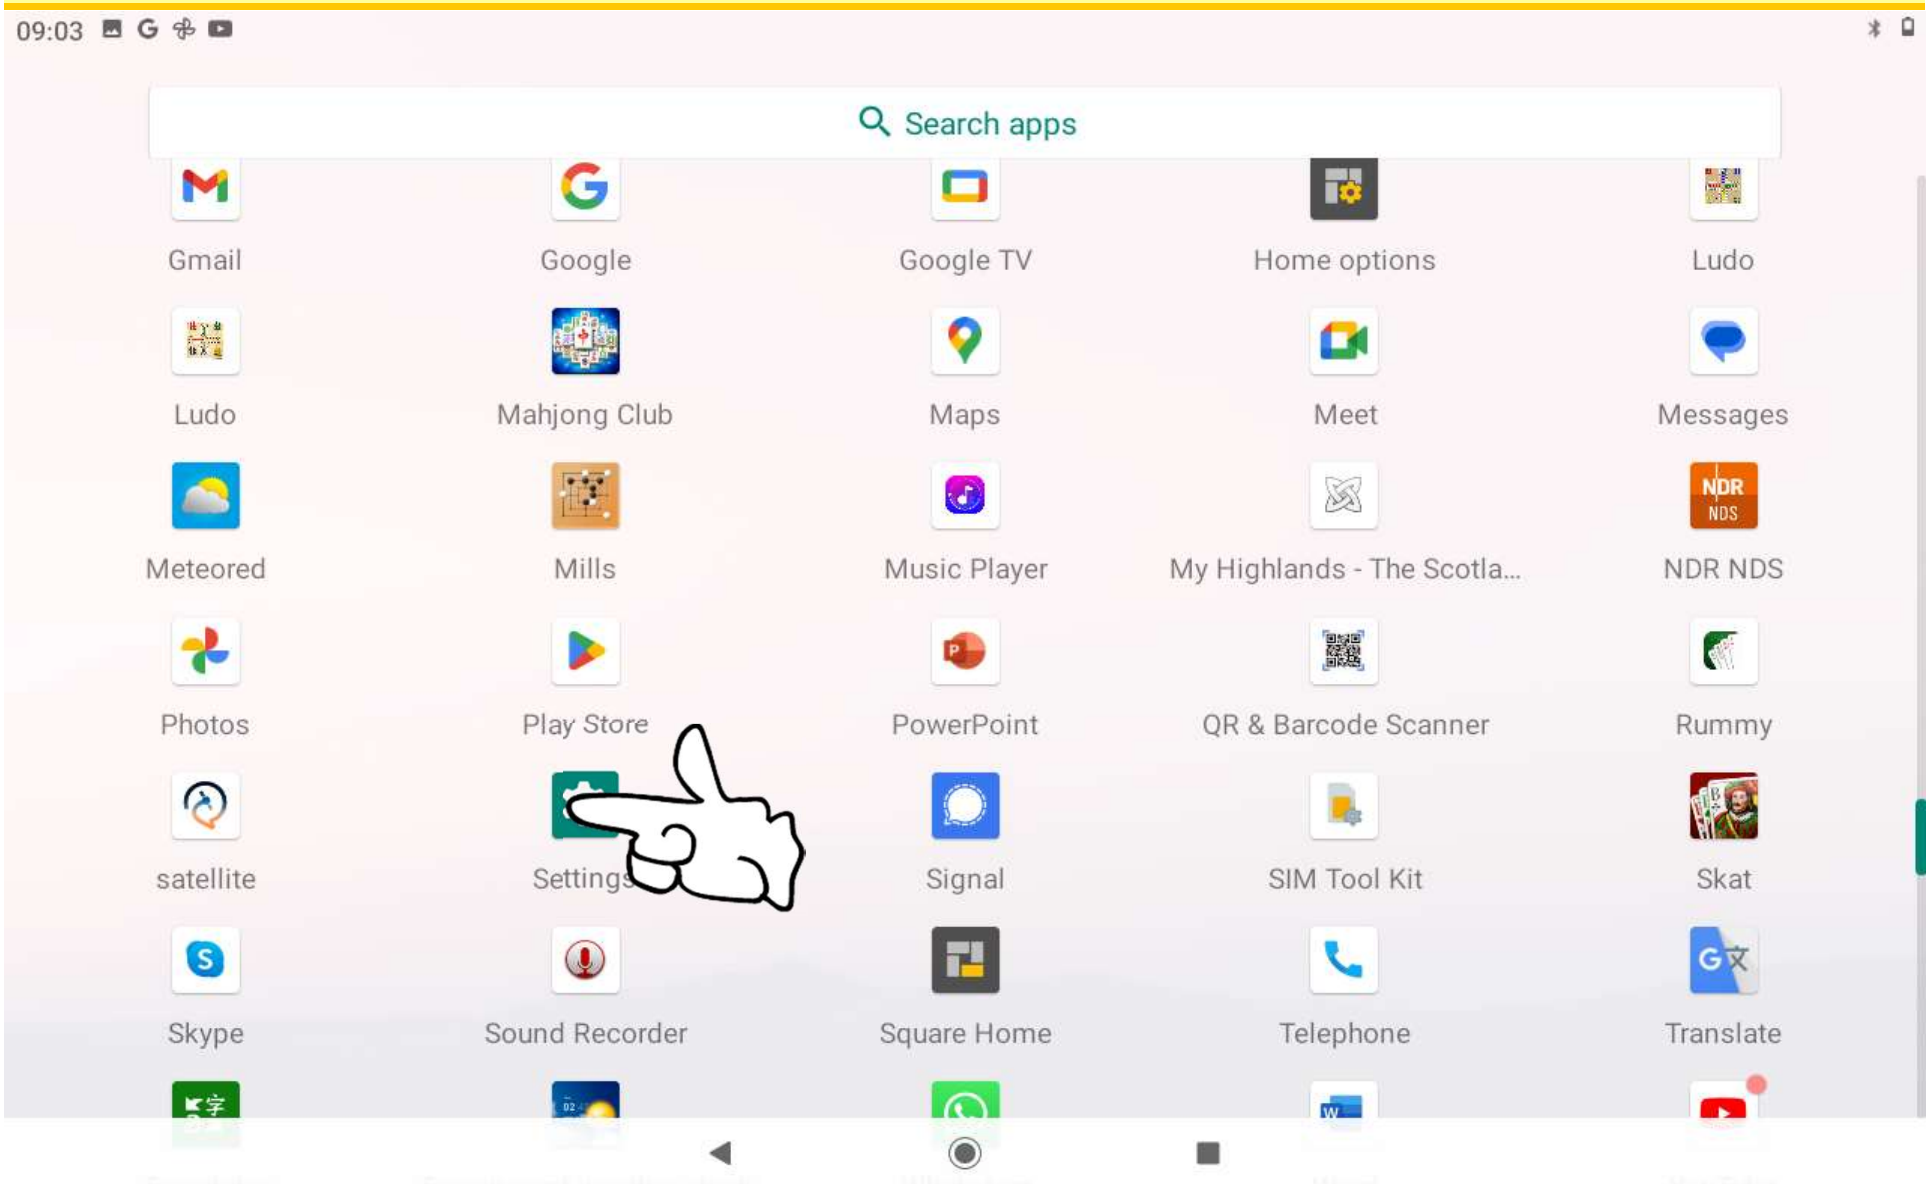

Let us connect you

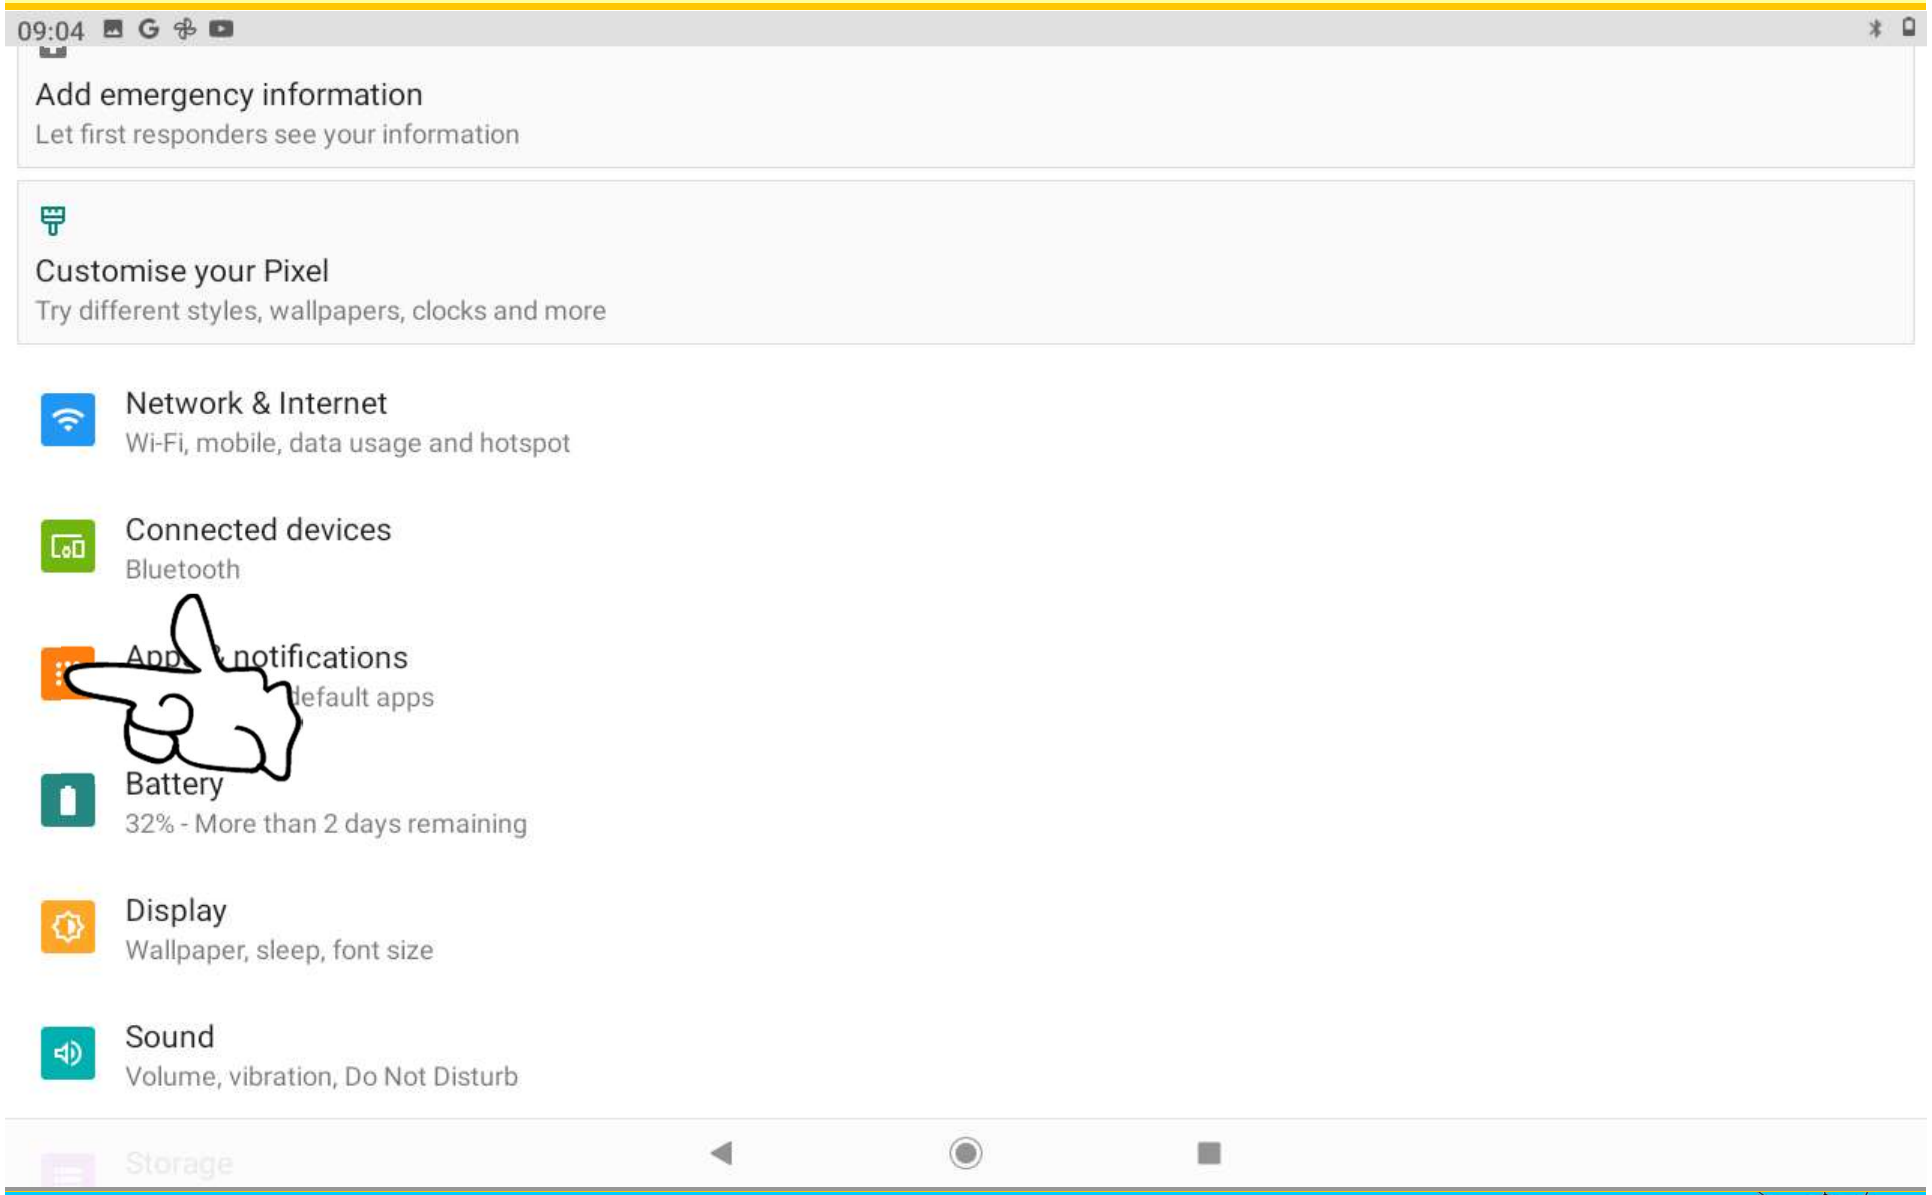

Let us connect you

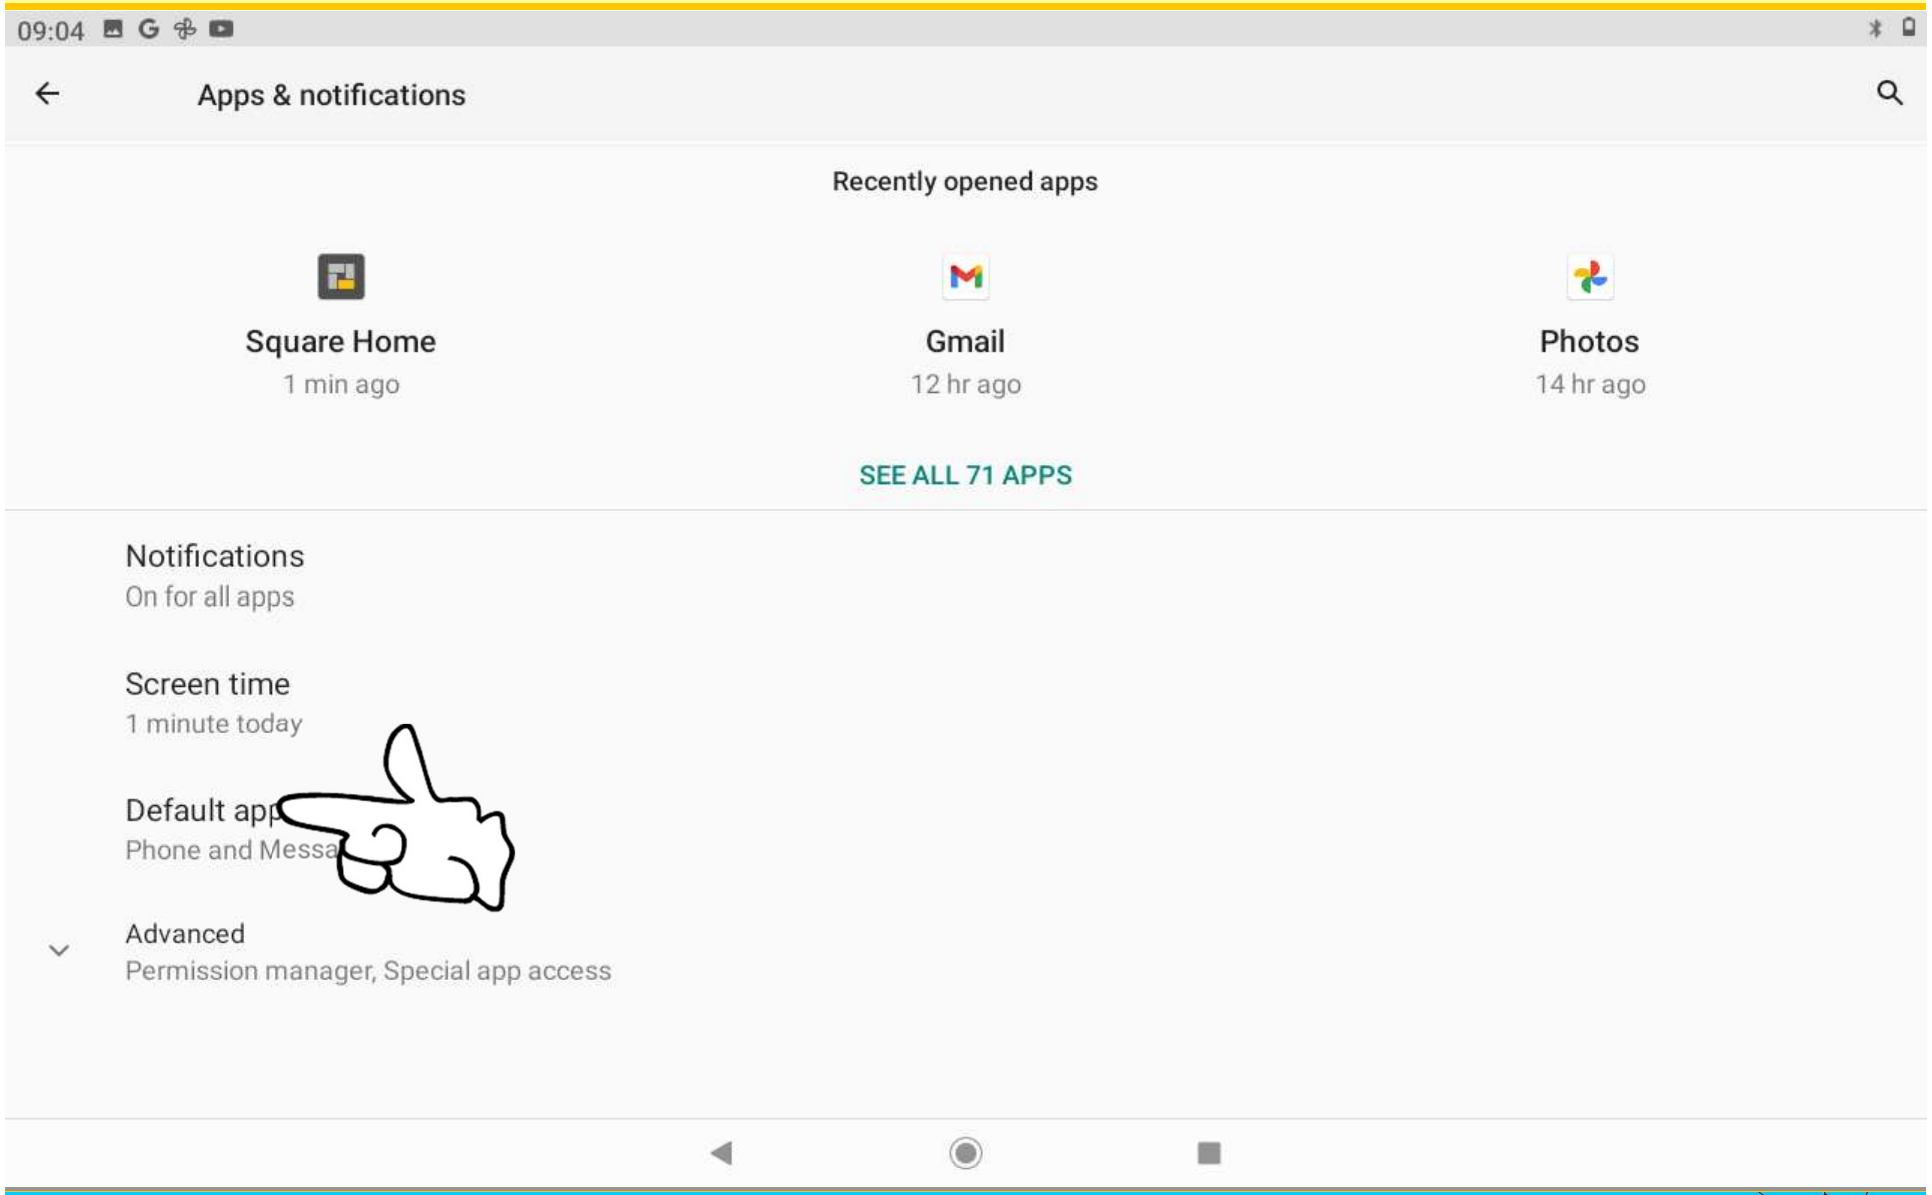

09:00
Default home app
Quickstep
are Home
called launchers, that replace the Home screens on your Android device and give you access to the contents and features of your device

Let us connect you

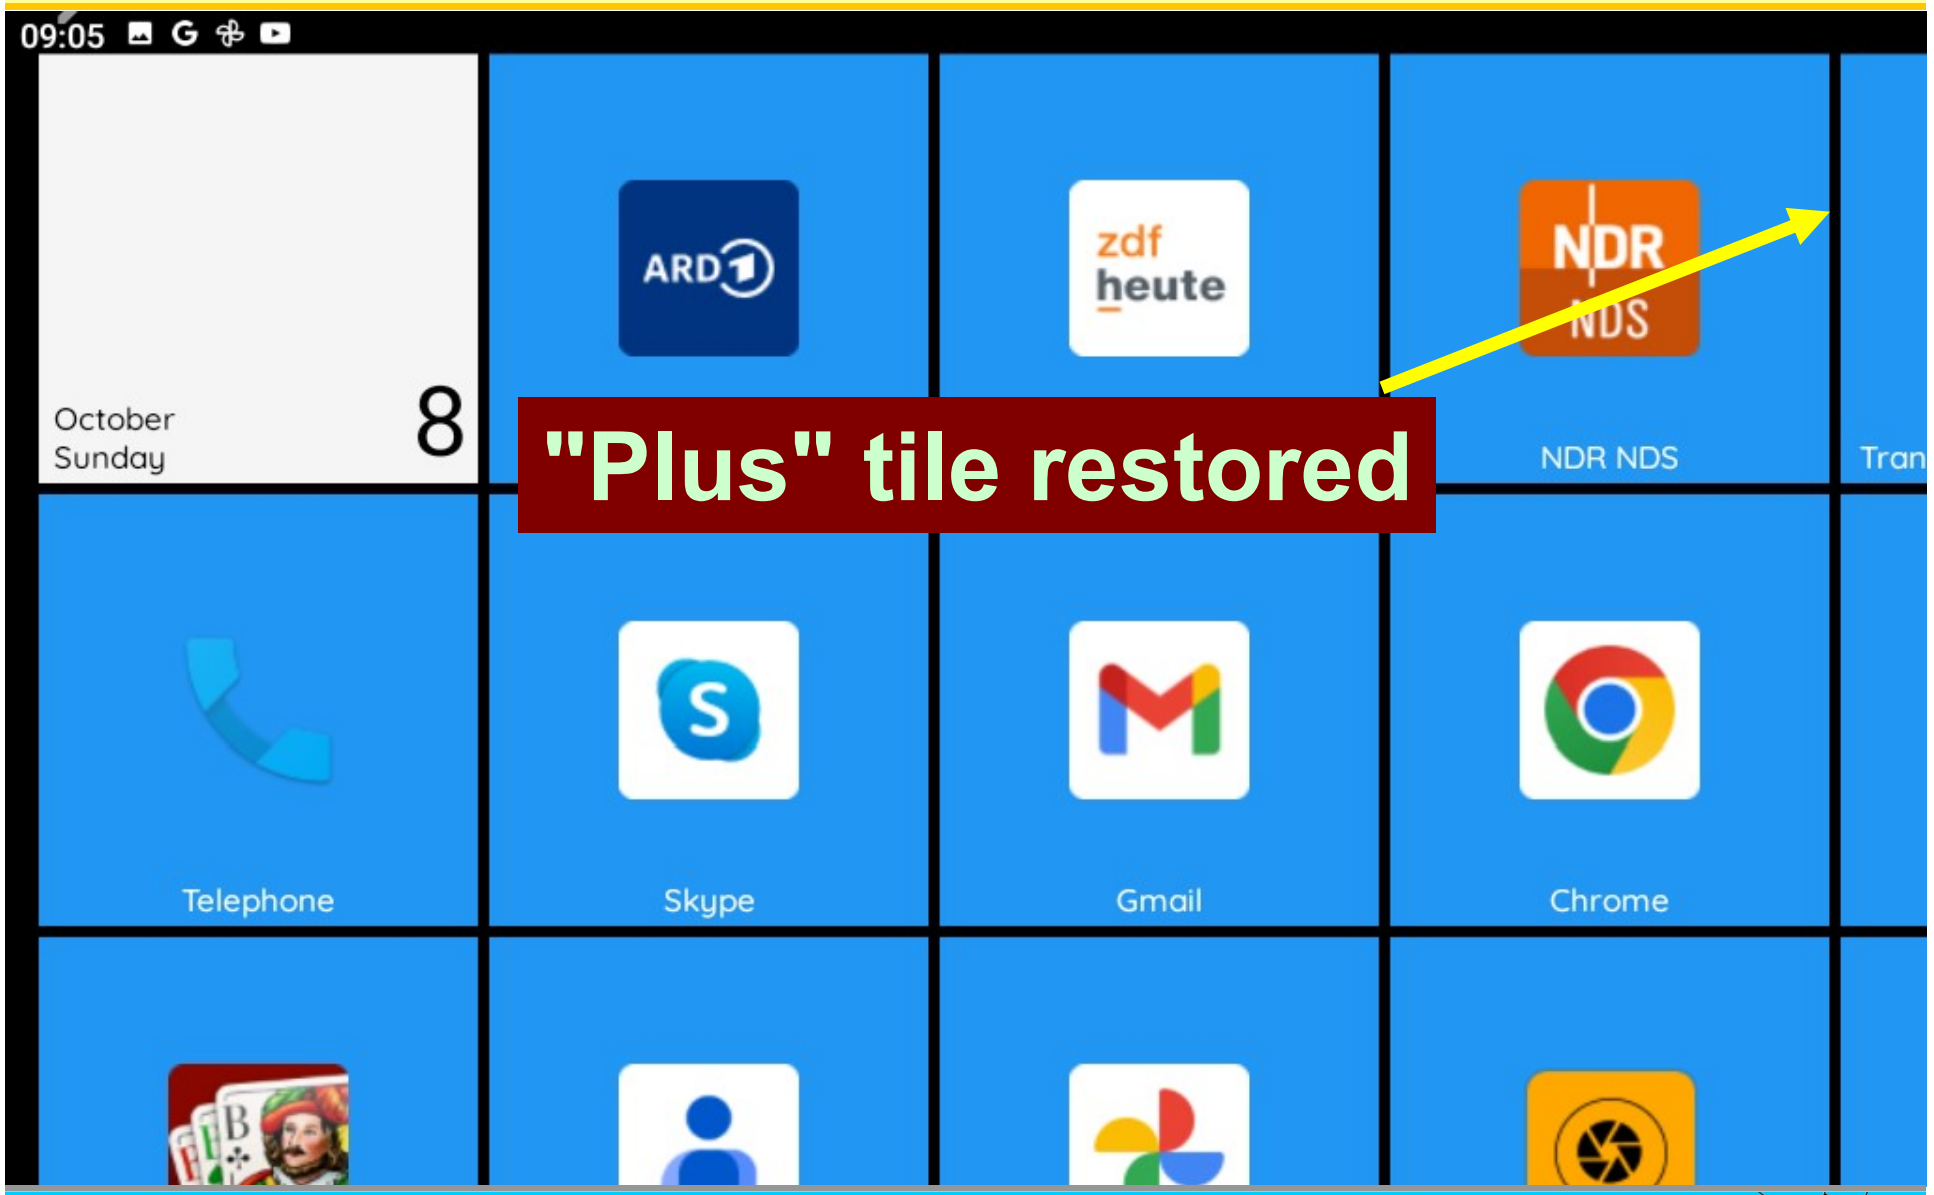

Let us connect you

Done for today